

## 9124722 Service Instruction Installation front doors MDD-3 level

The technician, working on the unit will be fully responsible for abiding the locally prevailing safety rules and regulations.


Technical activities must be performed by qualified and authorized persons only.

Before working on any electrical part, or dismantling the unit by means of using a screwdriver or any other tool, **ALWAYS REMOVE THE POWER PLUG** from the main outlet.



	Door set
MDD-3 60	9380369
MDD-3 90	9380370
MDD-3 120	9380372



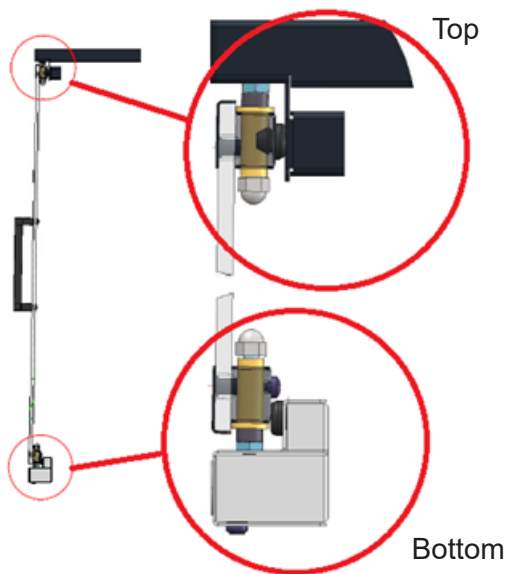

Difference top/bottom  
hinge axis



Depending on variant:

With standard under frame:

Remove front under frame panel (two screws, one on each bottom corner).

Drop-In:



Raise the unit at least 30cm from tabletop level in order to access the screws for the child guard.  
Be careful to support the unit such that no components or connections underneath the base of the unit are damaged while doing so.


### Step 1.
 
#### Remove Child guard:

*Refer service manual chapter replacement and adjustment*


- Remove front panel.
- Loosen mounting screws (3x depending on unit length) of child guard. *Screwed from underneath.*
- Remove child guard
- Position under beam on place of child guard
- Fasten mounting screws.

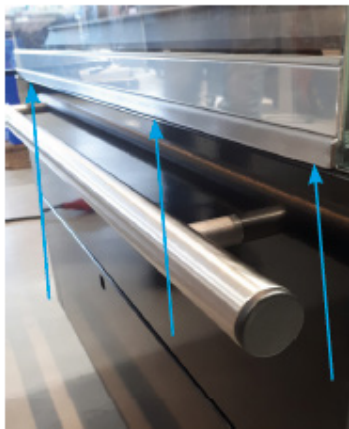

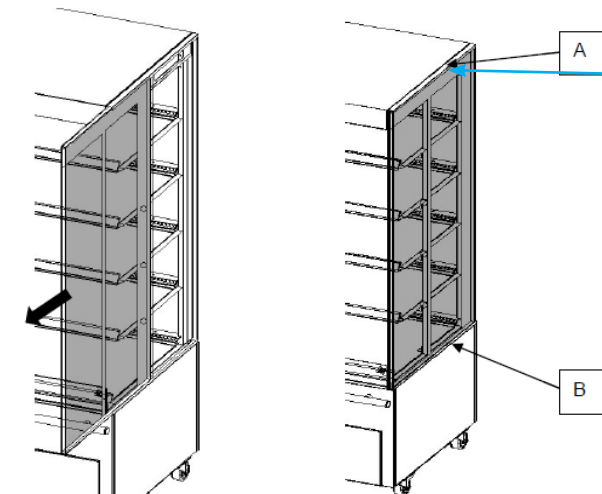


**CAUTION:**

Once past the top guide, the glass pane might fall if not properly held.  
Hence do not leave it standing upright without being supported by both guide rails or holding it.

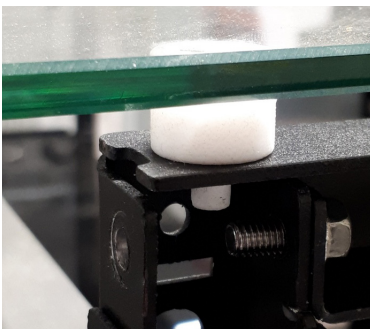

HOT

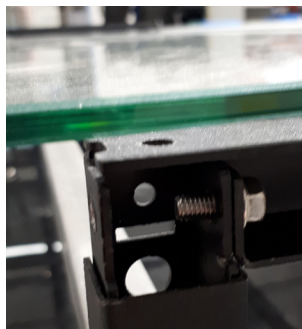

COLD



**Step 2.**

- Remove side glass** both sides:
- Slide the double glass pane towards the front along the top (A) and bottom (B) guiding rails.
- The side pane can be removed from the unit once it has slid entirely past the top guide.

**Step 3.**

- Remove white (or black) stud**, both sides.  
(Black stud is screwed in)

**Step 4.**


- Remove top air guide.**

**Step 5.**

- Remove side glass holder**, left and right.





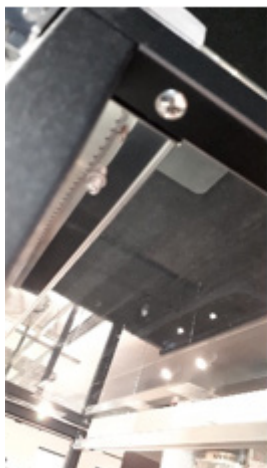


#### Step 6.

- a. **Remove top column cover** by removing last screw. (one each side)

#### Step 7.

- a. **Place new (longer) top column cover(s)/ window support** (two screws).
- b. Mount screws in new top column cover

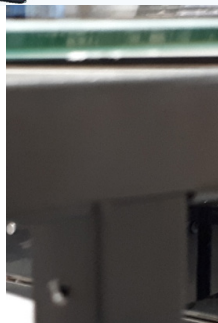

#### Step 8.


- a. **Replace white (or black) stud** removed earlier.

#### Step 9.

- a. **Replace side glass holder** removed earlier.

#### Step 10.

- a. **Place top front beam** in side profiles.  
Slide the beam into the front of the profile.

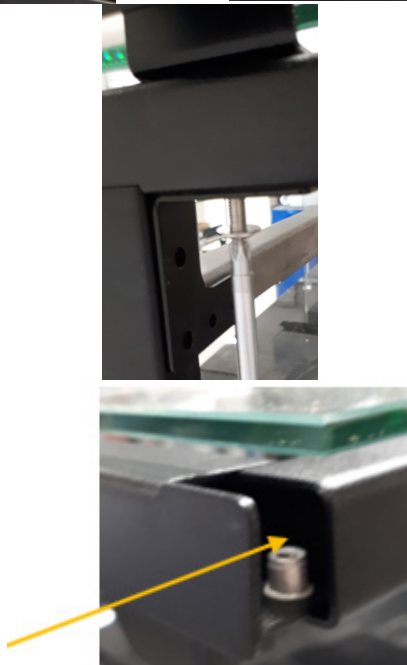

#### Step 11.

- a. **Fasten the top front beam** in side profiles with screws. (both sides)



View from underneath

Bottom Side

## Step 12.


- a. **Check placing bearing(s)** in door(s), one in the top, one at the bottom.

Make sure the flange of the bearing sits opposite of the glass.



Flange

TOP Side

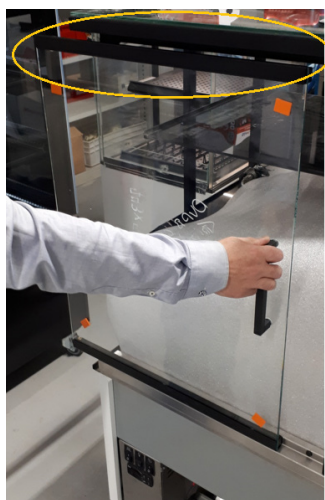

## Step 13.

- a. Place a door on the lower beam, let it stick out of the unit.




### CAUTION:

Be careful not to touch the top beam with the glass door.


## Step 14.

- a. Place hinge pin into bearing

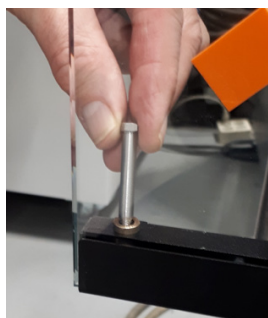



## Step 15.


- a. Place distance ring on hinge pin.

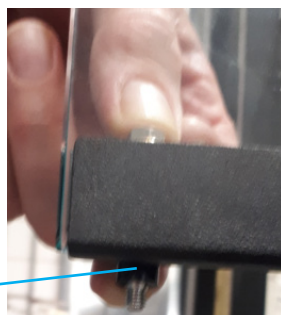

## Step 16.


- a. Fasten hinge pin loosely, making sure the door is kept in place

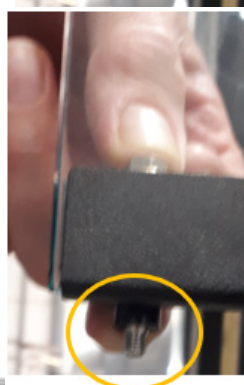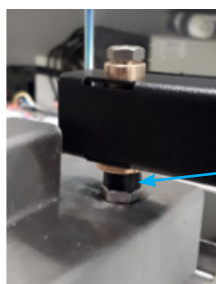

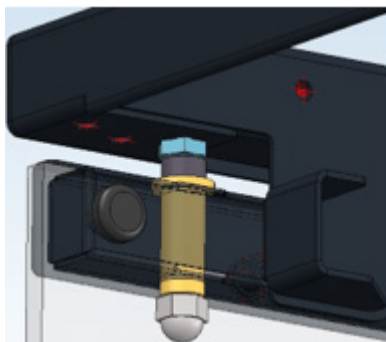

#### Step 17.

- a. Place top hinge pin into top bearing.
- b. Place distance ring on top hinge pin.
- c. Fasten top hinge pin, tighten tight !

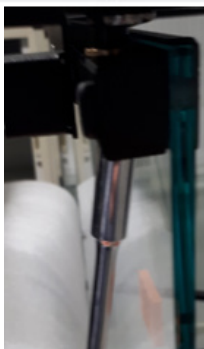

#### Step 18.

- a. Fasten lower hinge pin, tighten tight !



#### Step 19.

- a. Repeat step 14 till 19 for each front door, depending on MDD variation.
- b. Replace top air guide.



Fri-Jado B.V.  
 Blauwhekken 2  
 4751 XD Oud Gastel  
 The Netherlands  
 Tel: +31 (0) 76 50 85 400