


- 1 Remove the rotor
- 2 Remove the side panel
- 3 Remove 4 screws.
- 4 Lift and slide off the top panel.
- 5 Remove the blower panel
- 6 Unscrew the wingnut (left threaded) and take out the fan blade.
- 7 Disconnect the wire from the lamp connection.
- 8 Disconnect the wire from the terminal block.

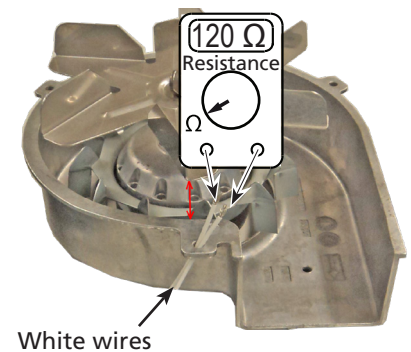

Blower 9070581 in
208V models only.
thermistor protected

