


- 1 Remove the side panel.
- 2 Remove the rotor.
- 3 Remove the blower panel.
- 4 Unscrew the connection nuts.
- 5 Take off the wires.
- 6 Unscrew the suspension nut and take care of the spacer.
- 7 Slide the heating element inwards.
- 8 Bend the rods towards each other.
- 9 Move the heating element downwards out of the suspension clip.

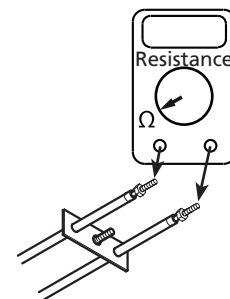

Part nr.	Power / Volt	Ω	Comment
9175008	900W 230V	59 Ω	SB Only
9040015	1,5 kW 230V	35 Ω	230V version
9040625	1,5 kW 208V	29 Ω	208V version