


TDR
Replacing Axle support
(Rotor Bearing)

9172063

1	2	3	4		
	M8x16 	M8 			
(1x) 9172063/9292290	(1x) 4285076	(1x) 9008518	(1x) 9292245		

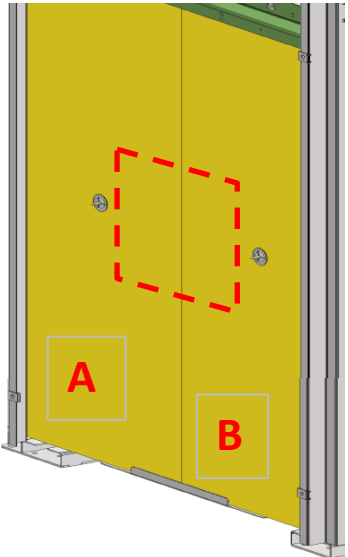


Remove **ROTOR**

Remove the left side panel

Remove both isolation plates (A, B)
OR
Cut and remove a centre section
(see dashed red line)

Keep isolation for replacing

A

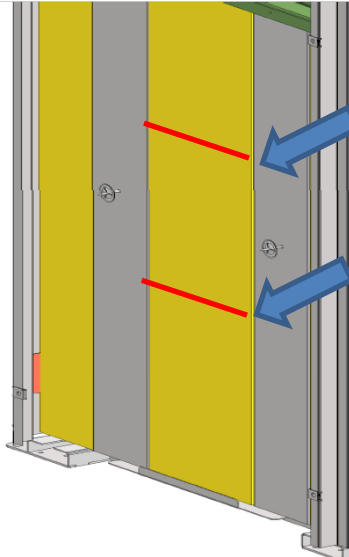


Cut the inner isolation (2x)
as shown by the red line

Remove the middle section
of the isolation

Keep isolation for replacing

B

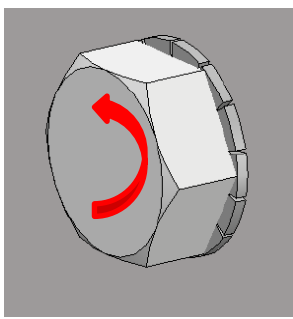


Remove existing axle support (M8)

C




Clean surface and mounting hole (if necessary)

D

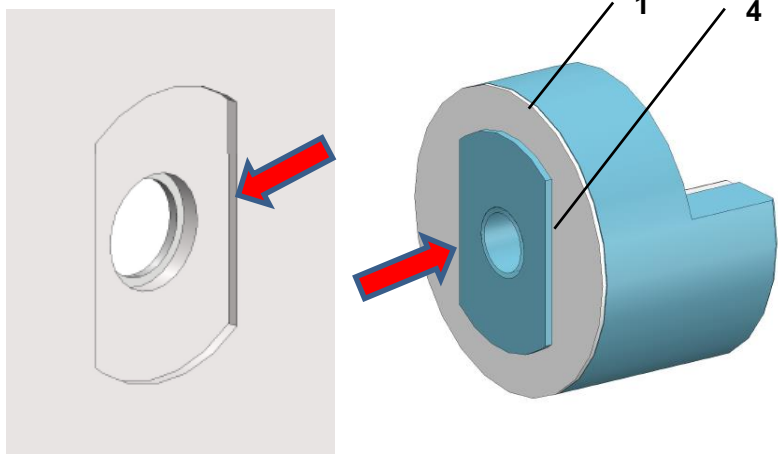


Place new axle support (#1) with seal (#4)
NOTE THE ALIGNMENT !

E

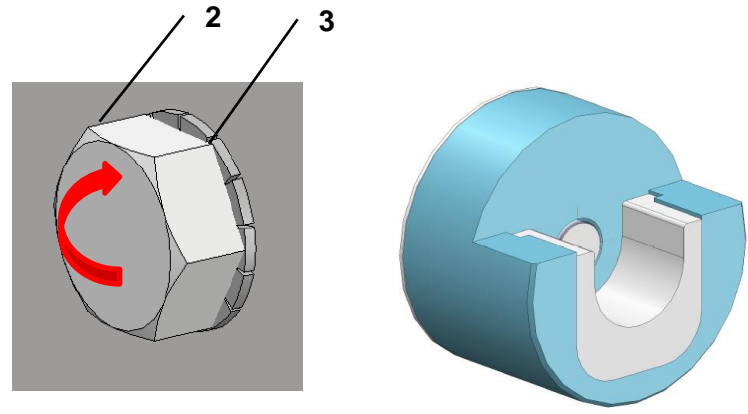

Fixate the axle support with the **new** bolt (#2) and **new** washer (#3)

F

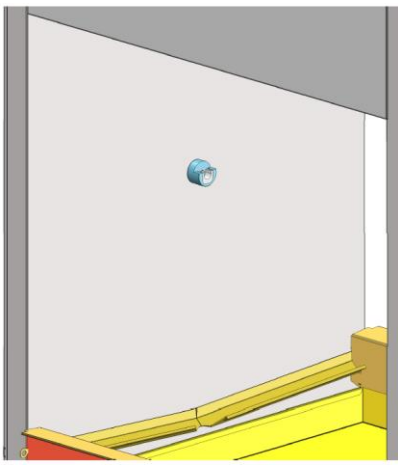

Verify correct installation

G

Replace isolation

Replace side panel