
# TDR 7+7 S AC

Service manual, from serial number: 100139466
208V - USA

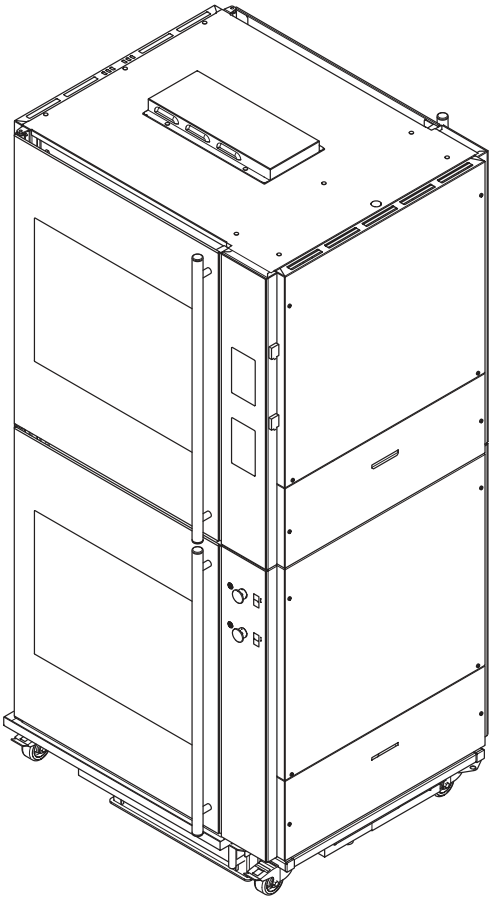

Document number: 500018564

## Copyright

All rights to copyrights, registered trademarks, and trademarks reside with their respective owners. Part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated into any human or computer language by any means or in any form for the user's own use.

# Contents

1 About this document ..... 7
1.1 About the unit in this document ..... 7
1.2 Function of this document ..... 7
1.3 Revision information ..... 7
1.4 Conventions ..... 7
1.4.1 Language ..... 7
1.4.2 Illustrations ..... 7
1.4.3 Units of measurement ..... 7
1.4.4 Signal words used in the document ..... 8
1.4.5 Symbols used in the document ..... 8
1.4.6 Typographical conventions ..... 8
1.5 How to use the document ..... 8
1.6 Related documents ..... 8
1.7 Abbreviations ..... 9
1.8 Terminology ..... 9
1.9 Orientation agreements ..... 9
1.10 Disclaimer ..... 10
1.11 Disclaimer and use of glass ..... 10
1.12 Warranty ..... 10

2 Safety ..... 11
2.1 Intended use ..... 11
2.2 Liability ..... 11
2.3 Approved service engineer ..... 11
2.4 General safety instructions ..... 11
2.4.1 Eye and face protection ..... 11
2.4.2 Skin protection ..... 12
2.4.3 Respiratory protection ..... 12
2.5 Safety instructions for the unit ..... 12
2.6 Safety instructions for service ..... 12
2.7 Signs on the unit ..... 12
2.8 Location of signs on the unit ..... 13
2.9 Discard the unit or the unit parts ..... 13

3 Description ..... 14
3.1 Name plate ..... 14
3.2 Contact information ..... 14
3.3 Overview of the connections ..... 15
3.4 Locations for access to the parts ..... 16

3.5 Overview of the parts - right side....17
3.6 Overview of the parts - left side....18
3.7 Overview of the parts - inside (without fan plate)....19
3.8 User interface....19
3.8.1 Manager settings....19
3.8.2 Service settings....21
3.8.3 Change the manager PIN code....29
3.8.4 Change the settings....29
3.8.5 Change the audio settings....29

**4 Transport....30**
4.1 Move the unit....30

**5 Storage....31**
5.1 Put the unit in storage....31

**6 Maintenance....32**
6.1 Maintenance schedule....32

**7 Maintenance procedures....33**
7.1 Clear an error message....33
7.2 Copy data with the USB flash drive....33
7.3 Updating the software....33
7.4 Order parts....33
7.5 Adjust the water level....34
7.6 Access to the parts....34
7.6.1 Install the side panels....34
7.6.2 Install the side panels....34
7.6.3 Remove the top panel....35
7.6.4 Remove the top panel....35
7.6.5 Install the top panel....35
7.6.6 Remove the fan plate....36
7.6.7 Install the fan plate....36
7.7 Checks....36
7.7.1 Do a check of the water level during cleaning....36
7.7.2 Do a check of the parameters of the cleaning settings....37
7.7.3 Do a check of the spray arm....38
7.7.4 Do an I/O test....38
7.8 Measurements....38
7.8.1 Measure the heating element....38
7.8.2 Measure the blower....40
7.8.3 Measure the capacitor....41

7.8.4 Measure the rotor motor....41
7.8.5 Measure the temperature sensor....43
7.8.6 Measure the motor valve....44
7.8.7 Measure the AC pump....45
7.8.8 Measure the water level....46
7.9 Part replacement....46
7.9.1 Remove the blower....46
7.9.2 Install the blower....46
7.9.3 Remove the heating element....47
7.9.4 Install the heating element....47
7.9.5 Remove the rotor motor....48
7.9.6 Install the rotor motor....48

**8 Troubleshooting....50**
8.1 General troubleshooting procedure....50
8.2 Troubleshooting table....50
8.3 Error messages....63
8.4 Error messages - USA hood installed....64

**9 Technical data....66**
9.1 General specifications....66
9.2 Dimensions....66
9.3 Mass....66
9.4 Electrical specifications....66
9.5 Ambient conditions....66
9.6 Noise level....67

**10 Spare parts....68**
10.1 E-panel....68
10.2 Cables....70
10.3 Panels....72
10.4 Doors....74
10.5 Rotor....75
10.6 Blower and heating....77
10.7 Cartridge holder....78
10.8 Cleaning system - Upper unit....79
10.9 Cleaning system - Lower unit....81
10.10 Cleaning system - Hoses....83
10.11 Cleaning system - Filtration....85
10.12 Cleaning system - Drainage - Upper unit....86
10.13 Cleaning system - Drainage - Lower unit....88
10.14 Sheet metal - Outside....90
10.15 Insulation....92

10.16 Under frame....94
10.17 Accessories....95
10.17.1 Rotisserie accessories....95

11 Appendix....96
11.1 Hydraulic diagram....96
11.2 Overview of the printed circuit board....97
11.3 Circuit diagram....98
11.4 Wiring diagram....99

# 1 About this document

## 1.1 About the unit in this document

This document is applicable to this unit: TDR 7+7 S AC.



**Note:** For the identification of the model type, refer to the name plate.

## 1.2 Function of this document

This document has the information and instructions for the approved service engineer to do service on the unit.
For the requirements of the approved service engineer, refer to section *2.3*.

## 1.3 Revision information

| Version | Date | Description |
|---|---|---|
| 001 | October, 2026 | Initial version |

## 1.4 Conventions

### 1.4.1 Language

The original instructions of this document are in English (EN-US). All other language versions are translations of the original instructions.

### 1.4.2 Illustrations

The illustrations in this document show a typical unit with related parts. Small differences between the illustrations and your unit are possible. These differences do not have an effect on understanding the information in this document. The illustrations are for instruction and description only.

### 1.4.3 Units of measurement

United States customary units are used in this document for the measurable parameters of the unit. All other possible units are conversions of the United States customary units. If the document has other units, these are between parentheses after the United States customary unit, or in different columns in a table.

### 1.4.4 Signal words used in the document

| Signal word | Meaning | Symbol |
|---|---|---|
| Warning | Injury or death is possible, if you do not obey these instructions |  |
| Caution | Damage to the unit or equipment is possible, if you do not obey these instructions |  |
| Note | More information |  |

### 1.4.5 Symbols used in the document

| Symbol | Description |
|---|---|
|  | Preliminary requirement: supplies and consumables that are necessary for a procedure |
|  | Preliminary requirement: condition of the unit before you start the procedure |
|  | Preliminary requirement: support equipment or tools that are necessary for a procedure |

### 1.4.6 Typographical conventions

If the sequence is important, the lists and steps in procedures have numbers (123) or letters (abc).

## 1.5 How to use the document

1. Make sure that you know the structure and contents of this document.
2. Specially read the safety chapter and make sure that you know all the instructions.
3. Do the steps in the procedures fully and in the correct sequence.

## 1.6 Related documents

| Document name | Document code | Target group |
|---|---|---|
| Installation manual | | Installation engineer |
| Service manual | | Service engineer |
| Hood service manual | | • Service engineer<br>• Installation engineer |

| Document name | Document code | Target group |
|---|---|---|
| Appendix | | Service engineer |
| General Terms and Conditions for Sales and Delivery | | All users |


## 1.7 Abbreviations

| Abbreviation | Definition |
|---|---|
| TDR | Turbo Deli Rotisserie |
| AC | Auto Clean |

## 1.8 Terminology

| Term | Definition |
|---|---|
| Food product | A food product is a product that is intended for human consumption. |

## 1.9 Orientation agreements

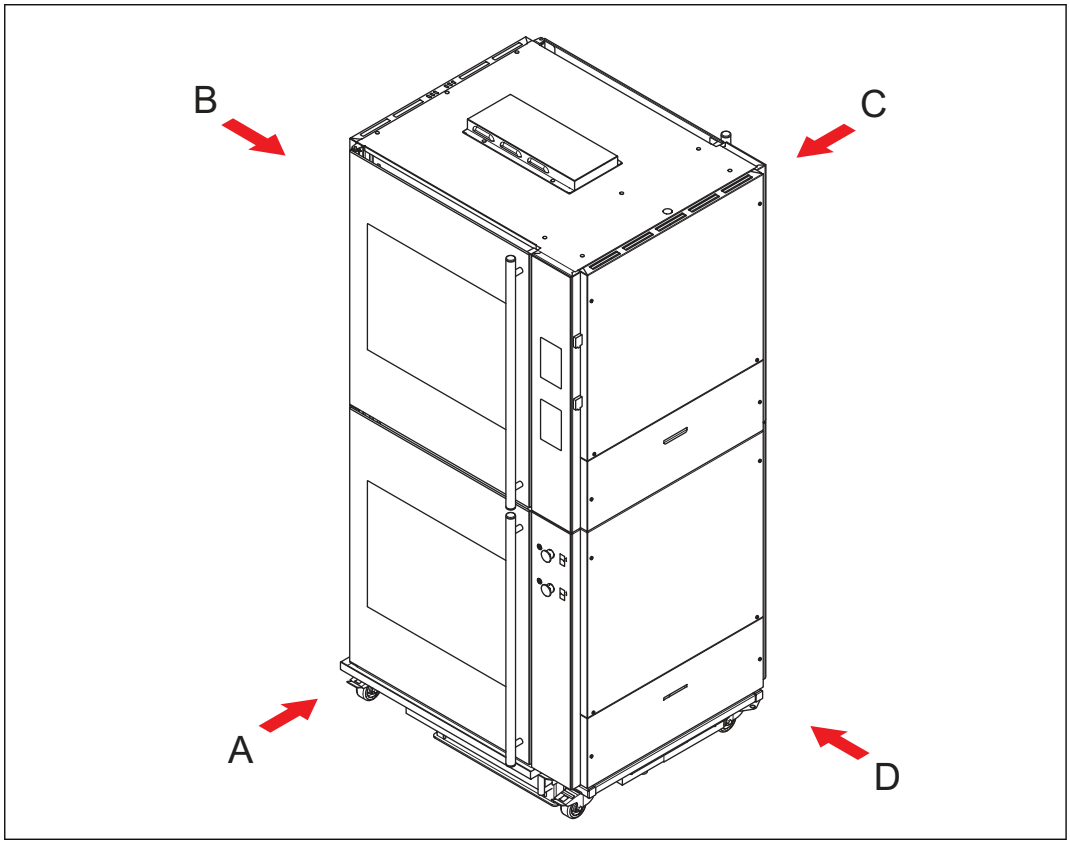


A Front side
B Left side
C Rear side
D Right side

## 1.10 Disclaimer

Fri-Jado reserves the right to change the document without the obligation to notify any person.

## 1.11 Disclaimer and use of glass

This unit contains components made of tempered glass. Although tempered glass is designed to withstand increased mechanical stress, it remains susceptible to breakage if handled improperly, subjected to point loads, impact, or thermal stress.
When performing service or maintenance work on this unit, the user must at all times wear appropriate personal protective equipment, including but not limited to:

1. Protective gloves
2. Eye protection (safety glasses)

The glass must be handled with extreme care. Avoid impacts, dropping, twisting, or contact with hard or sharp surfaces. When the glass is removed, placed aside, or stored, it must be positioned only on a protected surface, preferably:

1. A soft cloth, or
2. Cardboard, or
3. Another flat, shock-absorbing material.

Failure to comply with these safety instructions may result in glass breakage or shattering, which can lead to personal injury and/or damage to the unit. The manufacturer accepts no liability for damage or injury resulting from improper handling or failure to follow these instructions.

## 1.12 Warranty

Fri-Jado advises you to refer to the supplier for the warranty.

# 2 Safety

## 2.1 Intended use

The machine is used to prepare food products. If you use the unit for a different function, this is misuse.

## 2.2 Liability

The supplier accepts no liability whatsoever for loss or injury caused by failing to strictly adhere to the safety guidelines and instructions in this manual or due to carelessness and misuse during installation, operation, maintenance and repair of the unit referred to in this manual and any of its accessories.
In case of unauthorized modifications in or on the unit, every liability on the part of the supplier becomes null and void.

## 2.3 Approved service engineer

- The approved service engineer knows the unit and its safe maintenance.
- The approved service engineer obeys all local rules and the instructions in the maintenance manual.

## 2.4 General safety instructions



**Note:** This document, the related documents, and the warnings included do not replace your responsibility to use your common sense when you do work on the unit.

- Keep this document in a safe place for future use.
- Only do the procedures that the related documents show and that you are approved for.
- Do not make changes to the unit without the written approval from the supplier.
- Obey all the preliminary requirements of the procedures.
- Put on the correct personal protective equipment.
- Do not use the unit when a safety device or a cover is removed, does not operate, or if you think that it does not operate.
- If you remove safety devices, make sure that you install the safety devices again before operation.
- Obey the local rules and the instructions in this document. If the local rules do not agree with the instructions in this document, the local rules will apply.
- Keep the unit in good condition. Make sure that defective parts are replaced immediately.
- Keep the working area of the unit clean.
- Make sure that at least two brakes on the wheels are applied.
- Make sure that the unit is electrically grounded.

### 2.4.1 Eye and face protection

- Wear closed safety glasses. Refer to EN 166.

- Make sure that eye wash fountains are available in the vicinity of any potential exposure.

### 2.4.2 Skin protection

- Wear suitable protective clothing. Refer to EN ISO 13688.
- During cleaning, wear resistant protective gloves. Replace the gloves after each use and when the gloves have signs of wear of perforation.
- After operation, use thermal insulated gloves when you remove the accessories from the unit.

### 2.4.3 Respiratory protection

- In case of insufficient ventilation, wear suitable respiratory equipment.

## 2.5 Safety instructions for the unit

**Note:** You can refer to the Safety Data Sheet of ProteClean (daily clean) and RotiShine (descale) in the resource library.

## 2.6 Safety instructions for service

- Make sure that you are an approved service engineer.


## 2.7 Signs on the unit

**Warning:** Do not remove the signs from the unit.

**Warning:** If a sign on the unit has damage, make sure to replace the sign immediately.

| Symbol | Name of the sign | Step to decrease the risk of injury |
|---|---|---|
|  | Hot surface | Do not touch this surface. |
|  | High voltage | Set the unit to standby mode. Disconnect the power supply before you open the technical area. |

## 2.8 Location of signs on the unit

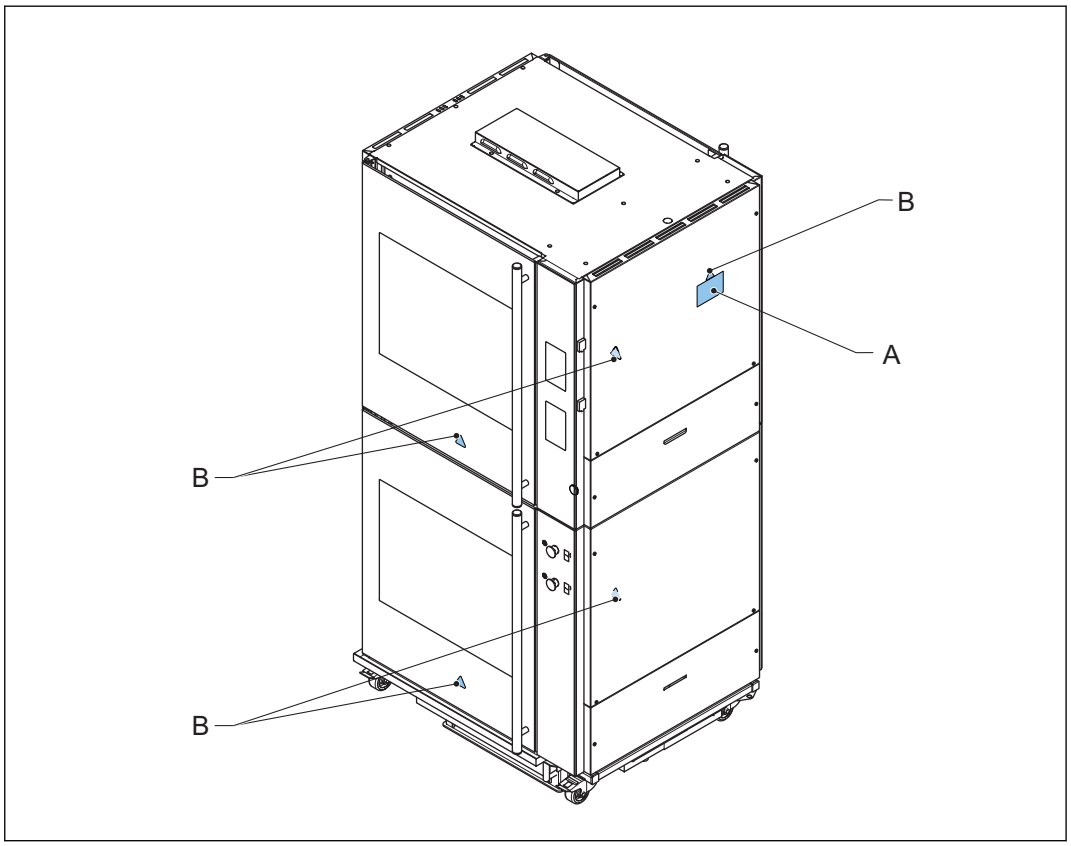


A Name plate B Safety sign

## 2.9 Discard the unit or the unit parts

- Obey the local rules to discard the unit, parts, or consumables.

# 3 Description

## 3.1 Name plate





A Name of manufacturer and QR code
B Unit data
C Quality data

## 3.2 Contact information


Fri-Jado Inc.
1401 Davey Road
Suite 100
Woodridge
IL 60517
USA
us.info@frijado.com
www.frijado.com
+18773745236

## 3.3 Overview of the connections

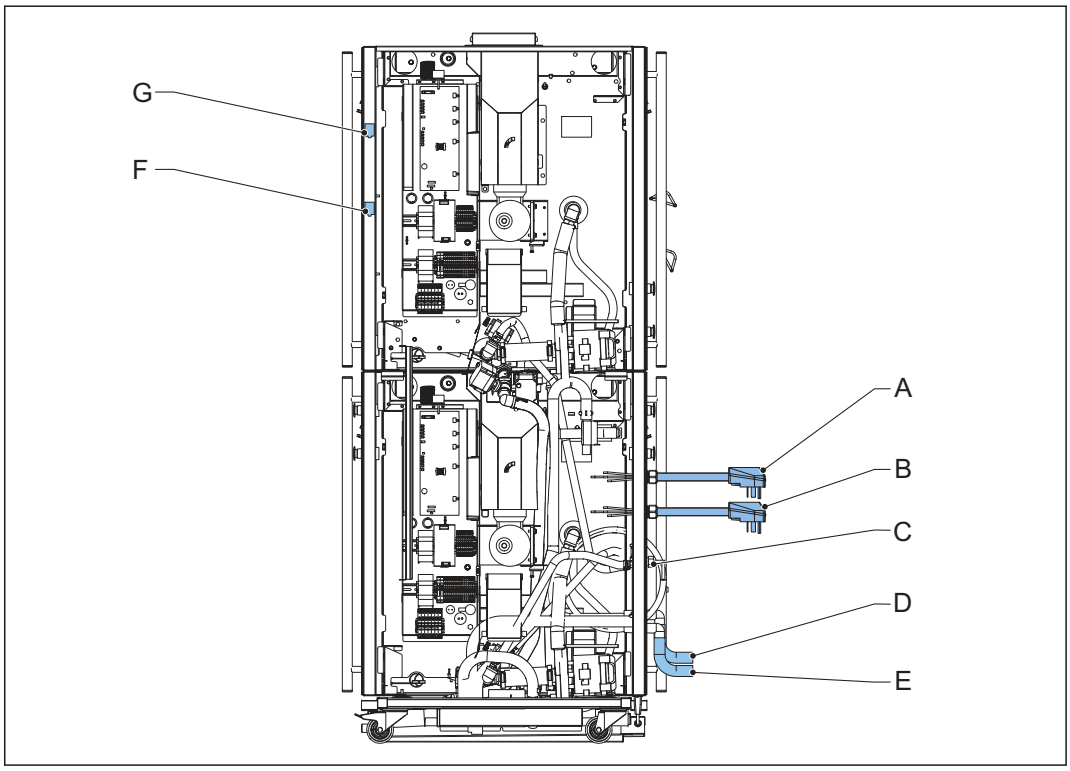



| | | | |
|---|---|---|---|
| A | Power connection (upper unit) | E | Drain connection (lower unit) |
| B | Power connection (lower unit) | F | USB port (lower unit) |
| C | Water connection | G | USB port (upper unit) |
| D | Drain connection (upper unit) | | |

## 3.4 Locations for access to the parts

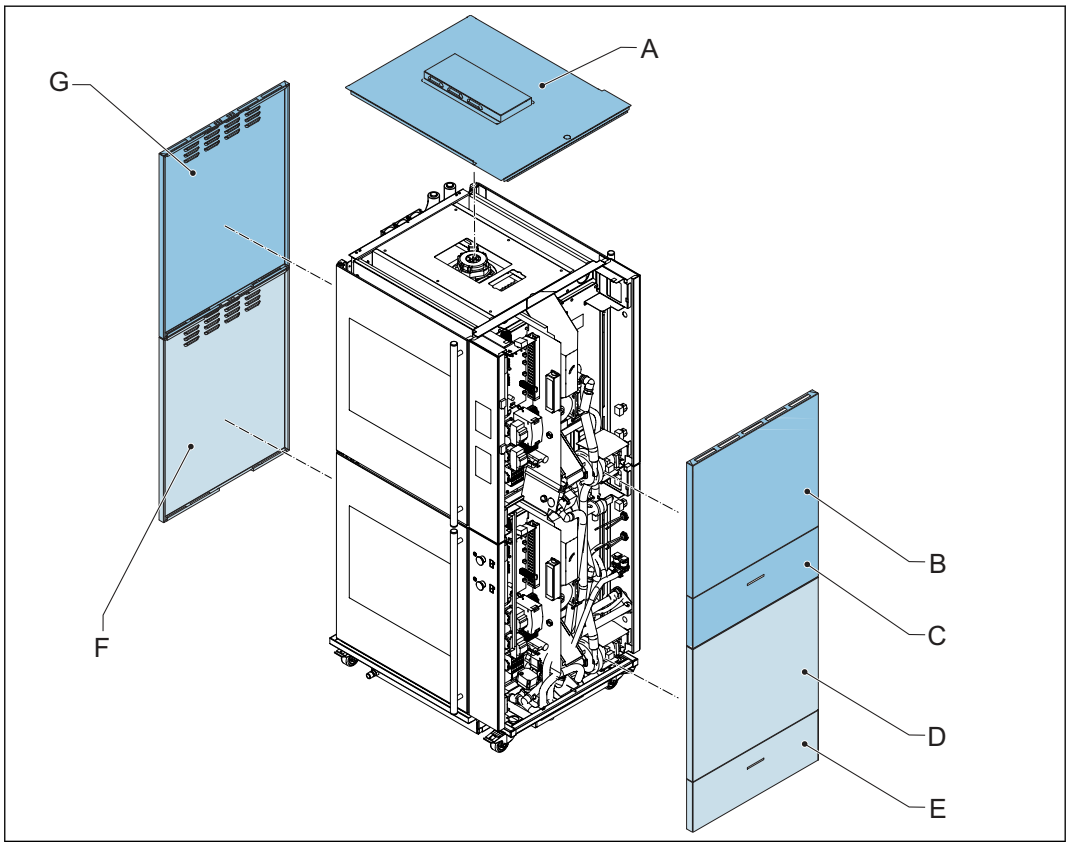



| | | | |
|---|---|---|---|
| A | Top panel | E | Small right side panel |
| B | Upper right side panel | F | Lower left panel |
| C | Small right side panel | G | Upper left panel |
| D | Lower right side panel | | |

## 3.5 Overview of the parts - right side

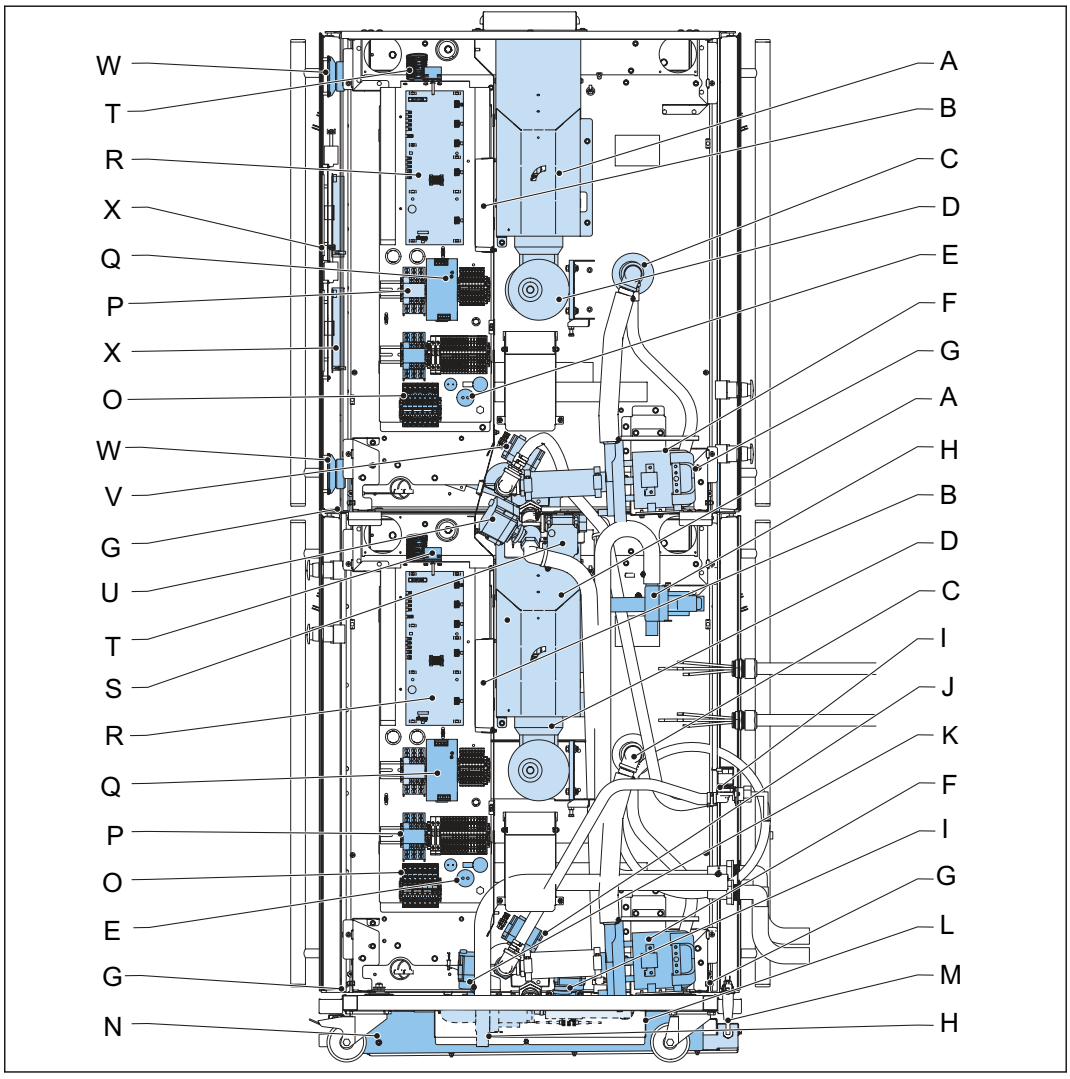


| | | | |
|---|---|---|---|
| A | Air guides | M | Grease container heating |
| B | LED drivers | N | Grease container |
| C | Spray arm connections | O | Mains connection blocks |
| D | Rotor motors | P | Contactors |
| E | Capacitors | Q | Power supplies + 24 V DC |
| F | Pumps (Auto Clean) | R | I/O boards |
| G | Door sensors | S | Motor valve of the water drain (upper unit) |
| H | Drain pumps | T | High limit thermostats |
| I | Water inlet valves | U | Motor valve of the grease drain (upper unit) |
| J | Motor valve of the suction side (lower unit) | V | Motor valve of the suction side (upper unit) |
| K | Motor valve of the grease drain (lower unit) | W | Speaker |
| L | Motor valve of the water drain (lower unit) | X | Touch screens |


## 3.6 Overview of the parts - left side

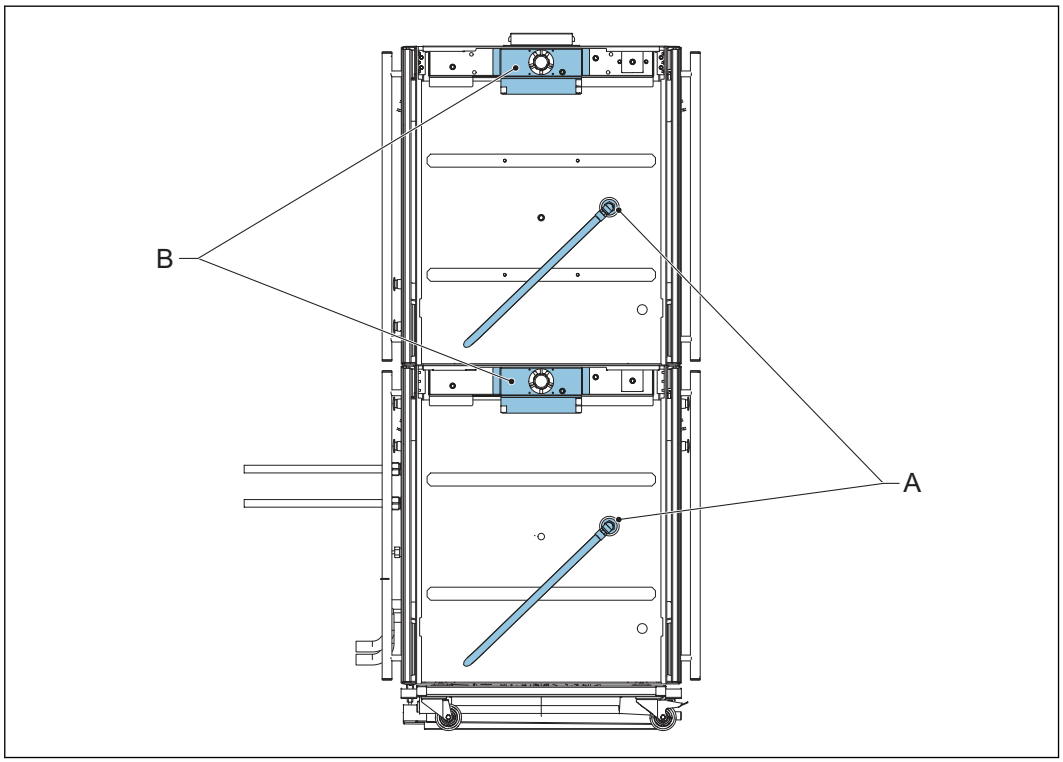


A Spray arm connection

B Cooling fan

## 3.7 Overview of the parts - inside (without fan plate)

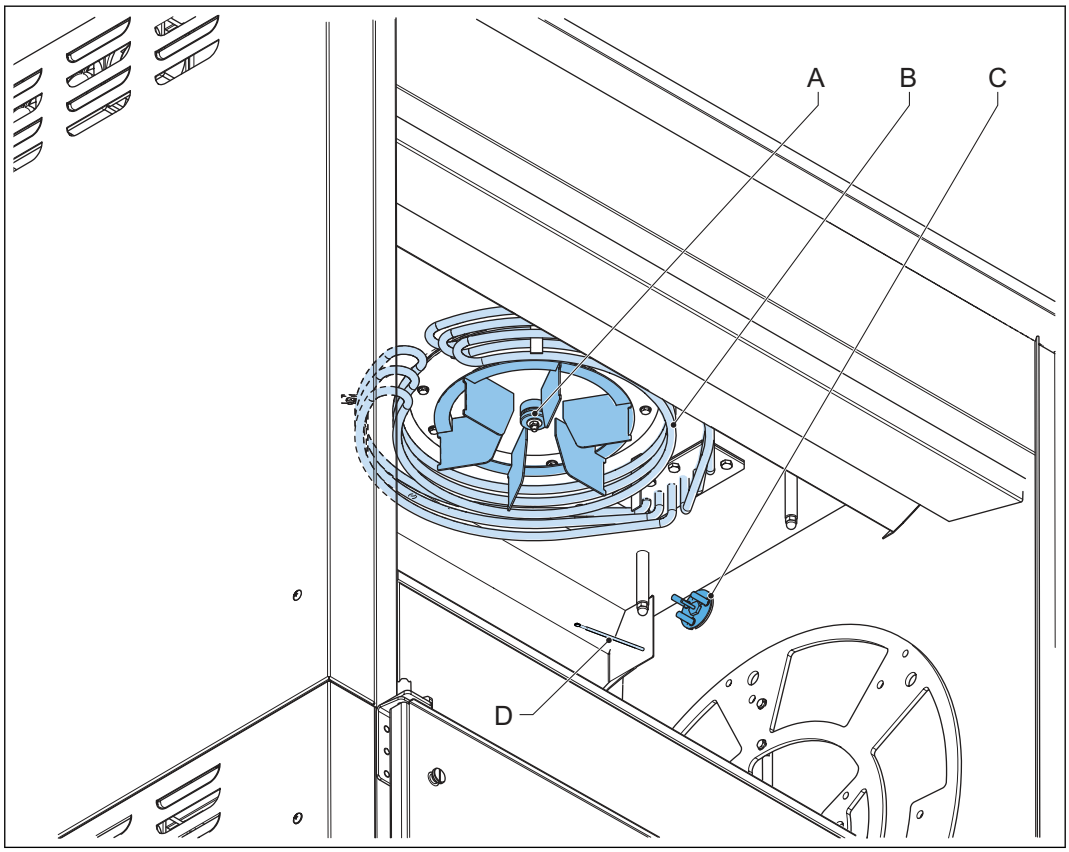


A Blower with blower fan
B Heating element
C Temperature sensor (PT1000)
D High limit capillary (outside the cavity between insulation and sheet metal)

## 3.8 User interface

### 3.8.1 Manager settings

**Note:** If applicable, you can use the PIN code to get access to the manager settings: 1111.

**Note:** For the default settings, refer to the relevant and latest settings list.

| Menu (Level 1) | Menu (Level 2) | Description |
|---|---|---|
| Change PIN | | To change the pin code for the manager. |
| Toggle light | | To set the interior light to on or off. |
| Temperature unit | | To set the temperature unit. [C, F] |

| Menu (Level 1) | Menu (Level 2) | Description |
|---|---|---|
| Volume unit | | To set the volume unit. [Gallons] |
| UTC Time | Hours | To set the hours of the local time. [0–23] |
| | Minutes | To set the minutes of the local time. [0–59] |
| UTC Date | Year | To set the years of the date. [2020–2050] |
| | Month | To set the months of the dates. [1–12] |
| | Day | To set the days of the date. [1–31] |
| Timezone offset | | To set an offset to the local timezone. [-12–12] |
| Time format | | To set the time format. [24h, AM/PM] |
| Date format | | To set the date format. [D/M/Y, M/D/Y] |
| Start delay recipe | | To set the start a recipe with a delay. [Off, On] |
| Alarm | | To set the alarms to on or off. [Off, On] |
| End-user recipe editing | | To enable the user to change and save recipes. [No, Yes] |
| Ask weight | | To set the ask weight question. [Off, On] |
| Preheat mode | | To set the preheat mode. [No, 1x, Continue]<br>!x: one time at the beginning of the day<br>Continue: at the beginning of each recipe |
| Preheat temp default | | To set the default preheat temperature. [68–482 F] |
| Eco function | | To set the eco function to on or off. [Off, On]<br>The eco function saves energy to use latent heat at the end of the recipe. |
| Audio | Audio setting | To set the audio tone. [1–11] |
| | Audio factor | To set the volume of the audio. [1–100] |
| | Test audio | To do a test of the current audio settings. |
| | Sound set | To set the audio sound. [Marimba, Bell, Beeper] |

| Menu (Level 1) | Menu (Level 2) | Description |
|---|---|---|
| Keyboard beep | | To set the sound when you use the touchscreen to on or off. [Off, On] |
| Filter capacity | | To set the filter capacity of the used water filter system in relation to the water quality on site. [50–3000, ∞] |
| Lime filter | | To show the filter capacity of the lime filter as a percentage. |
| Lime filter replaced | | To reset the counter when the lime filter is replaced. |
| Clean screen time | | To set the time for cleaning the touchscreen without a response of the controller. [10–60 seconds] |
| Store Number | | To set the store number. |
| Reference cook | | To select a reference program for cooking correction. |
| Recipes -> USB | | To copy all recipes from the unit to a USB flash drive. |
| Recipes <- USB | | To copy all recipes from a USB flash drive. to the unit. |
| Add recipes <- USB | | To copy selected recipes from a USB flash drive. to the unit. |
| Cloud setings | Cloud username | To set the username of the cloud. |
| | Cloud Password | To set the password of the cloud. |
| Reset hard | | To do a hard reset of the unit. [no, yes] |

### 3.8.2 Service settings

**Note:** You can use the PIN code to get access to the service settings: 4878

**Note:** For the default settings, refer to the relevant and latest settings list.

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| Configuration | Device type | | To set the correct type of unit. |
| | R6 output function | | To set the R6 output function. [Backflush valve, Heater Safety] |
| | Pressure sensor | | To set the pressure sensor. [Off, On] |
| | Customer ID | | To set the customer ID. [0–9] |
| | Hood | | To set whether the hood is installed. [Off, On] |
| | Lights out | | To set the lights. [Disabled, Enabled] |
| | Auto off time | | To set the unit to off automatically when you do not operate the machine. [1–240] |
| Smart Temperature | | | To set the smart temperature function. [Off, On] |
| Autocorrect | | | To set the autocorrect function. The autocorrect function adds time to the remaining time based on the quantity of the product and temperature loss. |
| Language | | | To set the language of the user interface. |
| Save error history | | | To save the error history. |
| Erase error history | | | To delete the error history. |
| Generate error | | | TBD |
| Demo mode menu | Demo mode | | To set the demo mode of the unit to on or off. [Off, On] |
| Change PIN | Enter a new pincode | | To set the pin code. The default pin code is 1111. If you set the pin code to 0000, it is not necessary to enter a pin code to get access to the manager settings. |
| Sensor offset | | | To set the sensor offset. [-30–30] |
| Cleaning | Cleaning temp | Clean Temp 1 | To set the cleaning temperature during cycle 1. |
| | | Clean Temp 2 | To set the cleaning temperature during cycle 2. |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | | Clean Temp 3 | To set the cleaning temperature during cycle 3. |
| | | Quick CL Temp | |
| | | Descale Temp | To set the descaling temperature. |
| | | Soap safe temp | To set the safe temperature to cool down before soap can be added at the beginning of the cleaning cycle. |
| | | Cooling temp | To set the temperature before the cleaning cycle starts. |
| | Cleaning times | Hot rinse time 1 | To set the time for hot rinsing step in cleaning cycle 1. |
| | | Hot rinse time 2 | To set the time for hot rinsing step in cleaning cycle 2. |
| | | Hot rinse time Q CL | |
| | | Hot rinse time Desc. | |
| | | Cold rinse time 1 | |
| | | Cold rinse time 2 | |
| | | Cold rinse time Q CL | |
| | | Cold rinse time Desc. | |
| | | Drain time | To set the time for the drain open step in the cleaning cycle. |
| | | Flush time | To set the time for flush step in the cleaning cycle. |
| | | Drain backflush time | To set the time for the drain backflush step in the cleaning cycle. |
| | | Final time | To set the time for the final step in the cleaning cycle. |
| | | Shine rinse time | To set the time for shine rinsing step in the cleaning cycle. |
| | Clean water supply | Supply time 1 | To set time 1 to fill the unit with clean water. |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | | Supply time 2 | To set time 2 to fill the unit with clean water. |
| | | Add water interval | To set the interval time to add water during cleaning. |
| | | Add water time | To set the time to add water during cleaning. |
| | Clean sanitation | Sanitation step | To set the sanitation step on or off. |
| | | Sanitation time | To set the time for the sanitation step in the cleaning cycle. |
| | | Sanitation temp | To set the temperature during the sanitation step. |
| | Descale warning | | |
| | Daily clean warning | | |
| | Open door cooling | | |
| | Force cleaning | | |
| | Cleaning options | Quick clean | |
| | | Daily clean | |
| | | Descale | |
| | Clear cleaning status | | |
| Delete all programs | | | To delete all recipes. |
| Hood | | | To activate the hood (optional) |
| I/O test | J7 analog in | | |
| | J8 oven temp. in | | |
| | J9 analog in | | |
| | J10 analog in | | |
| | J11 analog in | | |
| | J12 analog in | | |
| | Digital inputs | | To read the input of:<br>• the door (J13)<br>• the blower (J14)<br>• the hood filter placement (J15)<br>• the hood filter press diff (J16) |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | Digital outputs | | To set the output of:<br>• the rotor (M1)<br>• the blower (M2)<br>• the heater (K1)<br>• the lamp (K2)<br>• the water supply (W1)<br>• the backflush water (W2)<br>• the water pumpt (K6)<br>• the drain valve (Q5)<br>• Casco (Q1)<br>• Spray right (Q2)<br>• Spray left (Q3)<br>• the fat drain (Q4) |
| | Board Feedback | | To read the feedback value. |
| | Board Version | | To read the board version. |
| | Board Variant | | To read the board variant. |
| Test program | | | To start a cleaning cycle to test the program. |
| Ignore errors | | | To ignore errors. |
| Save HACCP | Start | | To save the HACCP log file to a USB flash drive. |
| HACCP days | | | To set the amount of days for the HACCP log file. |
| Params -> USB | Enter filename | | To save the parameters to a USB flash drive. |
| Params <- USB | | | To load the parameters from a USB flash drive. |
| Init. Heatup Time | | | To show the recorded heatup time during initial operation. |
| Act. Heatup Time | | | To show the recorded heatup time during the last operation. |
| HeatUp program | | | To activate the heatup program and shows the heatup time in seconds. |
| HeatUp times reset | | | To reset the heatup times. |
| Wifi | Wifi Smartphone | | To set a connection to a smartphone. |
| | Wifi Cloud | | To set a connection to the Fri-Jado Smart Connect website. |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | Wifi RSSI | | To show the signal level of the Wifi connection. In practice the values are betwen -85 dBm and -25 dBM. A bad connection is -85 dBm and a very good connection is -25 dBM. |
| | Wifi auto restart | | "If you set a time of >= 5 minutes here, the machine will regularly check whether the WiFi no longer receives messages during the set time interval. In case there was no communication during that time interval, the Wi-Fi communication will be restarted. This is intended to be able to automatically recover any loss of the WiFi connection if there should be long-term problems." |
| | Start Config | | "This allows you to force the machine to start a new cloud configuration. The old WiFi access point data will be deleted at that time and after a few seconds a smart-phone symbol will appear in the top right corner of the status bar on the screen. From the moment that smartphone symbol appears, the user can set the cloud configuration on the machine via the smartphone." |
| | Allow open WLAN | | TBD |
| Factory settings | Fact reset settings | | To reset the setting fo factory settings. |
| | Fact reset recipes | | To reset the setting fo factory recipes. |
| | Fact reset data | | To reset the setting fo factory data. |
| | Eco variable | | To set the eco variable. |
| | Correction factor | | To set a cook correction. |
| | Fat drain | | To drain fat during cooking Open or Auto. |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | RS485 debugging | | To give information to the developer. |
| | PID factors | P factor | To set the temperature regulation setting (P = proportional). |
| | | I factor | To set the temperature regulation setting (I = integrating). |
| | | D factor | To set the temperature regulation setting (D = differentiating). |
| | | IMAX factor | TBD |
| | | Relay actions | TBD |
| | Use factory config. | | TBD |
| | S/N: | | TBD |
| Commission reset | | | TBD |
| Commission apply | | | TBD |
| Restart soft | | | This performs a 'soft' reboot of the entire S control software. This means that the entire soft-ware restarts internally without an external electrical reset signal being issued. |
| Restart hard | | | This performs a 'hard' (electronic) reboot of the entire S control software, which is similar to turning the unit off and on again. |
| Swipe sensitivity | | | To set the sensitivity of the touchscreen. |
| Live variables | Status counters | Active total | To show the active time of the unit. |
| | | Operation total | To show the total time that the unit was in operation. |
| | | Preheat total | To show the total time that the unit was preheating. |
| | | Reset preheat total | To reset the total preheating time. |
| | | Manuallly added | To show the time that was added manually. |
| | | Reset manual total | To reset the times that were added manually. |
| | | Cook corrections | To show the total time of cook corrections. |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | | Reset correction | To reset the total time of cook corrections. |
| | Output counters | Heater | To show the time of heater activation. |
| | | Reset heater time | To reset the time of heater activation. |
| | | Blower | To show the time of blower activation. |
| | | Reset blower time | To reset the time of blower activation. |
| | | Rotor | To show the time of rotor activation. |
| | | Reset rotor rime | To reset the time of rotor activation. |
| | | Light | To show the time that the light was on. |
| | | Reset light time | To reset the time that the light was on. |
| | | Pump | To show the time of pump activation. |
| | | Reset pump time | To reset the time of pump activation. |
| | Start/End counters | #started recipes | To show the quantity of started recipes after the last reset. |
| | | #ended recipes | To show the quantity of ended recipes after the last reset. |
| | | #started quick clean | To show the quantity of quick cleans after the last reset. |
| | | #ended quick clean | To show the quantity of ended quick cleans after the last reset. |
| | | #started daily clean | To show the quantity of started daily cleans after the last reset. |
| | | #ended daily clean | To show the quantity of ended daily cleans after the last reset. |
| | | #started descales | To show the quantity of started descales after the last reset. |
| | | #ended descales | To show the quantity of ended descales after the last reset. |
| | | Reset Starts/ Ends | To reset all starting and ending counters. |

| Menu (Level 1) | Menu (Level 2) | Menu (Level 3) | Description |
|---|---|---|---|
| | UTC system time | | To set the time and date. |
| | Commission time | | To show the time and dat of commissioning. |
| | Limefilter time | | To show the last installation time and date of the water filter. |

### 3.8.3 Change the manager PIN code

**Note:** If you change the manager PIN code, you must enter the PIN code every time that you access the manager settings. The default manager PIN code is 1111. You can set the manager PIN code to 0000 to stop asking for the PIN code when you access the manager settings.

1. Go to the menu *Change PIN* in the manager settings to change the PIN code for the manager settings. You can use the PIN code to get acces to the manager settings: 0000.

### 3.8.4 Change the settings

**Note:** You must use a password to get access to the settings for *Manager* and *Service*.

1. Swipe up to go to the swipe up screen.
2. Select *Settings*.
3. For manager, select *Manager*. Refer to section Manager settings.
4. For service, select *Service*. Refer to section *3.8.2*.

### 3.8.5 Change the audio settings

1. Go to *Settings* > *Manager* > *Audio*.
2. Select *Audio settings* to select the audio sound.
3. Select *Audio factor* to set the volume.
4. Select *Test audio* to test the audio set and volume.
5. Select *Sound set* to select the sound set. *Beeper* has the highest volume.

# 4 Transport

## 4.1 Move the unit



**Warning:**

- Do not move the unit over objects higher than 0.4 inch.
- Do not move the unit by pushing or pulling the door handles.

1. Disconnect the power supply.
2. Make sure the unit is cooled down. Wait a minimum of 10 minutes.
3. Disconnect the water supply.
4. Disconnect the water drain.
5. If necessary, remove the grease container.
6. Release the breaks on the wheels.
7. Push the unit at the center.

# 5 Storage

## 5.1 Put the unit in storage

1. Disconnect the power supply.
2. Disconnect the water supply.
3. Remove water from the water valve, tubes and the pump.
4. Clean the unit.
5. Put a cover over the unit to prevent dust on the unit and water leakage.
6. Store the unit in a dry non-condensing environment (50–90 °F) .
7. Apply the breaks on the wheels of the unit.

# 6 Maintenance

## 6.1 Maintenance schedule

| Task | Interval | Procedure |
|---|---|---|
| Preventive maintenance | Yearly | Do a check of the machine. Replace wearable components according to the maintenance program of the machine. Refer to the resource library: *https://resource-library.frijado.com/en_us/*. |

# 7 Maintenance procedures

## 7.1 Clear an error message



**Caution:** Make sure that you analyze the error message and do the necessary actions before you clear the error message.

1. Go to *Log & maintenance*.
2. Select the error message to see the data of the error message.
3. Go to *Settings* > *Manager*.
4. Select *Clear last error*.
5. Select *OK*.

## 7.2 Copy data with the USB flash drive



**Note:** If you copy the parameter list to the unit, the current settings will be overwritten.

1. Go to *Settings* > *Service*.
2. Select *Params -> USB* to copy the parameter list from the unit to the USB flash drive.
3. Select *Params <- USB* to copy the parameter list from the USB flash drive to the unit.

## 7.3 Updating the software

The software is a ZIP file. The name of the file contains the version of the software.



**Note:** For the latest software and parameter list, go to: *https://resource-library.frijado.com/en_us/*.

1. Fill in 'S-control-software' in the search field.
2. Select the correct file to download.
3. Extract the ZIP file.
4. Copy the files to a USB flash drive.
5. Disconnect the power supply.
6. Put the USB flash drive in the USB port.
7. Connect the power supply. The update starts.
8. When the update is complete, remove the USB flash drive from the USB port.

## 7.4 Order parts

1. Contact the supplier.


## 7.5 Adjust the water level

1. Go to *Settings* > *Service* > *Cleaning* > *Clean water supply* to change *Supply time 1* and *Supply time 2*. For the latest default value parameters, refer to the parameter list.

## 7.6 Access to the parts


### 7.6.1 Install the side panels

1. Hold the side panels against the unit.
2. Tighten the screws of the upper right side panel (A).
3. Tighten the screws of the small right side panel (B).
4. Tighten the screws of the lower right panel (C).
5. Tighten the screws of the small right side panel (D).
6. Tighten the screws of the lower left panel (E).
7. Tighten the screws of the upper left panel (F).

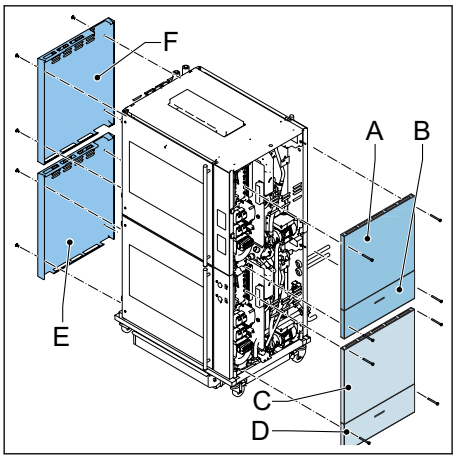



### 7.6.2 Install the side panels

1. Hold the side panels against the unit.
2. Tighten the screws of the upper right side panel (A).
3. Tighten the screws of the small right side panel (B).
4. Tighten the screws of the lower right side panel (C).
5. Tighten the screws of the small right side panel (D).
6. Tighten the screws of the lower left panel (E).
7. Tighten the screws of the upper left panel (F).

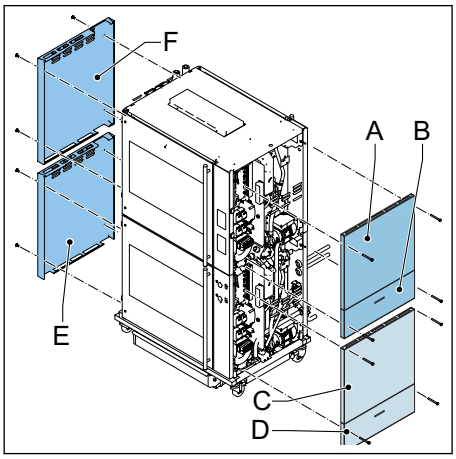


## 7.6.3 Remove the top panel

1. Loosen the screws of the top panel (A).
2. Remove the top panel (A).

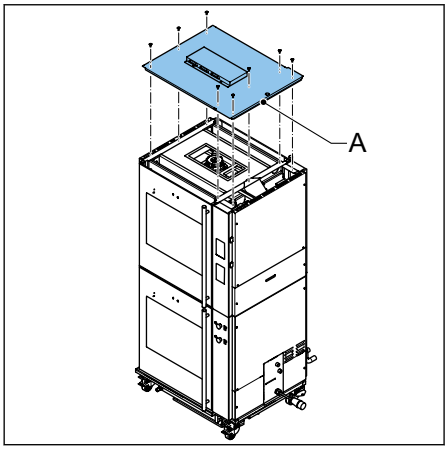



## 7.6.4 Remove the top panel

1. Loosen the screws of the top panel (A).
2. Remove the top panel (A).

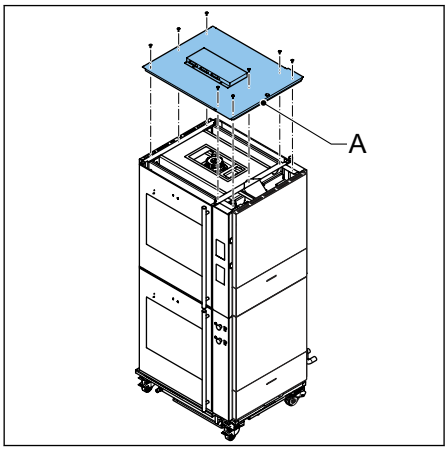



## 7.6.5 Install the top panel

1. Put the top panel (A) on the unit.
2. Tighten the screws of the top panel (A).

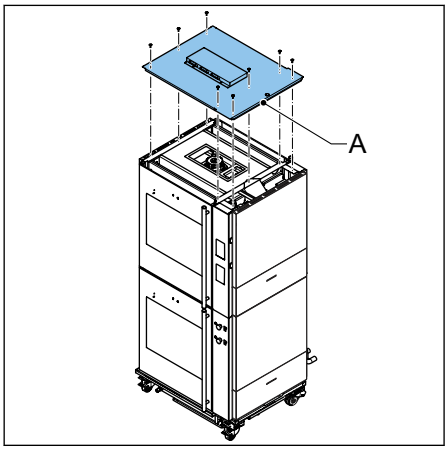


### 7.6.6 Remove the fan plate

1. Loosen the four nuts (A).
2. Move the fan plate (B) sideways.
3. Remove the fan plate (B).

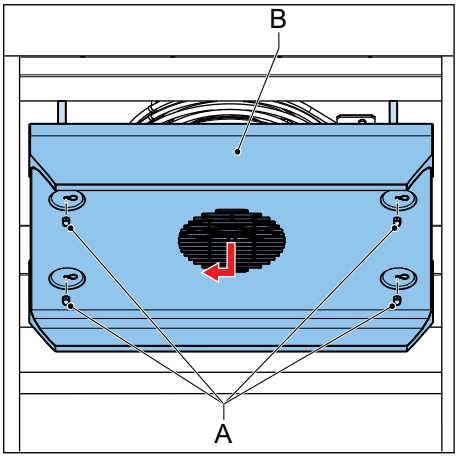


### 7.6.7 Install the fan plate

1. Install the fan plate (B) over the 4 nuts (A).
2. Move the fan plate (B) sideways.
3. Tighten the four nuts (A).

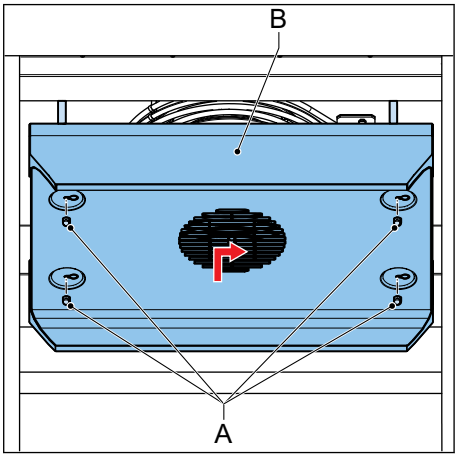



## 7.7 Checks

### 7.7.1 Do a check of the water level during cleaning

**Warning:**
Do not add cleaning agents for this procedure. Injury can occur.

During cleaning, water flows into the rotisserie. If there is too much water, this will reduce the wash power of the detergent. If there is not enough water, this can cause insufficient cleaning and damage to the pump.
Low water levels can occur when the water pressure is too low.

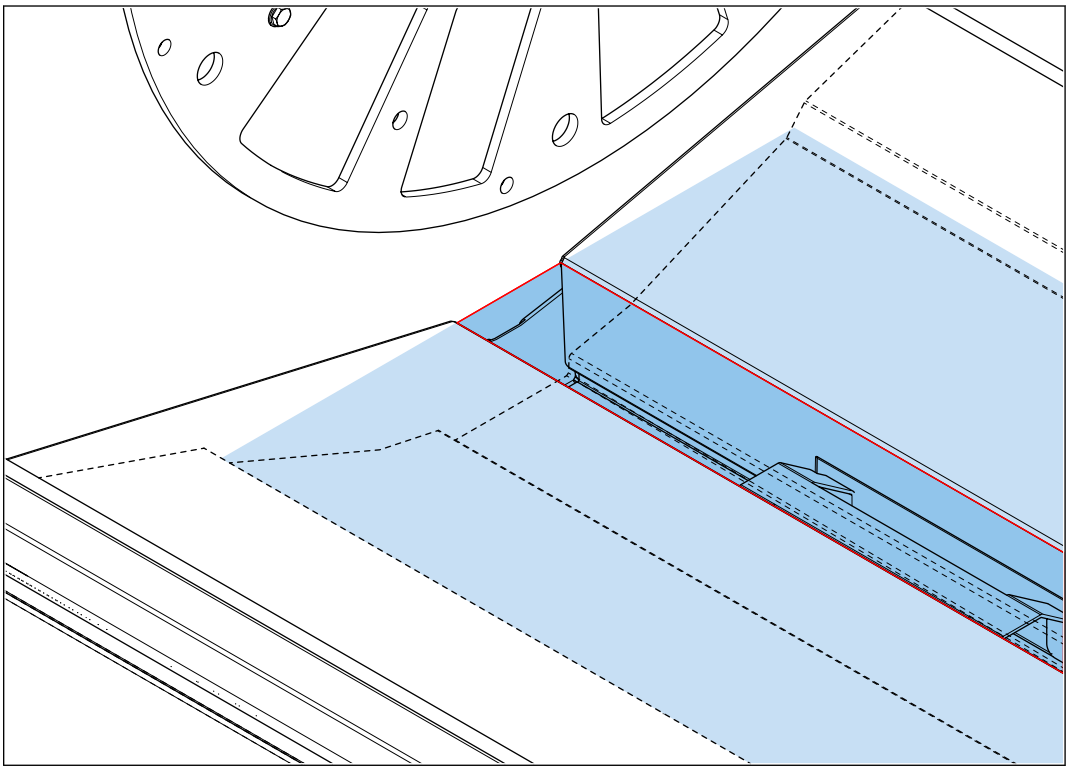

1. Start the daily clean.
2. Let the daily clean run for 6 minutes.
3. Pause the daily clean.
4. Open the door.
5. Measure the water level. Refer to section *7.8.8*.
6. If it is necessary, adjust the water level. Refer to section *7.5*.

## 7.7.2 Do a check of the parameters of the cleaning settings

During cleaning, water flows into the rotisserie. If there is too much water, this will reduce the wash power of the detergent. If there is not enough water, this can cause problems with the water circulation.

**Note:** You can refer to the resource library for the latest setting lists.

1. Go to *Settings* > *Service* > *Cleaning*.
2. Make sure that the you have the correct parameters:

| Setting | Parameter |
|---|---|
| Clean temp 1 | 118 °F |
| Clean temp 2 | 140 °F |
| Clean temp 3 | 131 °F |
| Quick CL temp | 131 °F |
| Descale temp | 131 °F |
| Soap safe temp | 167 °F |
| Cooling temp | 167 °F |
| Hot rinse time 1 | 20 min |
| Hot rinse time 2 | 20 min |
| Hot rinse time Q Cl | 20 min |
| Hot rinse time Desc | 20 min |
| Cold rinse rinse time 1 | 10 min |
| Cold rinse rinse time 2 | 10 min |
| Cold rinse rinse Q Cl | 10 min |
| Cold rinse rinse Desc | 10 min |

### 7.7.3 Do a check of the spray arm

1. Make sure that the spray arm is clean.
2. Make sure that the spray arm can move freely.


### 7.7.4 Do an I/O test

1. Go to *Settings* > *Service* > *I/O test*.
2. Select the applicable I/O test.
3. For *Digital outputs*, select the toggle switch to activate or deactivate the output.

## 7.8 Measurements

### 7.8.1 Measure the heating element

**Note:** If the heating element is stored for a longer period of time, moisture can go in and the insulation resistance can decrease.

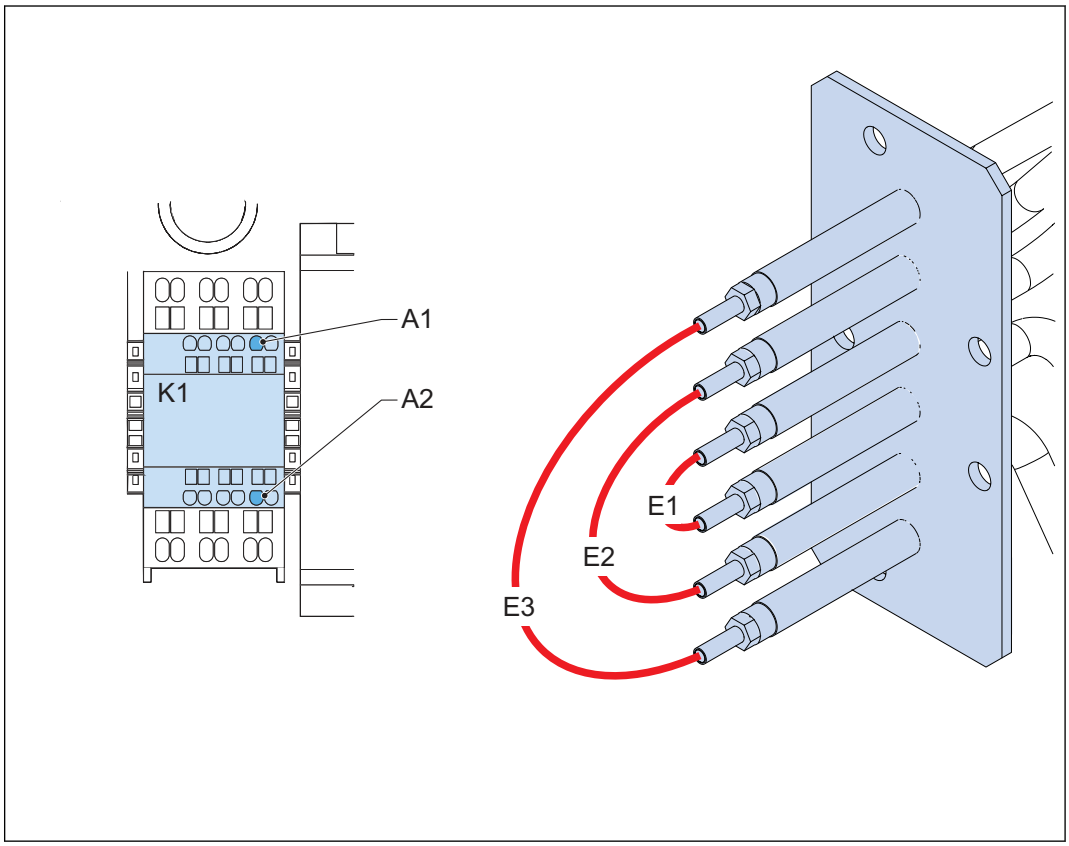



1. Measure the electrical resistance of the heating element (10.8kW / 208V).

| Measurement | Value |
|---|---|
| E1 | ± 12.5 Ω |
| E2 | ± 12.5 Ω |
| E3 | ± 12.5 Ω |

2. Measure the electrical resistance of the contactor coil (K1 + KM1).

| Measurement | Value |
|---|---|
| A1-A2 | ± 205 Ω |

## 7.8.2 Measure the blower

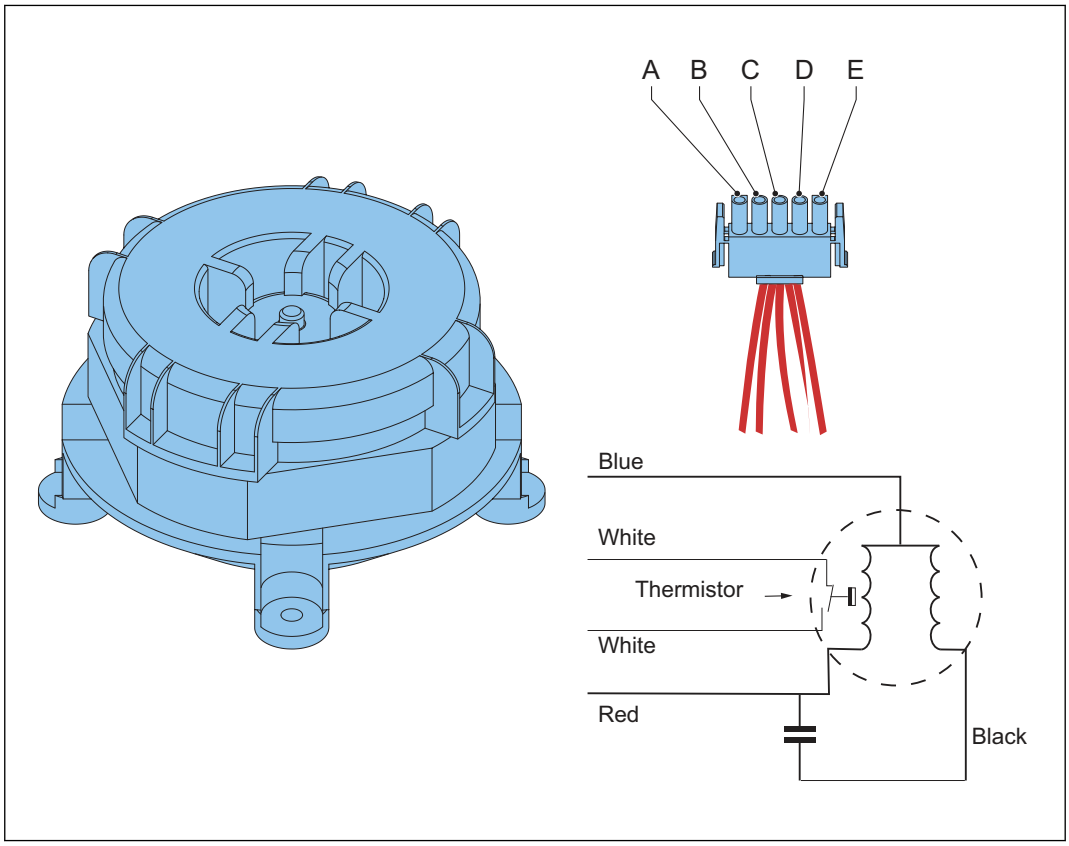


A White
B White
C Black
D Red
E Blue

1. Measure the electrical resistance of the blower.


| Measurement | Value |
|---|---|
| A - B | 0 Ω |
| C - D | 64 Ω |
| C - E | 37 Ω |
| D - E | 27 Ω |

2. Measure the electrical resistance of the blower with a test voltage of 500 VDC.

| Measurement | Value |
|---|---|
| Mass - A | ∞ Ω |
| Mass - B | ∞ Ω |
| Mass - C | ∞ Ω |
| Mass - D | ∞ Ω |
| Mass - E | ∞ Ω |


## 7.8.3 Measure the capacitor

1. Measure the electrical capacitance of the capacitor.

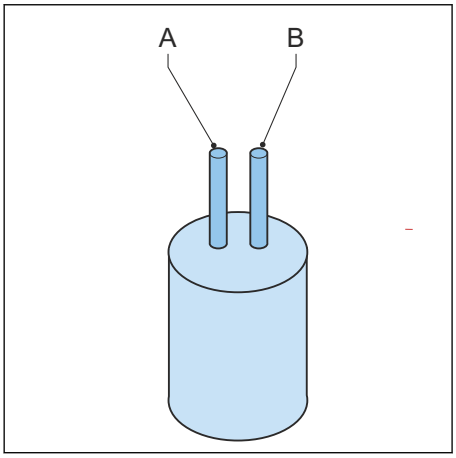


| Capacitor | Measurement | Value | Description |
|---|---|---|---|
| C2+C3 | A - B | 6 µF | Blower M |
| C1 | A - B | 3 µF | Rotor M |

## 7.8.4 Measure the rotor motor

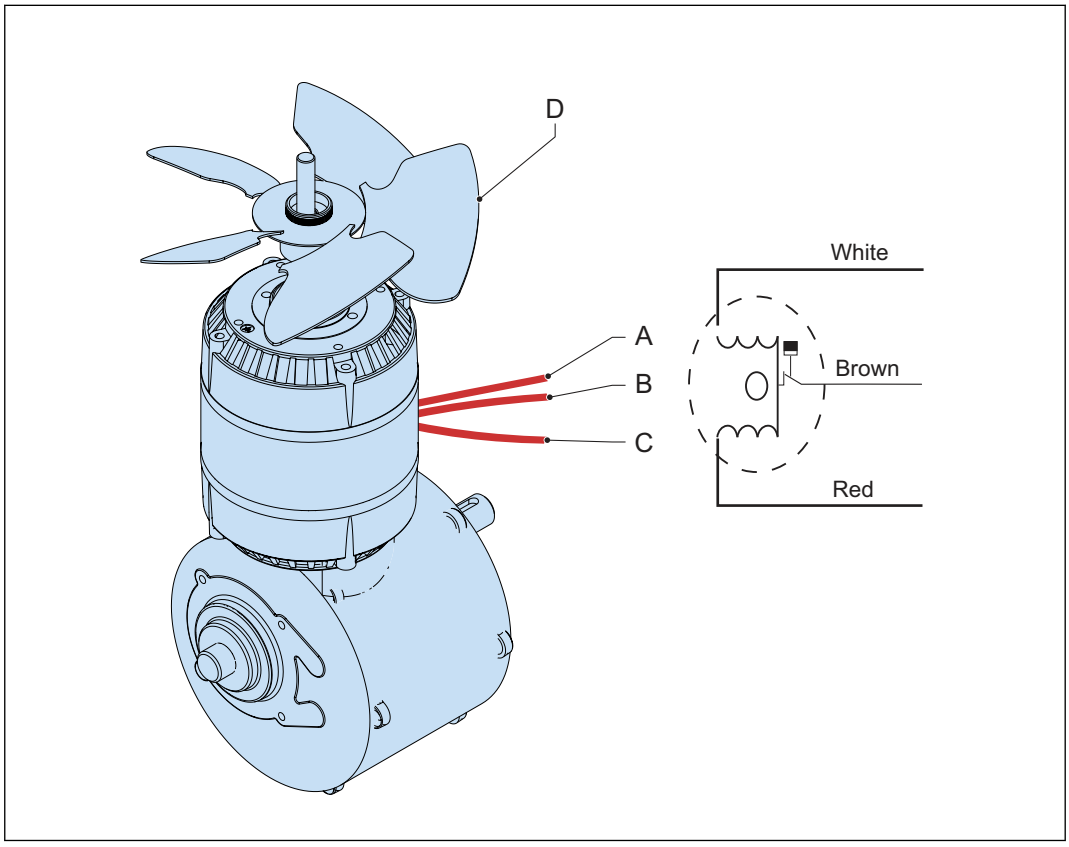


A White
B Brown
C Red

1. Measure the electrical resistance of the rotor motor.


| Measurement | Value |
|---|---|
| A - B | 120 Ω |
| B - C | 120 Ω |
| A - C | 240 Ω |

2. Measure the electical resistance of the rotor motor with a test voltage of 500 VDC.

| Measurement | Value |
|---|---|
| Mass - A | ∞ Ω |
| Mass - B | ∞ Ω |
| Mass - C | ∞ Ω |

## 7.8.5 Measure the temperature sensor

1. Measure the electrical resistance of the temperature sensor. Make sure that the temperature in the unit is the same as the measured temperature.

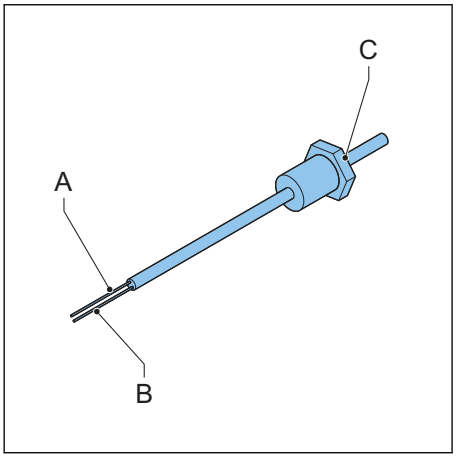



| Measurement | Temperature | Value |
|---|---|---|
| A - B | −4 °F | 921.60 Ω |
| | 14 °F | 960.90 Ω |
| | 32 °F | 1000.00 Ω |
| | 50 °F | 1039.00 Ω |
| | 68 °F | 1077.90 Ω |
| | 77 °F | 1097.40 Ω |
| | 86 °F | 1116.70 Ω |
| | 104 °F | 1155.40 Ω |
| | 122 °F | 1194.00 Ω |
| | 140 °F | 1232.40 Ω |
| | 158 °F | 1270.00 Ω |
| | 176 °F | 1308.90 Ω |
| | 194 °F | 1347.00 Ω |
| | 212 °F | 1385.00 Ω |
| | 230 °F | 1422.00 Ω |
| | 248 °F | 1460.60 Ω |
| | 266 °F | 1498.20 Ω |
| | 284 °F | 1535.80 Ω |
| | 302 °F | 1573.10 Ω |
| | 392 °F | 1758.43 Ω |
| | 482 °F | 1940.81 Ω |
| | 572 °F | 2120.30 Ω |

2. Measure the electical resistance .

| Measurement | Value |
|---|---|
| C - A | ∞ MΩ |
| C - B | ∞ MΩ |

## 7.8.6 Measure the motor valve

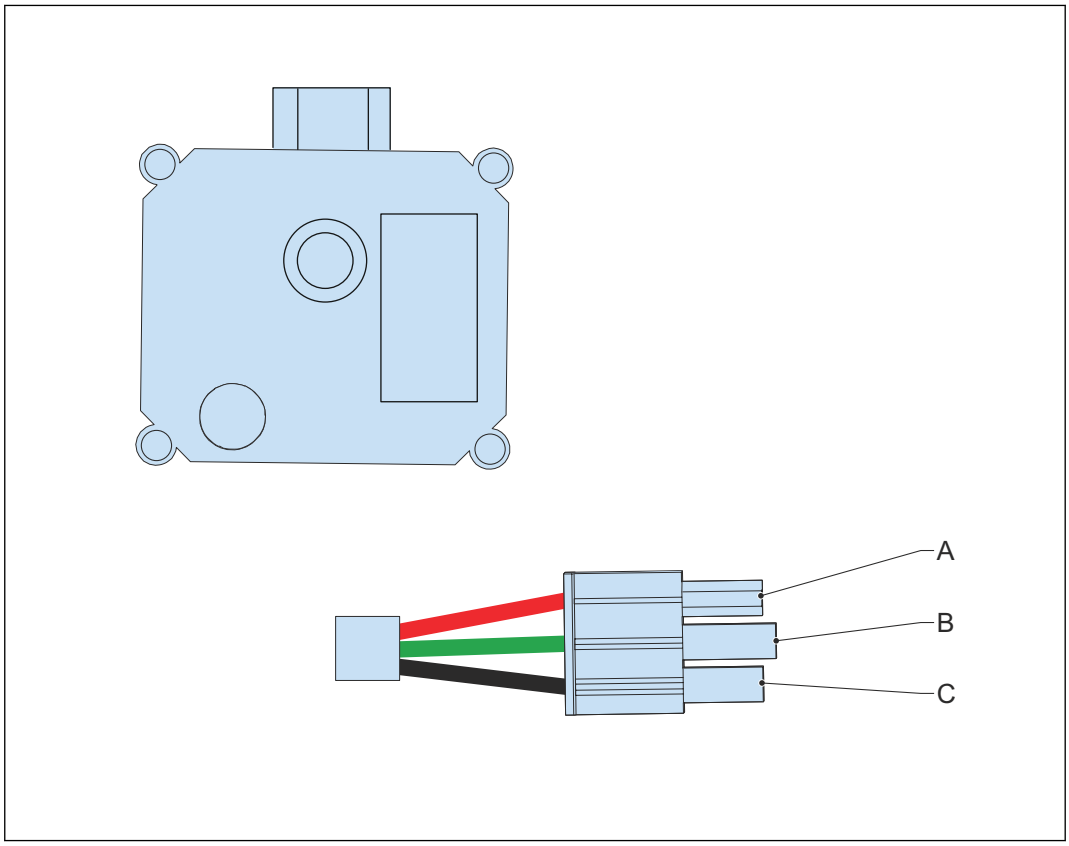


A Red
B Yellow-Green
C Blue-Black

1. Measure the electrical resistance of the motor valve.

| Measurement | Value |
|---|---|
| A - B | >1 MΩ |
| B - C | >1 MΩ |
| A - C | >1 MΩ |


2. Measure the voltage of the motor valve in the open position.

| Measurement | Value |
|---|---|
| A - C | 24 V DC |
| B - C | 0 V |

3. Measure the voltage of the motor valve in the closed position.

| Measurement | Value |
|---|---|
| A - C | 24 V DC |
| B - C | 24 V DC |

## 7.8.7 Measure the AC pump

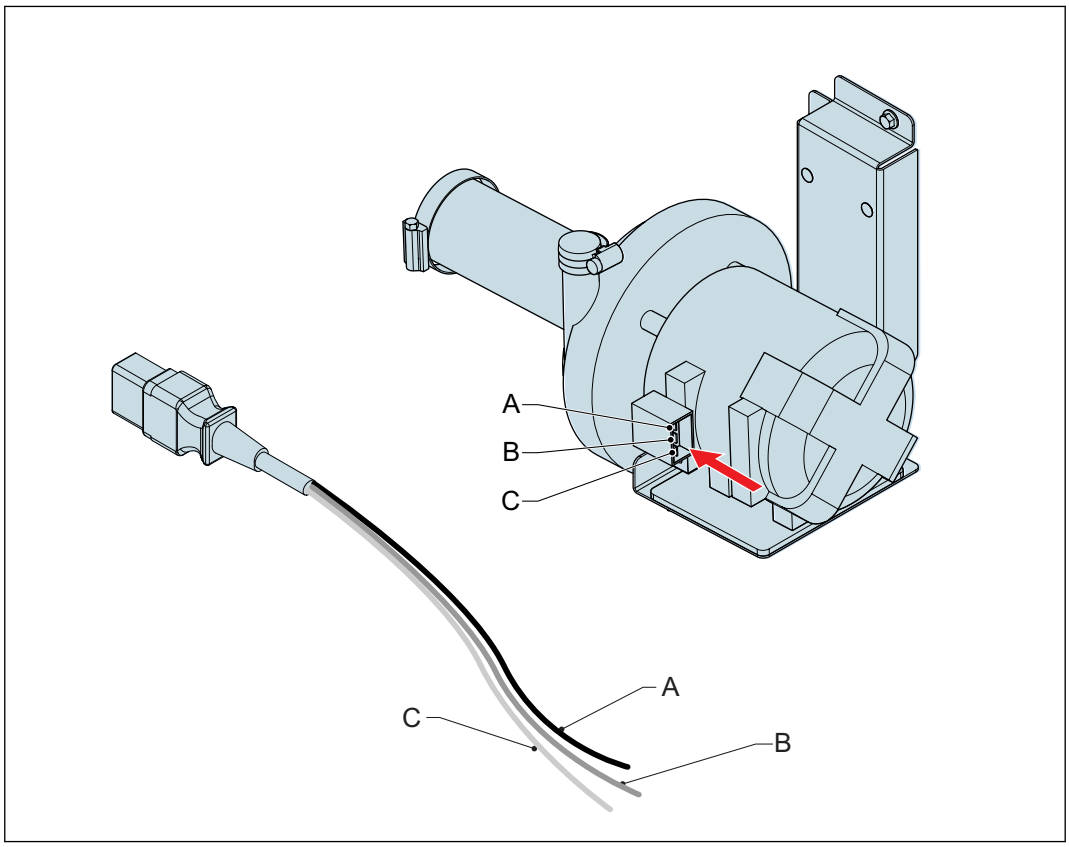


A Black
B Brown
C Blue

1. Measure the electrical resistance of the motor valve.

| Measurement | Value |
|---|---|
| A - B | ± 12 MΩ |
| B - C | ± 43 Ω |

2. Measure the voltage of the pump.

| Combination | Value |
|---|---|
| A - B | 208 V |


3. Measure the amperage of the pump.

| Measurement | Value |
|---|---|
| At full load | 1–2 A |

### 7.8.8 Measure the water level

1. Remove the filter (A) with plates (B).
2. Measure the water level at the correct point (C).

**Note:**
The ideal water level (X) is 2.36 inch. A tolerance of ± 0.2 inch is acceptable.

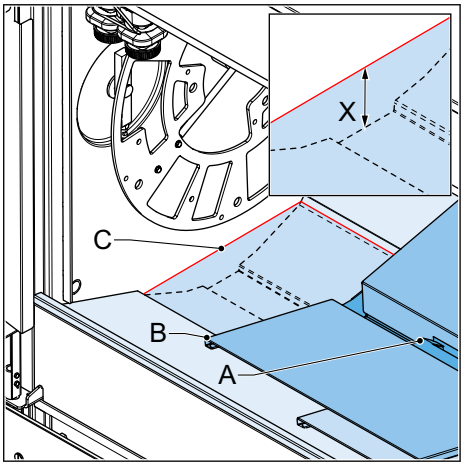



## 7.9 Part replacement

### 7.9.1 Remove the blower

1. Remove the fan plate. Refer to section *7.6.6*.
2. Loosen the nuts (10x) (A). The seal can stick.
3. Turn the blower (B) clockwise and move it down.


**Note:**
The fan with the motor can hang in position when the nuts are loose.

4. Disconnect the plug connection (C).
5. Remove the blower assembly.
6. Clean the seal (D). Remove the old gasket (E) and all gasket residues from the unit.

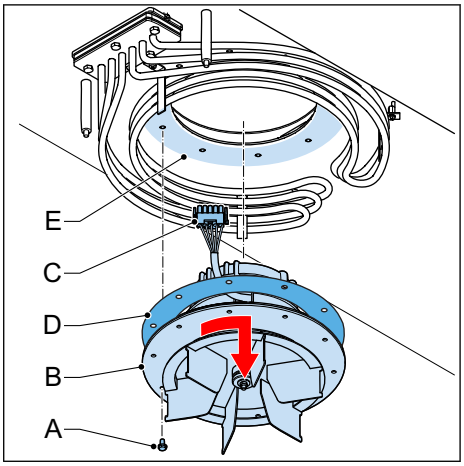



### 7.9.2 Install the blower

1. Install the seal (A).
2. Connect the plug connection (B).
3. Install the blower assembly (C). Push the blower in and counterclockwise to install the blower into place.
4. Tighten the 10 nuts (D).
5. Install the fan plate. Refer to section *7.6.7*.

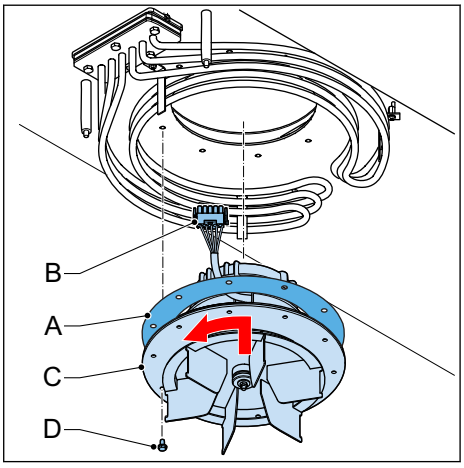


## 7.9.3 Remove the heating element

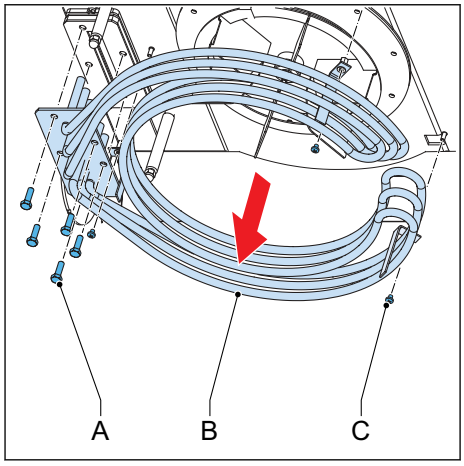



1. Remove the side panels. Refer to section .
2. Remove the fan plate. Refer to section *7.6.6*.
3. Loosen the 3 nuts (C) that secure the heating element to the ceiling.
4. Loosen the 5 screws (A) in the mounting plate.
5. Hold the heating element (B) or pull the heating element down when the gasket sticks.
6. Make sure that you write down or take a picture of the wiring number or check the wiring diagram.
7. Disconnect the wiring with a spanner. Make sure that you hold the rear nut with a spanner when you disconnect the wiring and loosen the nuts.
8. Remove the heating element (B).
9. Clean the ceiling.

## 7.9.4 Install the heating element

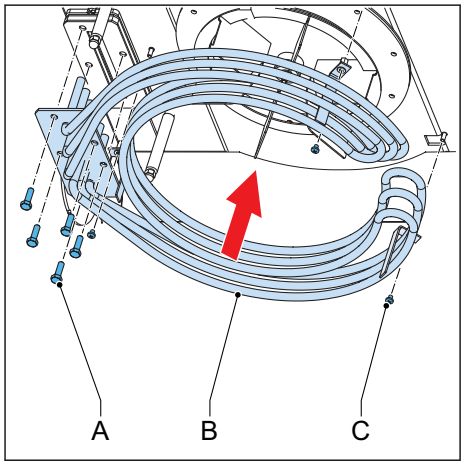


1. Install a new gasket.
2. Connect the wiring with a spanner. Make sure that you hold the rear nut with a spanner when you connect the wiring and tighten the nuts.
3. Install the heating element (B).
4. Tighten the 5 screws (A) in the mounting plate.
5. Tighten the 3 nuts (C) that secure the heating element (B) to the ceiling.
6. Install the fan plate. Refer to section *7.6.7*.
7. Install the side panel. Refer to section .


## 7.9.5 Remove the rotor motor

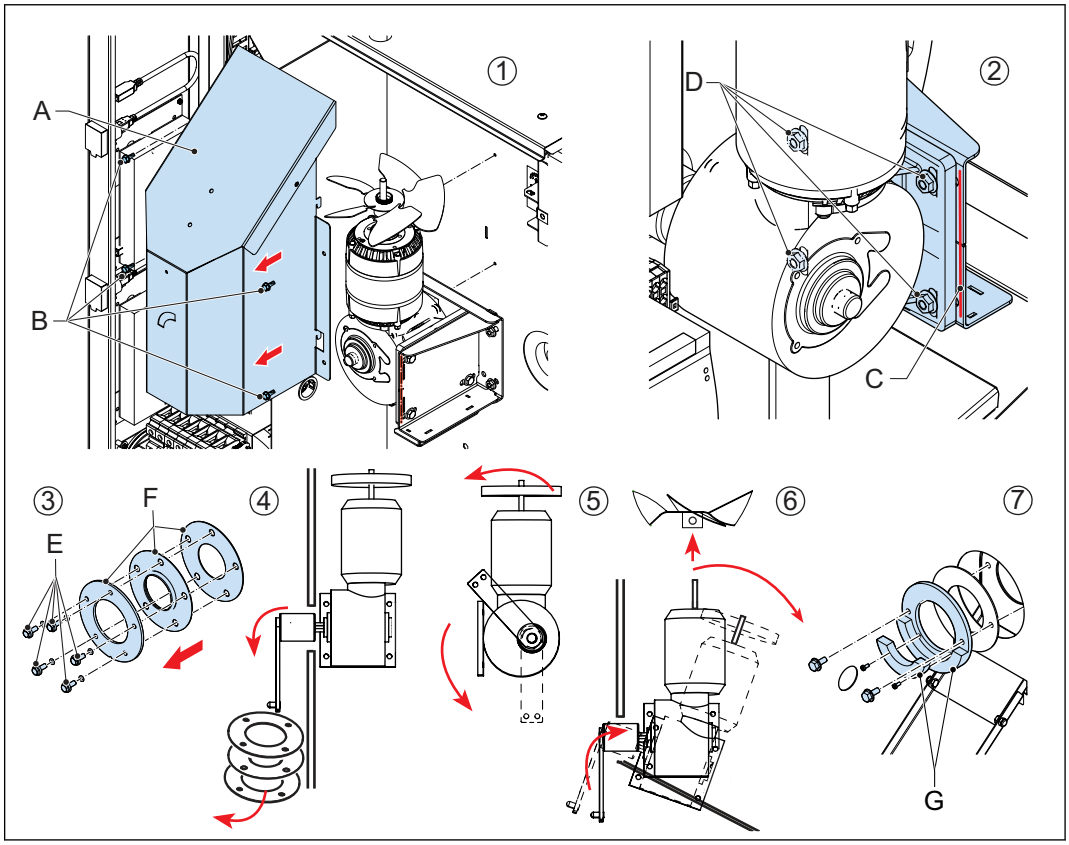


1. Remove the side panel. Refer to section *7.6*.
2. Use a marker to mark the position (C) of the rotor motor on the bracket. Refer to illustration 2.
3. Disconnect the wiring.
4. Remove the air guide (A).
5. Put the drive arm in the downward position. You can manually turn the fan blade to put the drive arm in the downward position. Refer to illustration 5.
6. Remove the fan blade. Refer to illustration 6.
7. Loosen the 5 bolts (E) from the shaft seal mounting plate. Refer to illustration 3.
8. Remove the mounting plate and shaft seals (F) from the drive arm. Refer to illustration 4.
9. Loosen the 4 screws with nuts (D) to remove the rotor motor from the bracket. Refer to illustration 2.
10. Remove the rotor motor. Refer to illustration 6.
11. Replace the rotor bearing assembly (G). Refer to illustration 7.

## 7.9.6 Install the rotor motor

**Caution:** After installation, make sure that the rotation direction of the rotor motor from the inside of the machine is counterclockwise.

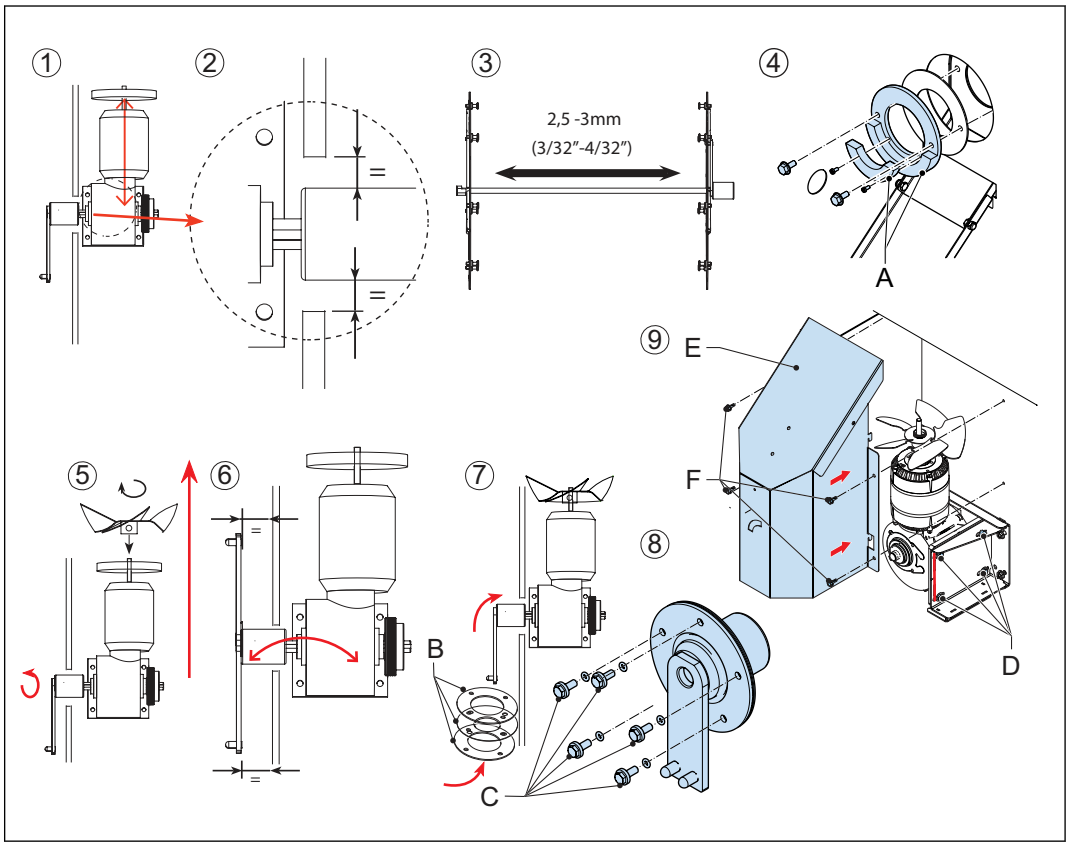


1. Install the bearing assembly (A). Refer to illustration 4.
2. Install the rotor motor. Refer to illustration 1.
3. Make sure that shaft is in the center of the hole. Refer to illustration 2.
4. Align the rotor motor with the marking on the bracket.
5. Tighten the 4 screws (D) to attach the rotor motor to the bracket. Refer to illustration 9.
6. Connect the wiring.
7. Move the mounting plate and shaft seals (B) over the drive arm. Use only new rotor seals.
8. Tighten the 5 bolts (C). Refer to illustration 8.
9. Install the rotor shaft. Make sure that the axial play is 2.5–3.0 mm or 3/32–4/32 inch. Refer to illustration 3.
10. Connect the power supply to test the rotation of the rotor. If the rotation direction is incorrect, change the connection of the cables. The air flow must go up. Refer to illustration 5.
11. Make sure that the distance of the drive arm in top position to the side is the same as the distance to the side in the bottom position. Refer to illustration 6.
12. Install the side panel.

# 8 Troubleshooting

## 8.1 General troubleshooting procedure

1. Before troubleshooting:
   a. Make sure that the time clock is correctly set.
   b. Make sure that the power supply operates correctly.
2. Try to find a solution for the problem. Use the troubleshooting table. Refer to section *8.2*.
3. If you cannot find a solution for the problem, refer to the supplier.

## 8.2 Troubleshooting table

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | The unit does not start. | The power supply is disconnected. | Connect the power supply. |
| | | Short circuit or insulation problem. | Close the mains breaker. |
| | | The fuse is defective. | Replace the fuse on the electrical panel. |
| | | Wiring problem | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected.<br>Make sure that the cable between the CPU board and the I/O board is connected. |
| | | Malfunction of the control boards by mains power surge | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected. |
| | | Malfunction of the touchscreen | Make sure that the touchscreen is clean and dry. |
| | The unit does not heat up. | The contactor is defective. | Replace the contactor. |
| | | The temperature sensor is defective. | Replace the temperature sensor. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | Wiring problem | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected.<br>Make sure that the cable between the CPU board and the I/O board is connected. |
| | | The unit is set to demo mode. | In the service settings, set *Demo mode* to *off*. |
| | | The recipe is incorrect. | Adjust the recipe. |
| | | The high limit thermostat is defective. | Replace the high limit thermostat. |
| | Bad cooking results, uneven cooking. | The fan blade is loose. | Tighten the fan blade. |
| | | The blower is defective. | Replace the blower. |
| | | The capacitor is defective. | Replace the capacitor. |
| | | The ventilation openings in the fan plate are blocked. | Make sure that the ventilation openings in the fan plate are not blocked. |
| | | The contactor hangs. | |
| | | The temperature sensor is defective. | Replace the temperature sensor. |
| | | The temperature sensor is not installed correctly. | Make sure that the temperature sensor is not installed too far into the cooking area. |
| | | The cooling air that flows to the rotor motor is blocked. | Make sure that the air can move freely to the rotor motor. |
| | | The rotor motor does not have the correct rotation direction. | Adjust the the rotation direction of the rotor motor. |
| | The product is not cooked. The cooking takes more time. | The heating element is defective. | Replace the heating element. |
| | | Lost phase | Check the voltages to the machine. |
| | | The contactor is defective. | Replace the contactor. |
| | | The temperature sensor is defective. | Replace the temperature sensor. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | The temperature sensor is not installed correctly. | Make sure that the temperature sensor is not installed too far into the cooking area. |
| | | Wiring problem | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected.<br>Make sure that the cable between the CPU board and the I/O board is connected. |
| | | The high limit thermostat is open. | Cool down the machine. Check the (cooling) fans. Make sure that there are no air blockages. |
| | | The ventilation openings in the fan plate are blocked. | Make sure that the ventilation openings in the fan plate are not blocked. |
| | | The recipe is incorrect. | Adjust the recipe. |
| | | The food product is incorrect. | Change the food product. |
| | | The inner door is not installed. | Install or replace the inner door. |
| | You cannot hear beep sounds. | Wiring problem | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected. |
| | | The buzzer or speaker is defective. | Replace the buzzer or speaker. |
| | | The setting is set to off. | In the manager settings, set *Keyboard beep* to *on*. |
| | Mains fuse or breaker is set to off. | The mains plug is burned or wet. | Replace the mains plug.<br>Make sure that the mains plug is dry. |
| | | The heating element is defective. | Replace the heating element. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | Wiring problem | Make sure that there is no shortage in the wiring.<br>Make sure that the wiring is not wet. |
| | The rotor motor does not stop. | The rotor switch is pushed in. | |
| | | Malfunction of the I/O board | Replace the I/O board. |
| | There light does not come on. | The LED lamp is defective. | Replace the LED lamp. |
| | | The contactor is defective. | Replace the contactor. |
| | | Wiring problem | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected. |
| | | The setting is set to off. | In the manager settings, set *Toggle light* to *on*. |
| | The door does not close correctly. | The door is not installed correctly. | Make sure that you installed the door correctly. Make sure that the door is level. |
| | There is leakage of steam through the door. | The door is not installed correctly. | Make sure that you installed the door correctly. Make sure that the door is level. |
| | The light does not go off. | The contactor is defective. | Replace the contactor. |
| | | The contacts stick. | |
| | The cooking area of the unit fills up with grease. | The drain filter is not clean. | Clean the drain filter. |
| | | The grease drain is blocked. | Clean the grease drain. |
| | | The grease drain valve is defective. | Replace the grease drain valve. |
| | | Wiring problem | Make sure that the wiring is not loose.<br>Make sure that the connectors are connected. |
| | The controls does not operate. | Leakage of steam through the rotor shaft. | Replace the shaft seal. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | Leakage of steam through the door. | Make sure that you installed the door correctly. Make sure that the door is level. |
| | | The controller is overheated. | Make sure that the air can move freely to the controller. |
| | | The fuse is defective. | Replace the fuse on the electrical panel. |
| | There is water on the floor. | The water drain is blocked. | Clean the water drain. |
| | | The water drain hose is not installed correctly. | Install the water drain hose correctly. Refer to the installer manual. |
| | | The water drain valve is defective. | Replace the water drain valve. |
| | | The water inlet valve is defective. | Replace the water inlet valve. |
| | | The water inlet valve is blocked. | Clean the water inlet valve. |
| | | The pump is defective. | Replace the pump. |
| | Bad cleaning results | The settings are incorrect. | Do a check of the parameters of the cleaning settings. |
| | | The water supply is disconnected. | Connect the water supply. Open the tap. |
| | | The descale filter is saturated. | Replace the descale filter. |
| | | No descale filter is installed. | Install a descale filter. Refer to the water hardness. |
| | | The cleaning cartridge is not installed correctly. | Install the cleaning cartridge correctly. Refer to the user manual. |
| | | The type and amount of detergent is incorrect. | Use the correct type and amount of detergent. |
| | | The water drain valve is defective. | Replace the water drain valve. |
| | | The grease drain valve is defective. | Replace the grease drain valve. |
| | | The suction filter is blocked. | Clean the suction filter. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | The rinse valves are defective. | Replace the rinse valves. |
| | | The pump is defective. | Replace the pump. |
| | | The valve at suction side is defective. | Replace the valve at suction side. |
| | Black or brown spots on the bottom or filter screens. | The detergent did not dissolve, because the unit was not cooled down. | |
| | Grease or moisture come out of the side panel. | The slide is defective. | Replace the slide. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| Inner door | Broken glass | The inner door is closed with too much force. | Make sure that the user does not close the inner door with too much force. |
| | | The bolts and nuts of the inner door are loose. | Tighten the bolts and nuts of the inner door. |
| | | No PTFE ring is installed between the steel and glass. | Replace the door. |
| | The inner door does not open correctly. | The inner door is not installed correctly. | Make sure that the inner door is installed correctly. Make sure that the inner door is level. Adjust the inner door as necessary. |
| Outer door | Broken glass | The outer door is closed with too much force. | Make sure that the user does not close the outer door with too much force. |
| | | The bolts and nuts of the inner door are loose. | Tighten the bolts and nuts of the outer door. |
| | The outer door does not open correctly. | The outer door is not installed correctly. | Make sure that the outer door is installed correctly. Make sure that the outer door is level. Adjust the outer door as necessary. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| Heating element | The unit does not get the set temperature. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The contactor is defective. | Replace the contactor. |
| | | The heating element is defective. | Measure the electrical resistance of the heating element. Refer to section *7.8.1*. If necessary, replace the heating element. Refer to section *7.9.3*. |
| | The duration of the cooking time is too long. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The heating element is defective. | Measure the electrical resistance of the heating element. Refer to section *7.8.1*. If necessary, replace the heating element. Refer to section *7.9.3*. |
| Safety thermostat | The contactor is not set to on after the start of a recipe. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The safety thermostat is defective. | Make sure that the safety thermostat makes contact. If necessary, replace the safety thermostat. |
| | The contactor is set to off before the unit has set temperature. | The safety thermostat is defective. | Make sure that the safety thermostat is turned fully clockwise. |
| | | The safety thermostat is not in the correct position. | Make sure that the safety thermostat is in the correct position. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| Contactor | The contactor is not set to on after the start of a recipe. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The coil is defective. | Measure the electrical resistance of the coil. If the resistance is not ±600 Ω, replace the coil. |
| | The contactor is set to on, but there is no power on the lamp or the heating element. | The contact is burned. | Do a check of the contacts of the contactor. |
| | The rotor motor does not operate.<br>The blower does not operate. | The rotor motor does not operate. | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The capacitor is defective. | Measure the electrical capacitance of the capacitor. Refer to section *7.8.3*. If necessary, replace the capacitor. |
| Rotor motor | The rotor motor does not operate. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | No power supply connected | Connect the unit to the power supply. |
| | The main fuse is burned. | The coil is defective. | Do a check of the insulation value of the coil on 500 V. Make sure that the minimum value is 0.5 MΩ. If necessary, replace the rotor motor. |
| | The rotor motor operates, but stops during operation. | The rotor motor is defective. | Measure the electrical resistance of the rotor motor. Refer to section *7.8.4*. If necessary, replace the rotor motor. Refer to section *7.8.4*. |
| | | The gearbox has a blockage. | |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | The capacitor is defective. | Measure the electrical capacitance of the capacitor. Refer to section *7.8.3*. If necessary, replace the capacitor. |
| | | The coil is overheated. | Make sure that fan on the rotor motor has the correct rotation direction. The air must flow upwards over the rotor motor. |
| | | | Do a check of the cooling circuit of the rotor motor. |
| | | | Make sure that the unit is not near another heat source. |
| | | | Measure the temperature of the rotor motor during operation. |
| Seal of the rotor motor shaft | Grease leaking | The seal of the rotor motor shaft has damage. | Replace the seal of the rotor motor shaft. |
| | | The seal of the rotor motor shaft is not installed correctly. | Make sure that the rotor motor is correctly installed. |
| Blower | The blower does not operate. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | No power supply connected | Connect the unit to the power supply. |
| | The main fuse is burned. | The coil is defective. | Do a check of the insulation value of the coil on 500 V. Make sure that the minimum value is 0.5 MΩ. If necessary, replace the blower. |
| | The blower operates after starting the blower manually. | The capacitor is defective. | Measure the electrical capacitance of the capacitor. Refer to section *7.8.3*. If necessary, replace the capacitor. |
| | The blower operates, but stops during operation. | The coil is overheated. | Do a check of the cooling circuit of the blower. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | | Make sure that fan on the rotor motor has the correct rotation direction. The air must flow upwards over the rotor motor. |
| | | | Make sure that the unit is not near another heat source. |
| | | | Measure the temperature of the blower during operation. |
| | The temperature showed on the touchscreen goes up very fast. | The blower does not operate. The heat stays in the top. | Check the I/O output board and/or replace the blower motor. |
| Temperature sensor | The temperature is higher than the set temperature. | The temperature sensor is defective. | Measure the electrical resistance of the temperature sensor. Refer to section *7.8.5*. Replace the temperature sensor. |
| | | The temperature sensor is not installed correctly. | Make sure that the temperature sensor is not installed too far into the cooking area. |
| | The unit does not get the set temperature. | The temperature sensor is defective. | Measure the electrical resistance of the temperature sensor. Refer to section *7.8.5*. Replace the temperature sensor. |
| | | The temperature sensor is not installed correctly. | Make sure that the temperature sensor is not installed too far into the cooking area. |
| | Error message: PT1000 underflow | The temperature sensor is defective. The wiring is shorted. | In the service settings, do an I/O test. |
| | Error message: Sensor shorted | The temperature sensor is defective. The wiring is shorted. | In the service settings, do an I/O test. |
| | Error message: PT1000 overflow | The temperature sensor is defective. The wiring is disconnected. | In the service settings, do an I/O test. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | Error message: Sensor open | The temperature sensor is defective. The wiring is disconnected. | In the service settings, do an I/O test. |
| Touchscreen | The touchscreen does not operate. | Wiring problem | Make sure that the cable between the CPU board and the touchscreen is connected. |
| | | | In the manager settings, do a hard reset. |
| | | The touchscreen is defective. | Replace the touchscreen. |
| | The touchscreen is difficult to operate. | Incorrect setting of the parameter | Make sure that the setting of the parameter is correct. |
| | | There is moist on the touchscreen. | Clean the touchscreen. Remove moist from the touchscreen. |
| | The touchscreen does not come on. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | | Make sure that the CPU board has power. Make sure that the two LED indicators flash. |
| | | The fuse is burned. | Do a check of the fuse on the I/O board. If necessary, replace the fuse. |
| | | | Do a check of the other fuses. If necessary, replace the fuse. |
| | | Malfunction of the flat cable | Make sure that the flat cable is connected. Make sure that the flat cable has no damage. If necessary, replace the flat cable. |
| | | The touchscreen is defective. | Replace the touchscreen. |
| | | The CPU board is defective. | Replace the CPU board. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | The power board is defective. | Replace the power board. |
| | The touchscreen shows strange data. | Incorrect setting of the parameter | Make sure that the setting of the parameter is correct. |
| | | Incorrect version of the software. | Do an update of the software. |
| Pump | The pump does not operate. | Malfunction of the suction valve (Q1) | Make sure that the suction valve is closed while the water inlet valve is open and the water flows into the unit. If necessary, replace the suction valve. |
| | | The suction filter is blocked. | Clean the suction filter. |
| | | Wiring problem | In the service settings, do an I/O test of the pump. |
| | | | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The voltage decreases. | Do a check of the power supply. |
| | The pump has a leakage. | The swivel coupling is loose. | Tighten the swivel coupling. |
| | | The swivel coupling is broken. | Replace the swivel coupling. |
| | | The pump membrane is broken. | Replace the pump. |
| Water inlet valve (W1) | There is too much water in the unit. | The water inlet valve has a blockage. | Clean the water inlet valve. |
| | | The water inlet valve is defective. | Replace the water inlet valve. |
| | | Missing reducer (10 l/min) | Replace the water inlet valve with the correct water inlet valve. |
| | No water flows into the unit. | Wiring problem | Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | | The water inlet valve is defective. | Replace the water inlet valve. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| Valve at suction side (Q1) | No water stays in the unit. | The valve does not close when the unit fills with water.<br>The valve does not open when the unit fills with water. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| Rinse valves (Q2 and Q3) | No water comes out of the sprayers. | The rinse valves stay closed. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | Water comes out of the sprayers constantly. | The rinse valves stay open. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | Water alternately comes out of the sprayers for 1 minute and at full pressure from one sprayer for the other minute. | One of the rinse valve stays open. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| Grease drain valve (Q4) | Oil stays on the bottom of the unit. | The grease drain valve does not open. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |

| Part | Problem | Possible cause | Possible solution |
|---|---|---|---|
| | | The grease drain valve does not close. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| Water drain valve (Q5) | There is water in the grease container or on the floor. | The water drain valve does not open. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |
| | There is soap and grease in the unit after the cleaning program. | The water drain valve does not close and the water flows directly into the water drain hose. | In the service settings, do an I/O test of the valve. |
| | | | Do a check of the wiring on the I/O board. Make sure that the wiring is not loose. Make sure that the connectors are connected. |

## 8.3 Error messages

| Error code | Error message | Possible cause | Possible solution |
|---|---|---|---|
| Error 2 | Sensor overflow (s) | The temperature reading is too high. The resistance is higher than 2200 Ω. | Replace the temperature sensor. Replace the I/O board. Make sure that the wiring is not loose. |
| Error 1 | Sensor underflow (s) | The temperature reading is too low. The resistance is lower than 1000 Ω. | Replace the temperature sensor. Replace the I/O board. Make sure that the wiring is not shorted. |
| Error 5 | Communication failure | The I/O board has a defect. The ribbon cable has damage. | Replace the I/O board. Replace the ribbon cable. |

| Error code | Error message | Possible cause | Possible solution |
|---|---|---|---|
| Error 15 | Motor failure | The motor of the blower is overheated.<br>The motor has a defect.<br>The sensor wiring is incorrect. | Make sure that air is not blocked.<br>Replace the capacitor.<br>Replace the motor.<br>Make sure that the sensor wiring is correct.<br>Replace the I/O board. |
| Error 11 | Door open picture | The door is open.<br>The door switch has a defect.<br>The sensor wiring is incorrect. | Close the door.<br>Replace the door switch.<br>Make sure the sensor wiring is correct. |
| Error 12 | Lime filter full | The maximum amount of water is used.<br>The setting of the water hardness is not correct.<br>The lime filter is not connected. | Replace the lime filter. In the manager menu, set the parameter *Lime filter replaced* to *yes*.<br>Make sure that the setting of the water hardness is correct.<br>In the service menu, set the water hardness to '-'. |
| Message | Please clean first | The cleaning program was not completed because the power supply was disconnected.<br>The user stopped the cleaning program. | Start the cleaning program. |

## 8.4 Error messages - USA hood installed

**Note:** For more information, refer to the hood service manual.

| Error code | Error message | Possible cause | Possible solution |
|---|---|---|---|
| Error 19 | Hood: not active | The power of the hood is off.<br>The power supply is disconnected. | Set the power of the hood to on.<br>Connect the power supply. |
| Message | Activate hood | The power of the hood is off. | Set the power of the hood to on. |

| Error code | Error message | Possible cause | Possible solution |
|---|---|---|---|
| Error 17 | Hood: filter misplaced | The filter of the hood is not installed correctly.<br>The pressure switch has a defect. | Make sure that the filter of hood is installed correctly.<br>Replace the pressure switch. |
| Error 18 | Hood: filter saturated | The filter of the hood is saturated.<br>The pressure switch has a defect. | Replace the filter of the hood.<br>Replace the pressure switch. |

# 9 Technical data

## 9.1 General specifications

| Parameter | Specification |
|---|---|
| Water connection (inch) | ¾ |
| Water pressure (psi) | 29–72 |
| Acidity (pH) | 7–8 |
| Chlorides (ppm) | <30 |
| Hardness (dH) | <4 |
| Drain connection (inch) | >1 ⅝ |

## 9.2 Dimensions

| Parameter | Specification |
|---|---|
| Width (inch) | 41 ¼ |
| Depth (inch) | 38 ⅜ |
| Height (inch) | 84 |

## 9.3 Mass

| Parameter | Specification |
|---|---|
| Gross mass (lb) | 1091 |
| Net mass (lb) | 948 |

## 9.4 Electrical specifications

| Parameter | Specification |
|---|---|
| Voltage (V) | 208 (3~) |
| Maximum nominal current (A) | 35,5 (2x) |
| Power (W) | 22000 |
| Frequency (Hz) | 50/60 |
| Plug | 2x NEMA15-50P |
| Power cable length (inch) | 75 |

## 9.5 Ambient conditions

| Parameter | Specification |
|---|---|
| Operation temperature (°F) | 32–95 |
| Storage temperature (°F) | 32–95 |
| Relative humidity (%) | 20–80 |


## 9.6 Noise level

| Parameter | Specification |
|---|---|
| Maximum noise level (dB(A)) | <70 |

# 10 Spare parts


| Priority | Description |
|---|---|
| None | General spares |
| 1 | Critical |
| 2 | Recommended |

## 10.1 E-panel

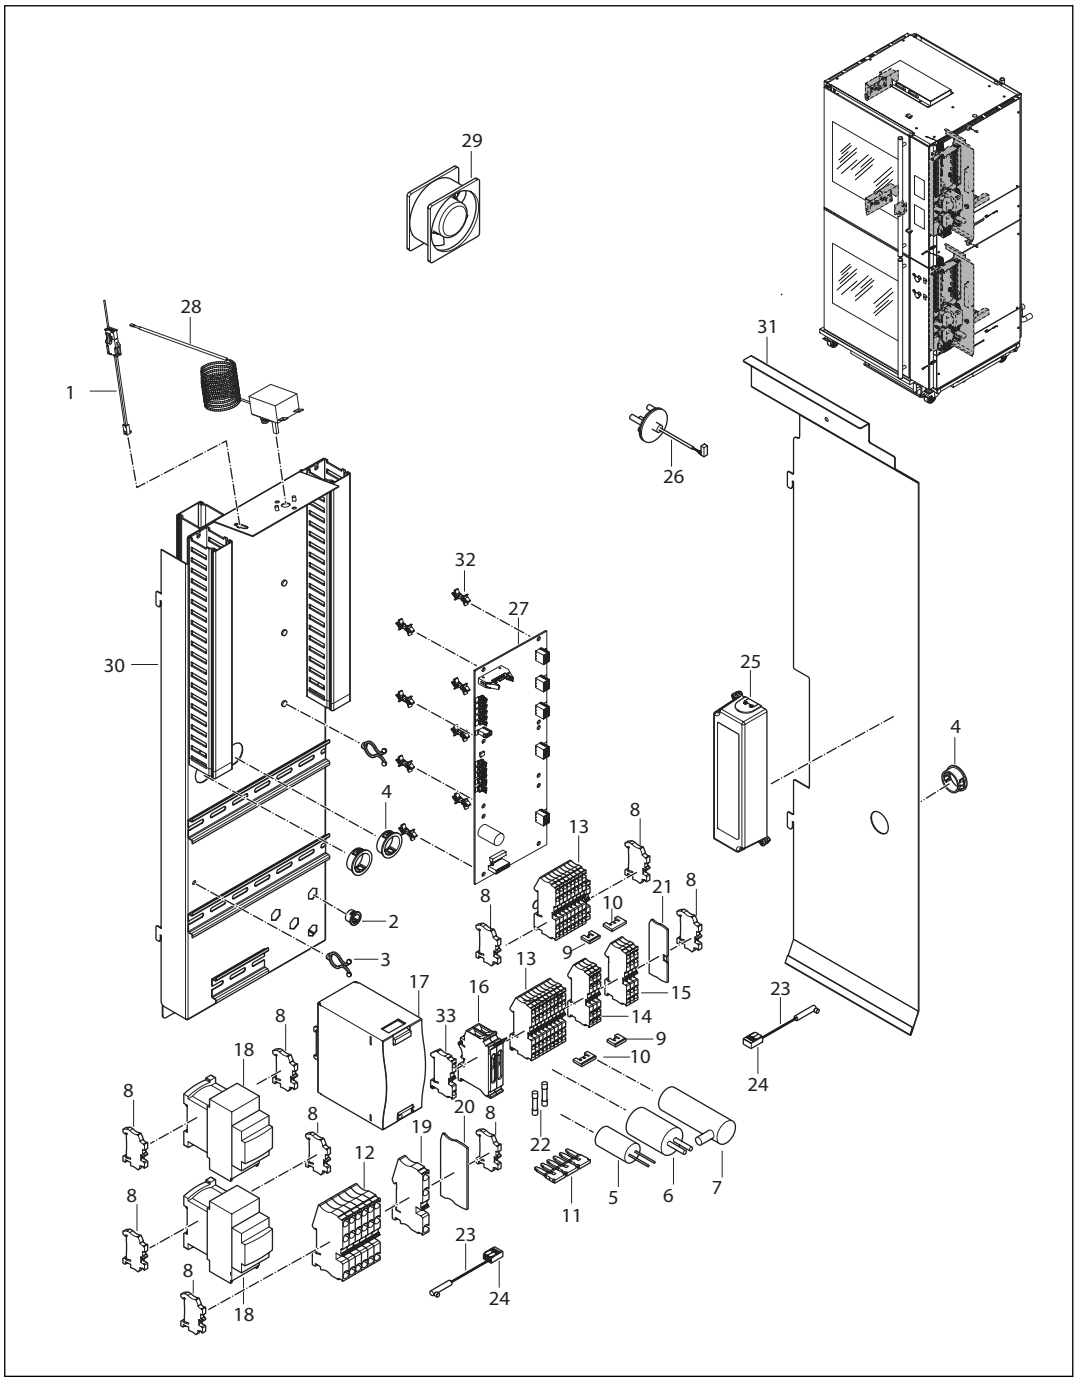

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 0 | 900016880 | E-panel (complete) | | |
| 1 | 900013574 | Jumper wire I/P Board | | |
| 2 | 4288231 | Bolt hexagon flange DIN 985 M5x10 A2 | | |
| 3 | 4289020 | Wire clamp | | |
| 4 | 900016250 | Grommet | | |
| 5 | 900016251 | Capacitor 3µF | | |
| 6 | 9192034 | Capacitor 6µF | | |
| 7 | 900016879 | Capacitor 8 µF | | |
| 8 | 900016257 | End clamp | | |
| 9 | 900016273 | Plug in bridge 3 | | |
| 10 | 900016272 | Plug in bridge 4 | | |
| 11 | 900016883 | Jumper 10.2 mm 50A PHX | | |
| 12 | 900016881 | Terminal PT 10-3 (GY) 10 qmm PHX | | |
| 13 | 900016276 | Terminal PT4-4 Gray | | |
| 14 | 900016277 | Terminal PT4-4 Blue | | |
| 15 | 900016275 | Terminal PT4-4 (GN/YE) | | |
| 16 | 900016255 | Fuse Holder | | 1 |
| 17 | 9311016s | Power supply 24V/10A | | 1 |
| 18 | 900016243 | Contactor LC1D183BL 24V DC | | 1 |
| 19 | 900016882 | Terminal PT 10-3 (PE) 10 qmm PHX | | |
| 20 | 9191345 | End Cover D-ST 10 PHX | | |
| 21 | 900016258 | End cover | | |
| 22 | 900016254 | Fuse 10A | | 1 |
| 23 | 3500020 | Switch Proximity 4880 | | 1 |
| 24 | 9291122 | WAGO connector 2p | | |
| 25 | 9381038s | LED Driver 100W 12V | | 2 |
| 26 | 9340266s | PT1000 TDR-E | | 1 |
| 27 | 9192400s | PCB Main (IO board) | | 1 |
| 28 | 900016249 | Thermostat 50-320°C | | 1 |
| 29 | 900016247 | Fan EBN 8556N-696 | | |
| 30 | 500016894 | E-panel base plate TDR-AC 2.0 | | |
| 31 | 500011888 | E-panel partition plate + studs | | |
| 32 | 9110028 | Spacer P-print nylon | | |
| 33 | 900013565 | Terminal with Diode | | 1 |


## 10.2 Cables

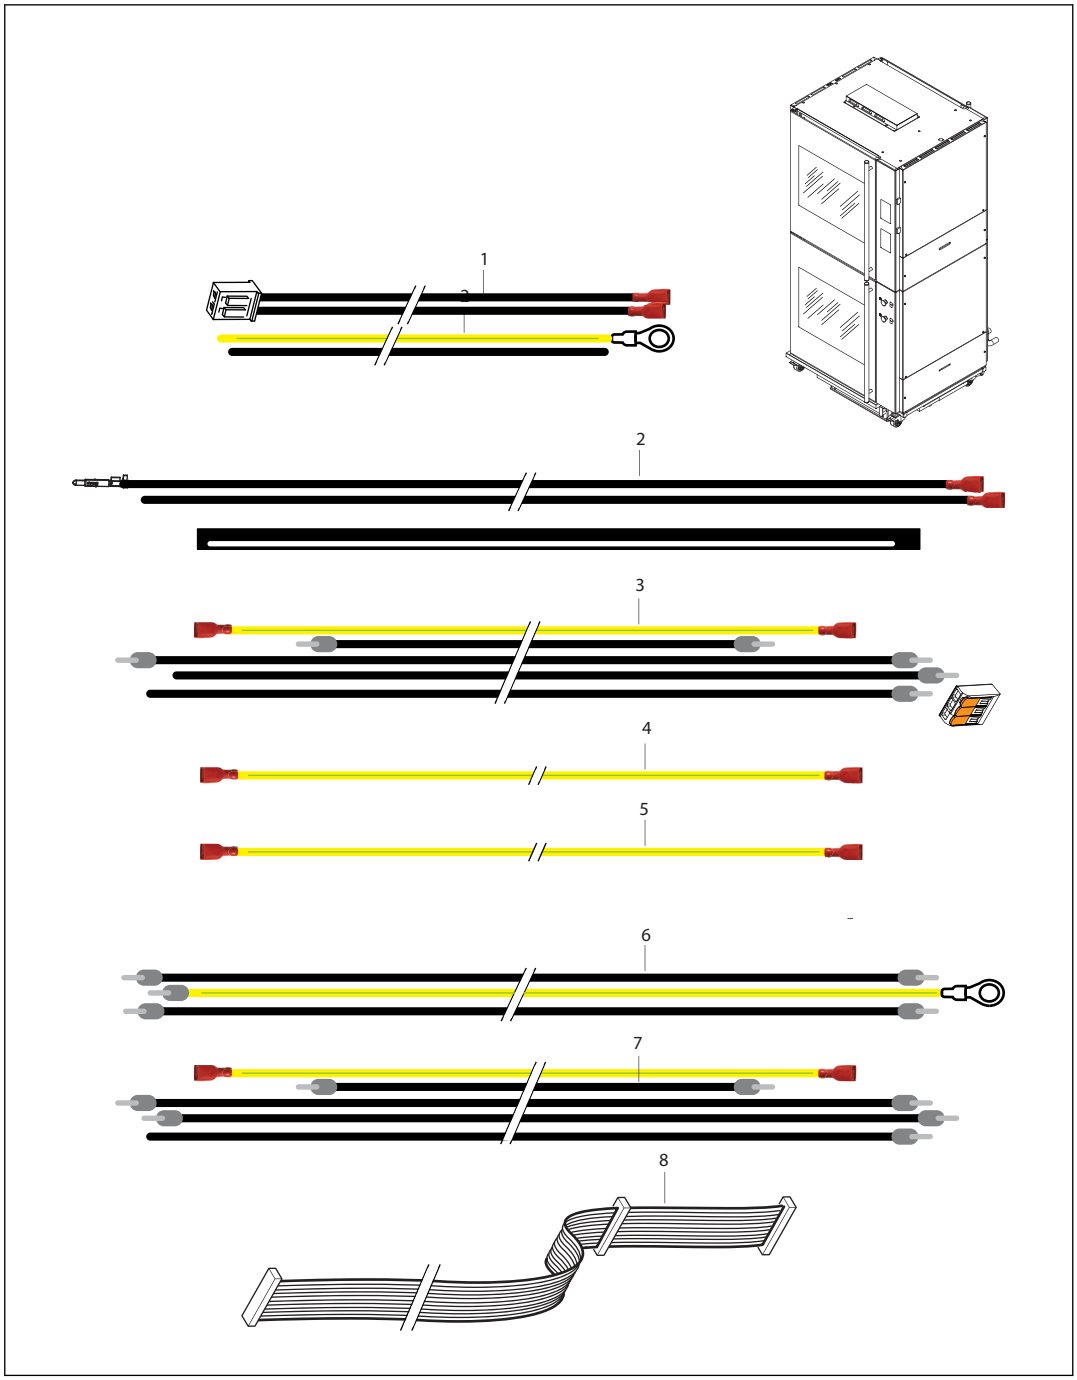


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 0 | 900015286 OR 900016886 | Cable kit Complete E-panel | | |
| 1 | 9311047 | Cable speaker S- control | | |
| 2 | 900016285 | Cable Drain Pump TDR Single | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 3 | 900016826 | Cable Rotor Button Operator Side | | |
| 4 | 900016827 | Wire List PE Panel | | |
| 5 | 900016828 | Wire List PE UF | | |
| 6 | 900016889 | Cable Cooling Fan | | |
| 7 | 900016830 | Cable Rotor Button Non-operator Side | | |
| 8 | 9172314 | Ribbon cable | | |


## 10.3 Panels

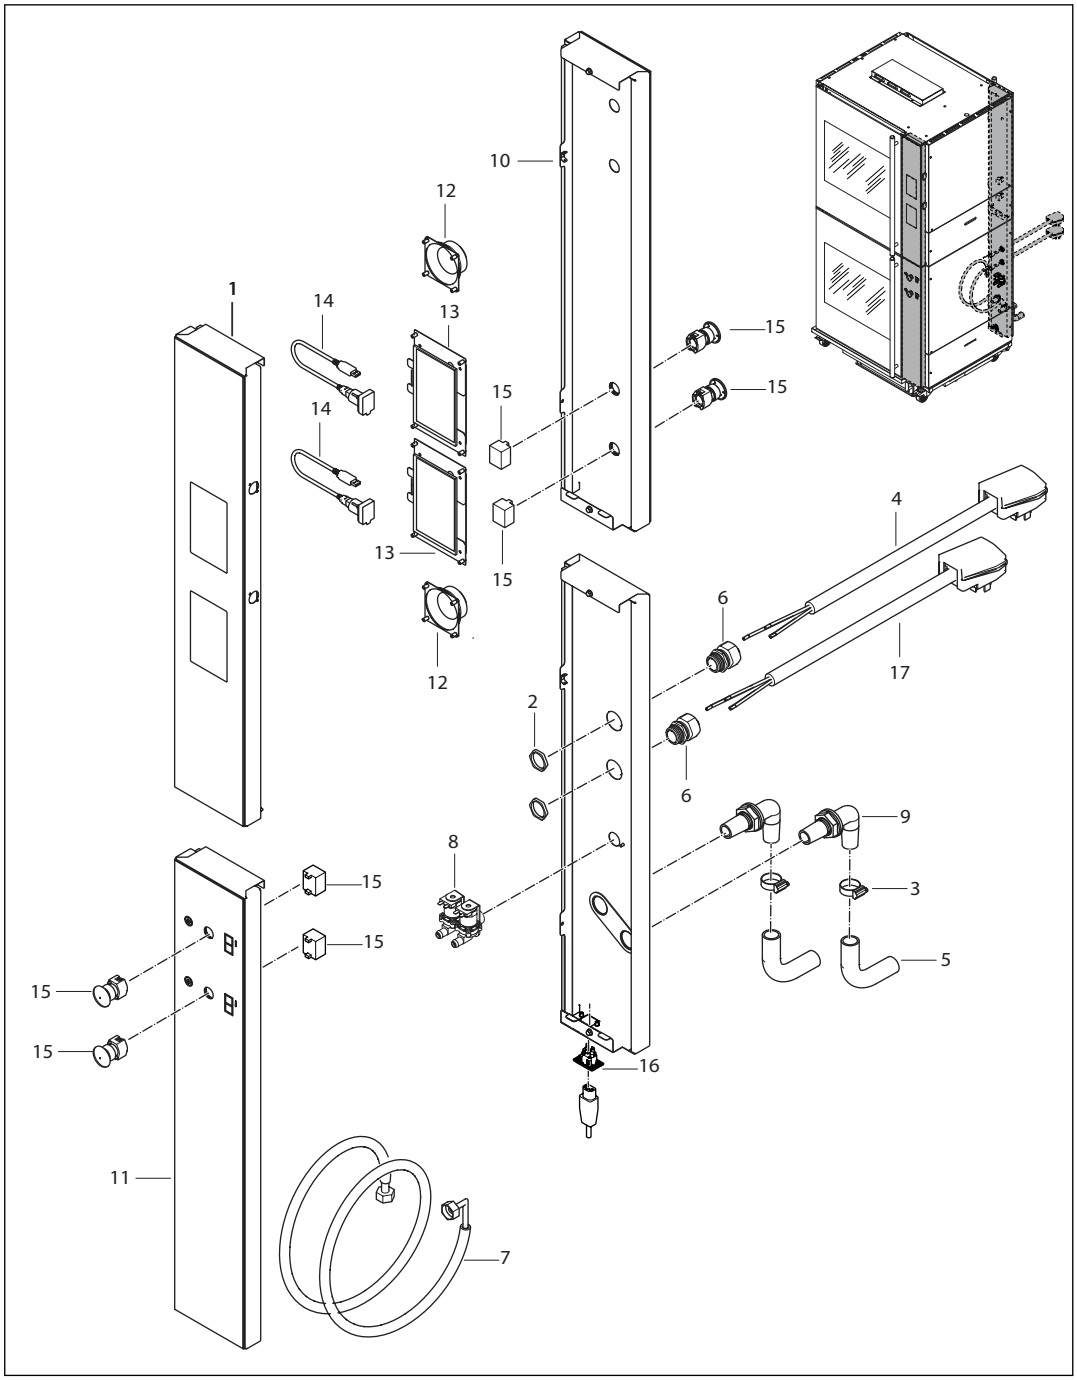


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 900016856 | Assembly Panel + Glass TDR 8+8 AC S-Control Operator Side | | 2 |
| 2 | 3701068 | Nut M32 cable gland | | |
| 3 | 900016245 | Hose Clamp 26-38mm | | |
| 4 | 9174225 | POWER CORD UL 8 AWG 140"15-50P_LEADS- top unit | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 5 | 500012471 | Hose Drain External | | |
| 6 | 9291040 | Cable gland M32 | | |
| 7 | 9340157 | Connection Water (UL) | | |
| 8 | 9312085 | Valve-E 3/4" 12mm | | 1 |
| 9 | 900013571 | Drain hose connection | | |
| 10 | 9312101 | Panel Rotorswitch (double) | | |
| 11 | 9312101 | Panel Rotorswitch (double) | | |
| 12 | 9311046s | Speaker | | 2 |
| 13 | 9292286 | PCB CPU S-contol with software | | 2 |
| 14 | 9310161s | USB | | 1 |
| 15 | 900018615 | Service Kit Rotor Button | | 1 |
| 16 | 900016878 | Socket grease tray heating | | 1 |
| 17 | 9172426 | POWER CORD UL 8 AWG 100"15-50P_LEADS- bottom unit | | 1 |


## 10.4 Doors

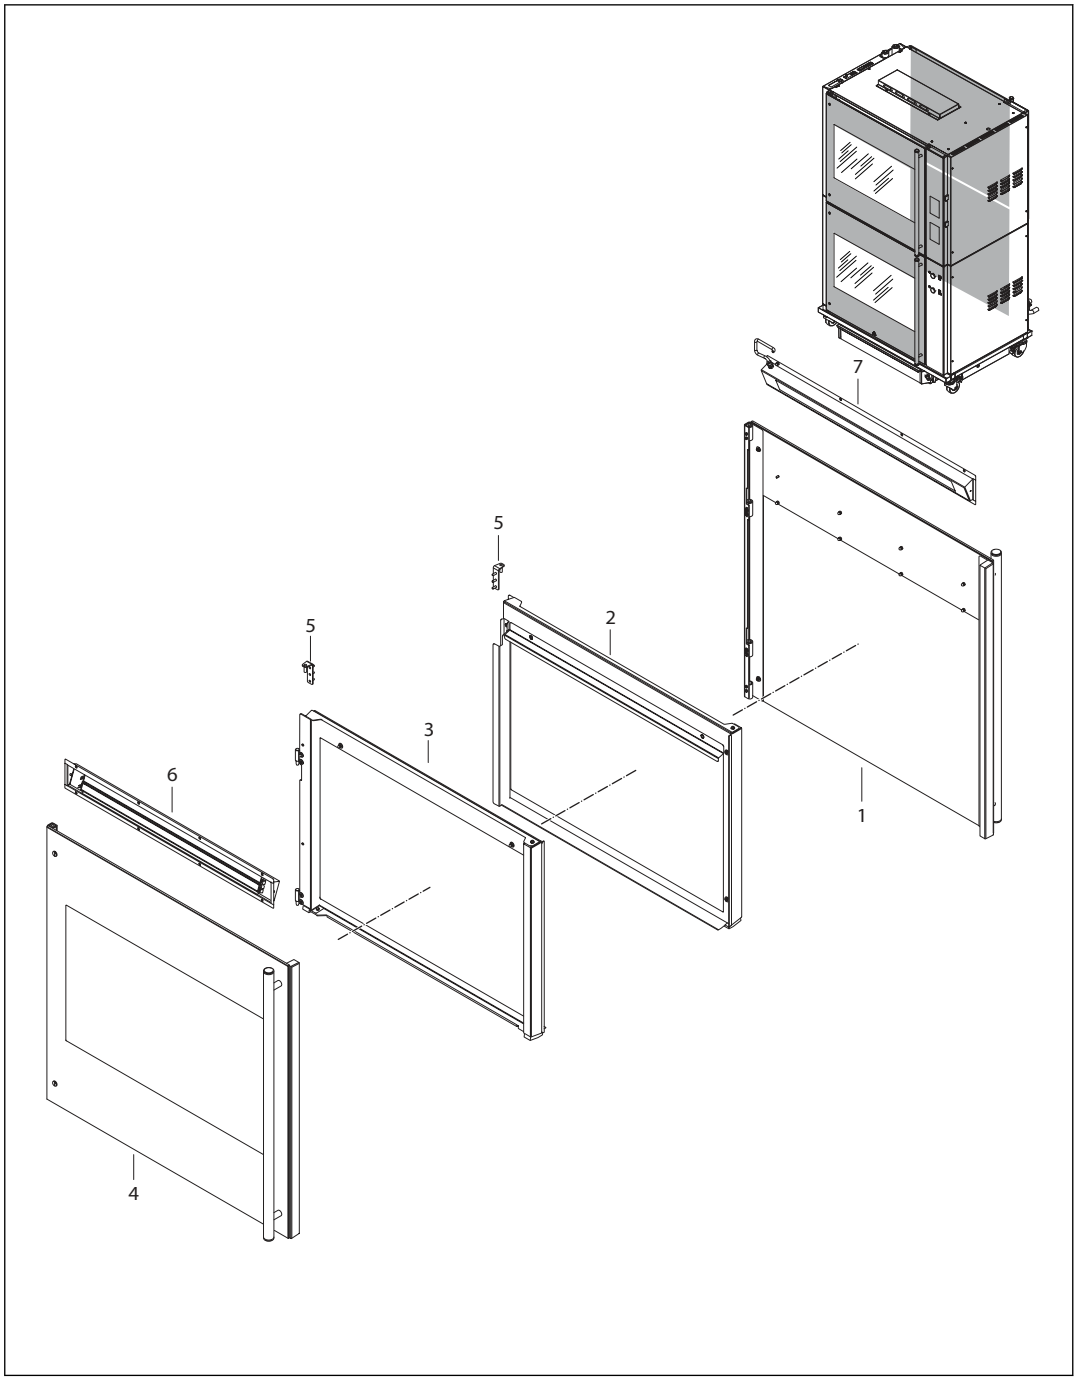


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 900016306 | Assembly Outer Door Non Operator Side TDR | | |
| 2 | 900016307 | Assembly Inner Door Non Operator Side TDR | | |
| 3 | 900016311 | Assembly Inner Door Operator Side TDR | | |


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 4 | 900016310 | Assembly Outer Door Operator Side TDR | | |
| 5 | 500011291 | TDR Top Hinge | | |
| 6 | 900016821 | Assembly LED Operator Side | | 2 |
| 7 | 900016820 | Assembly LED Non Operator Side TDR | | 2 |

## 10.5 Rotor

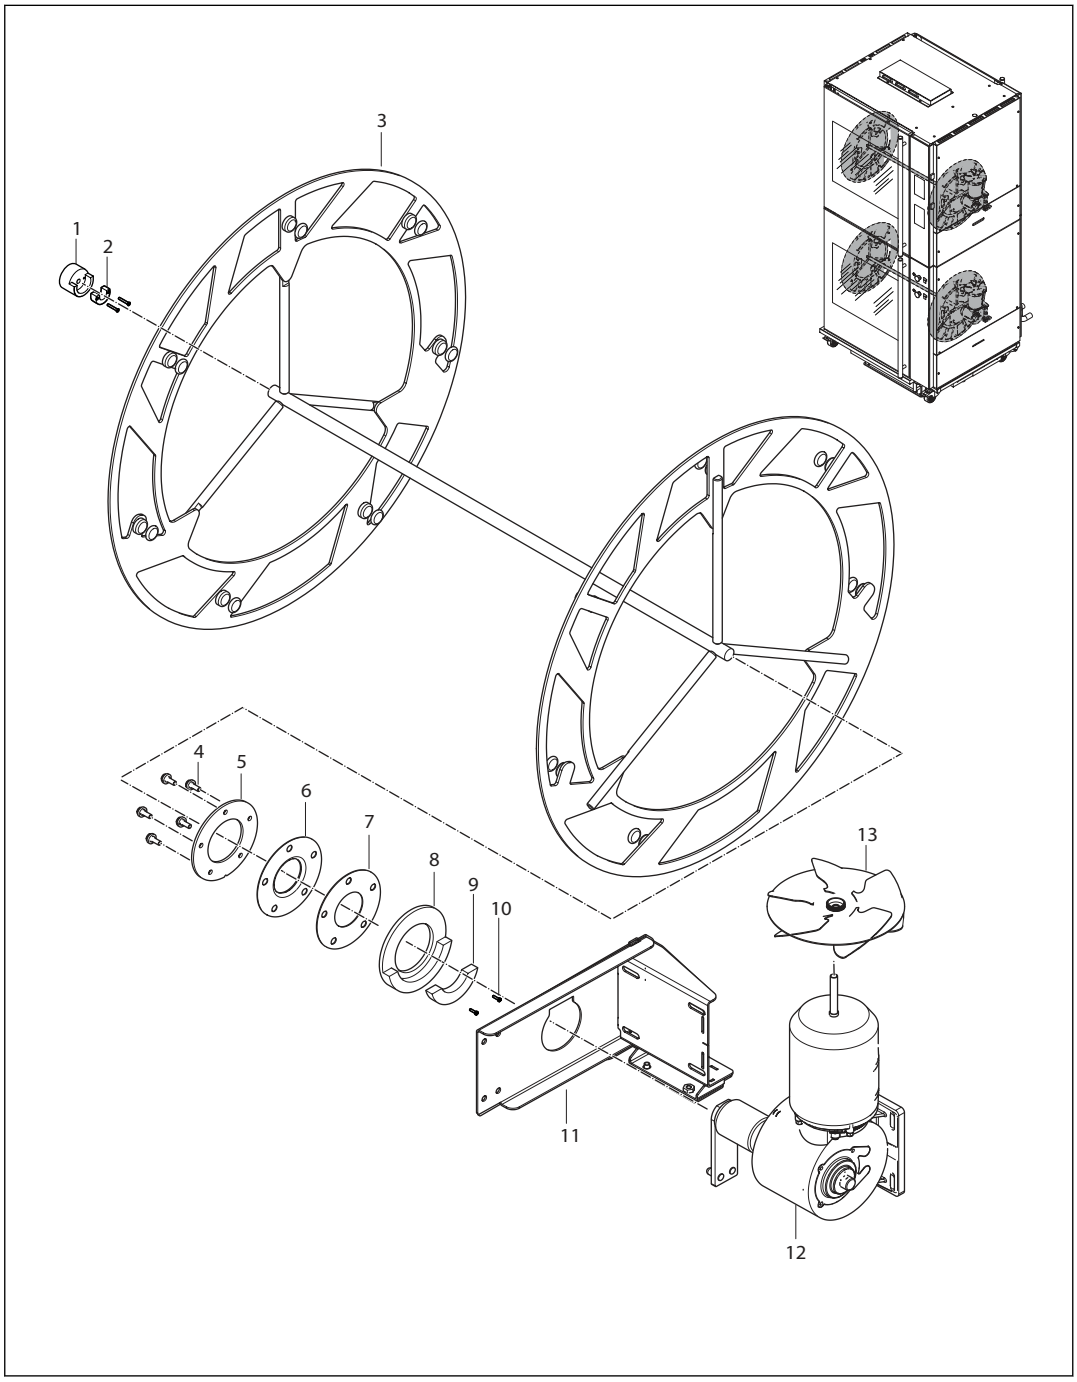


| Position number | Part number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1-2 | 9310180s | Rotor bearing | | |
| 3 | 9310108s | Rotor TDR-8 | | |
| 4 - 7 | 9312002s | Bolt M5 + PTFE Seal | | 1 |
| | | Pressure Ring, Lipseal Rotor | | 1 |
| | | Silicone Disc Ø100 | | 1 |
| | | Seal Drive Motor 5 Holes | | 1 |
| 8 | 900019513 | Bearing support | | 1 |
| 9-10 | 900016823 | Rotor motor bearing | | 1 |
| 11 | 9310424 | Support Motor Parvalux | | |
| 12 | 9340105s | Motor SD 8 WS Marked EN | | 2 |
| 13 | 9172078 | Blade Fan 150 mm For Parvalux | | |

## 10.6 Blower and heating

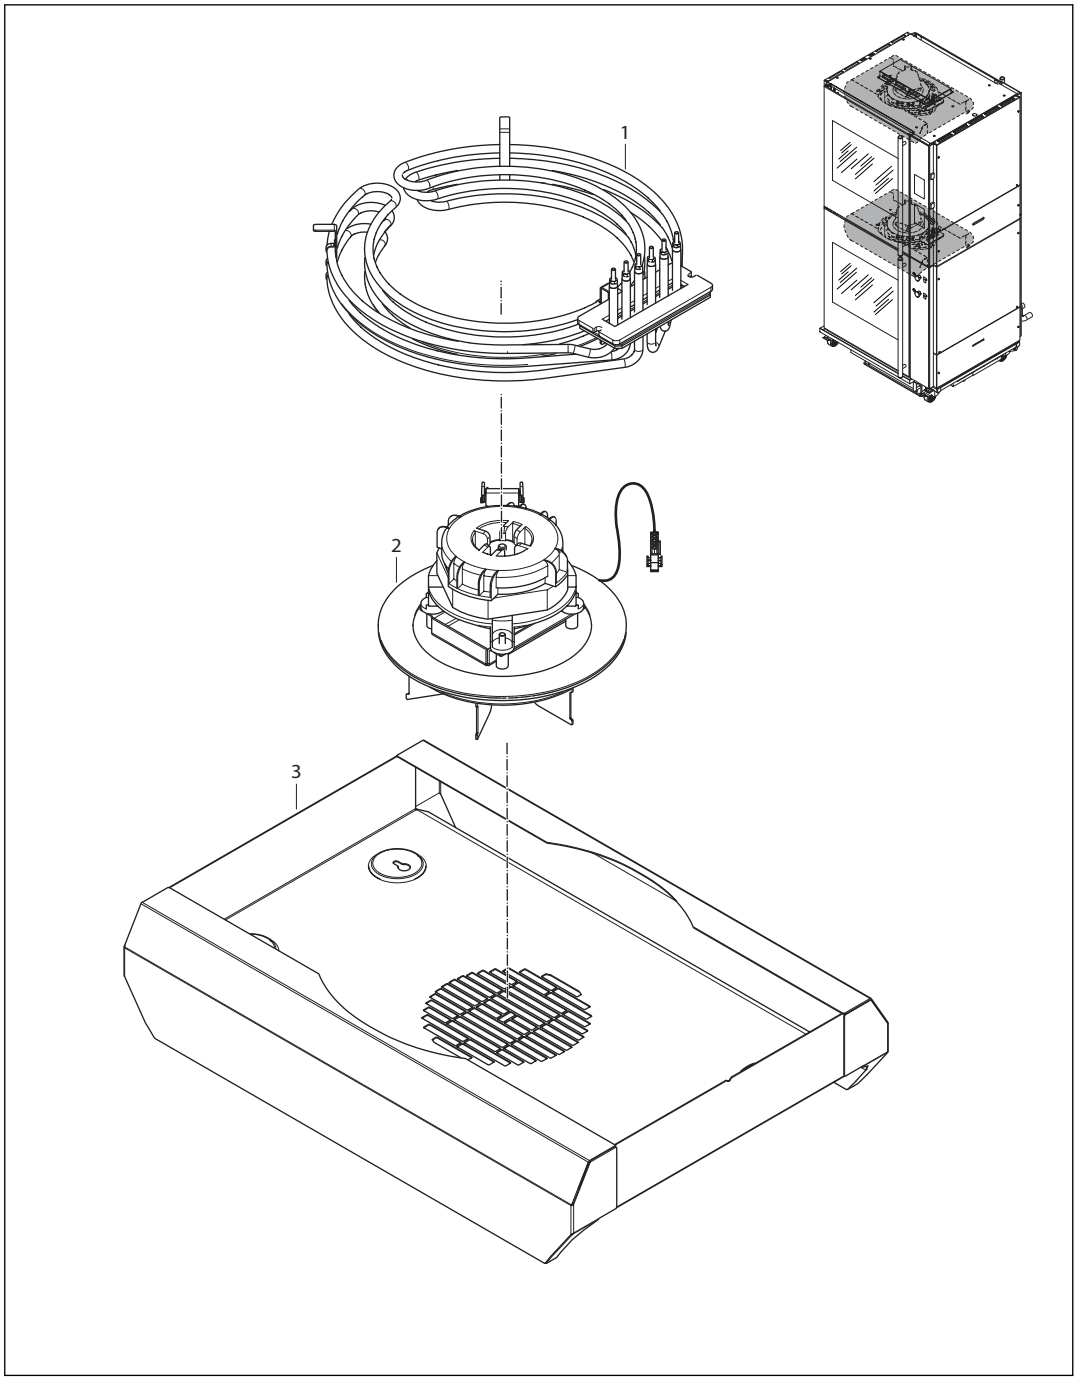



| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 900016791 | Element 10.8 kW/208V high | | 1 |
| 2 | 9310149s | Motor Fan | | 1 |
| 3 | 900016312 | Assembly Fan Plate TDR 8 | | |

## 10.7 Cartridge holder

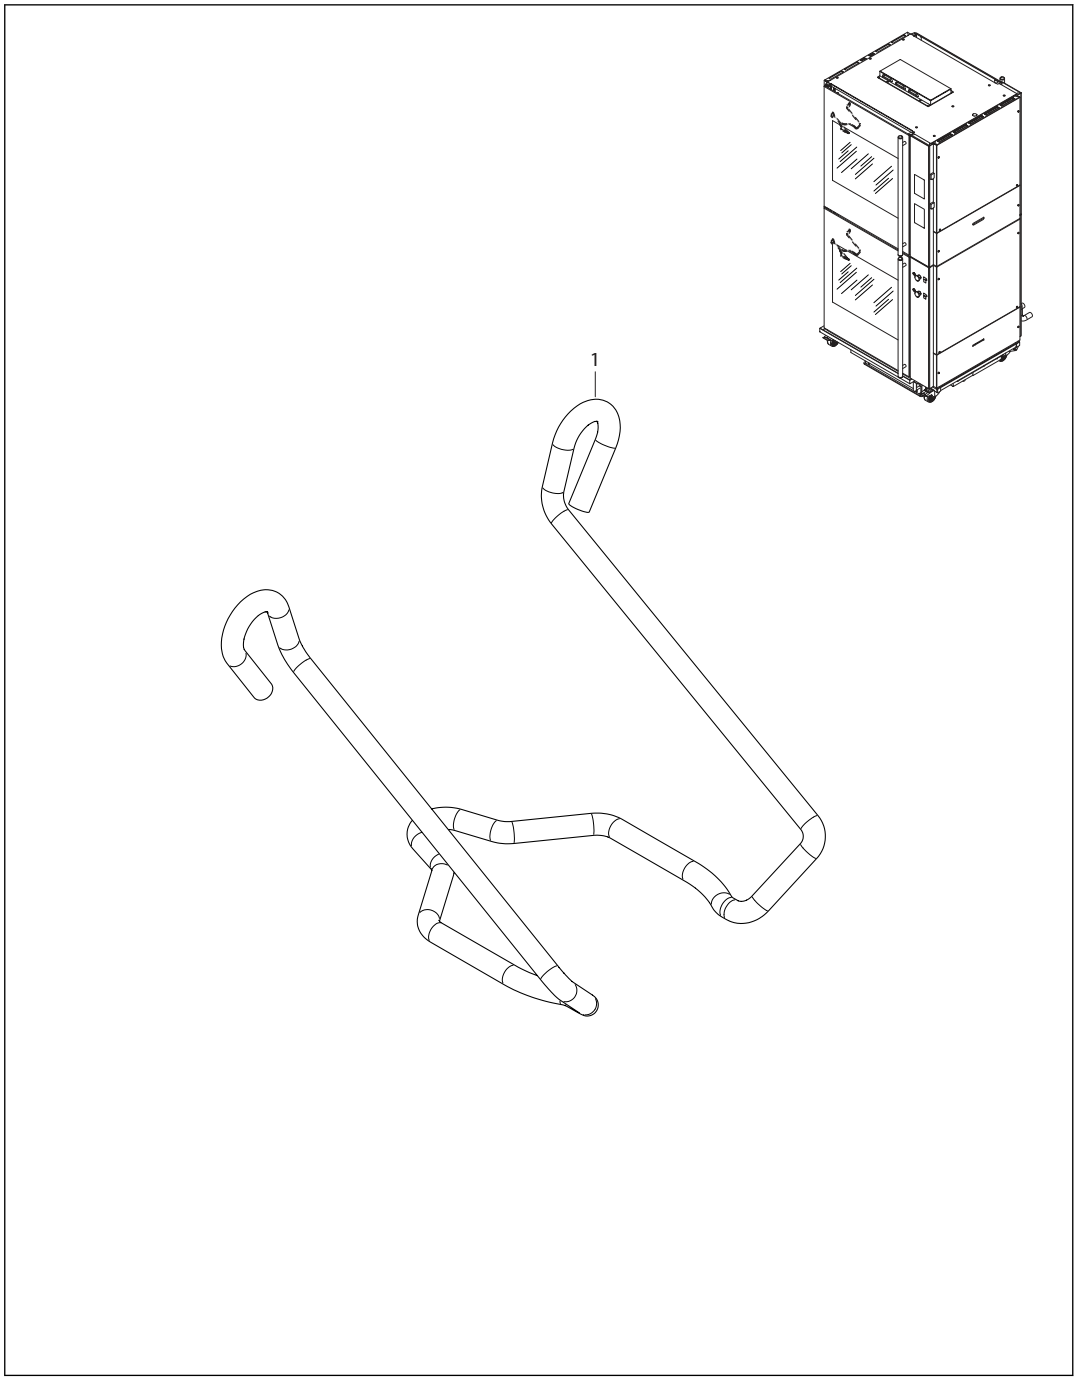


| Position number | Part number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 900016824 | Assembly Soap Holder TDR | | |


## 10.8 Cleaning system - Upper unit

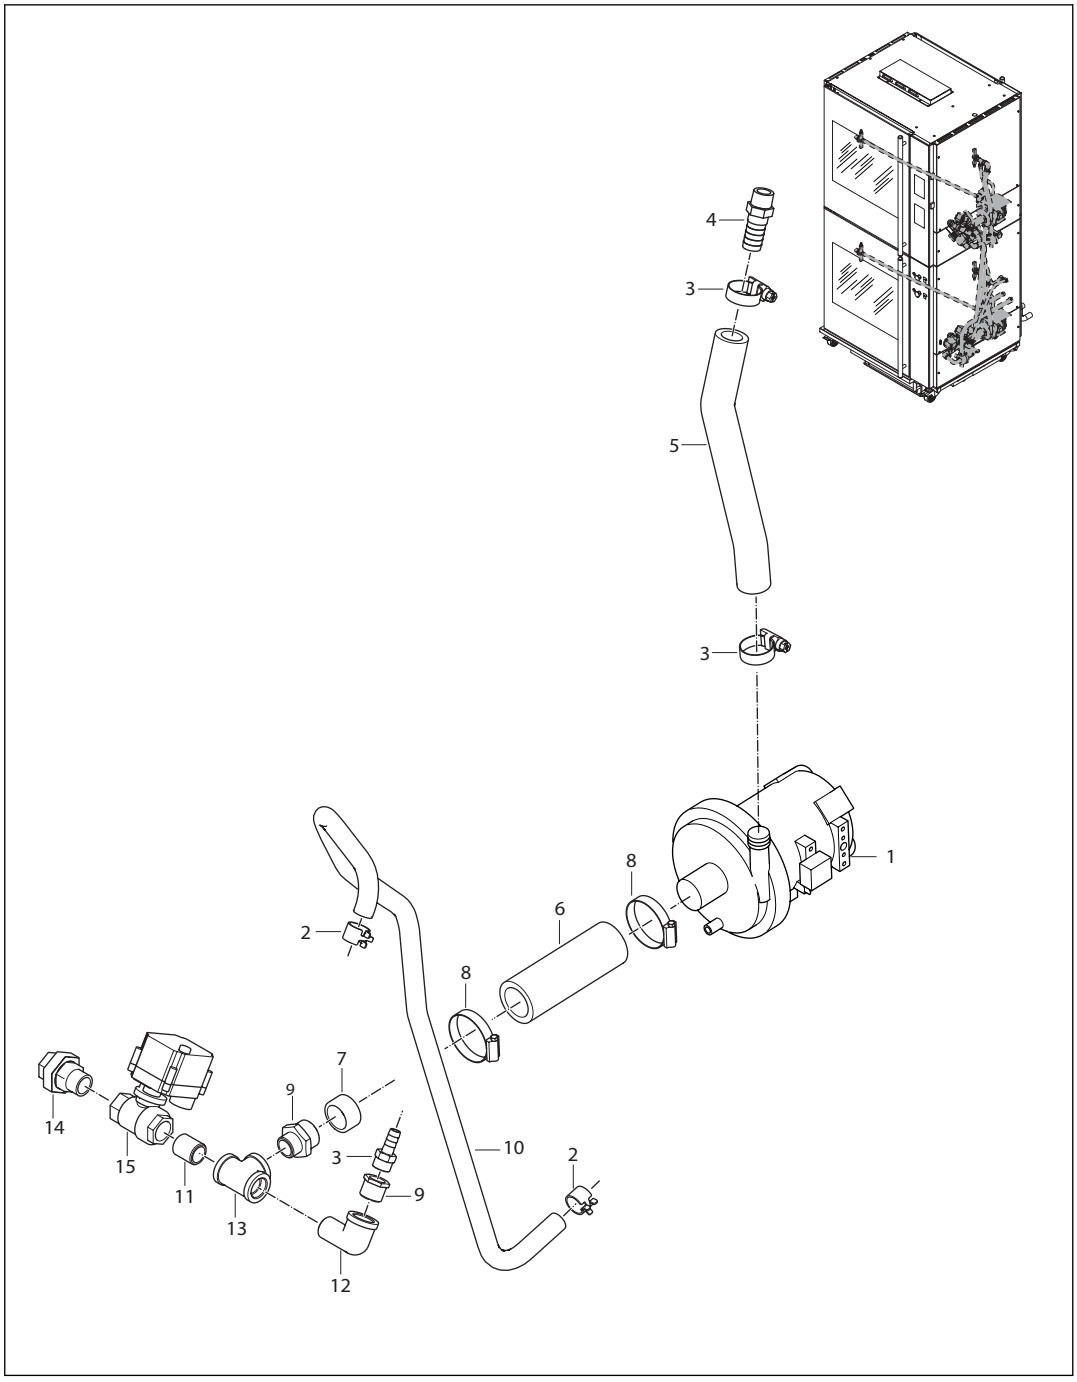


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 900017295 | Auto Clean Pump | | 1 |
| 2 | 9311038 | Hose Clamp Spring Ø23 | | |
| 3 | 900016245 | Hose Clamp 26-38mm | | |
| 4 | 900017299 | Hose Pillar 3/4" x 25,4mm AIS 316L | | |
| 5 | 900017292 | Hose Pump 1 (Out) - Hanning | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 6 | 900017291 | Hose Pump 1 (In) - Hanning | | |
| 7 | 500011095 | Sock threaded 1" (1/2) AISI 316L | | |
| 8 | 156712 | Hose clamp 50-65 mm w = 12,2 galvanized | | |
| 9 | 9301104 | Reduction nipple threaded 1"-3/4" AISI 316 | | |
| 10 | 500011395 | Hose Watersupply (Top) | | |
| 11 | 9301056 | Nipple treaded 3/4" (M-M) 30mm TP316 150LBS | | |
| 12 | 9301031 | Elbow threaded 3/4" (F-M) TP316 150LBS | | |
| 13 | 9301028 | Tee threaded 3/4" (F-F-F) BSO TP316 150LBS | | |
| 14 | 9301027 | Union conicle-flatsealing 3/4" (M-F) SS | | |
| 15 | 9311013s | Valve -2/2 3/4" with brass insert + Molex | | 1 |


## 10.9 Cleaning system - Lower unit

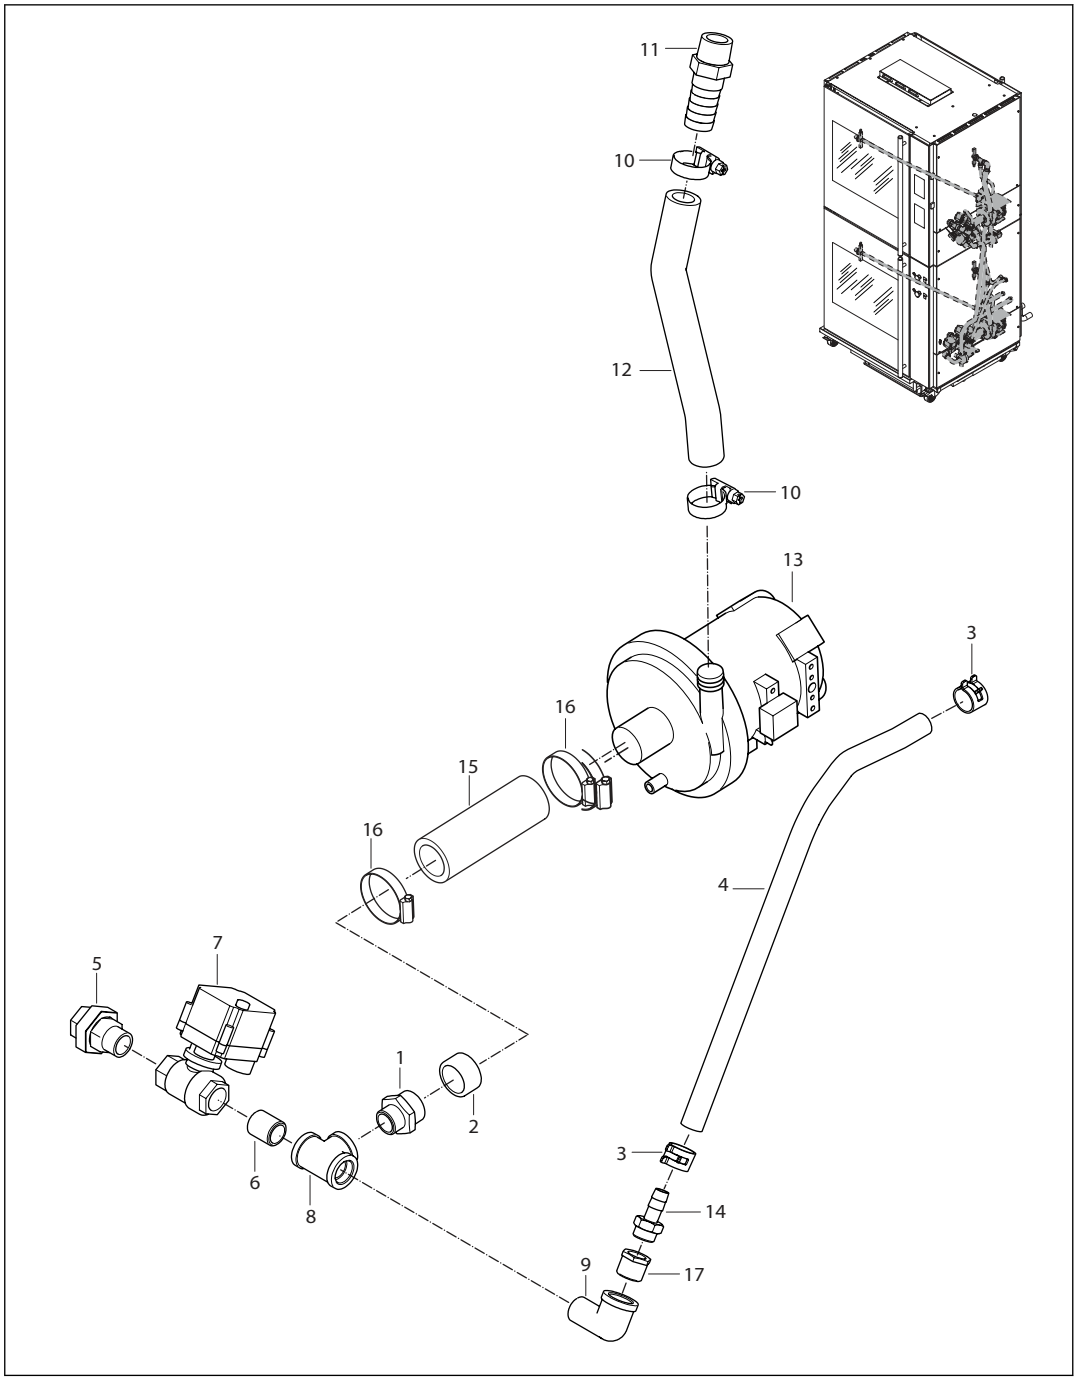


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 9301104 | Reduction nipple threaded 1"-3/4" AISI 316 | | |
| 2 | 500011095 | Sock threaded 1" (1/2) AISI 316L | | |
| 3 | 9311038 | Hose Clamp Spring Ø23 | | |
| 4 | 500011396 | Hose Watersupply (Bottom) | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 5 | 9301027 | Union conicle-flatsealing 3/4" (M-F) SS | | |
| 6 | 9301056 | Nipple treaded 3/4" (M-M) 30mm TP316 150LBS | | |
| 7 | 9311013s | Valve -2/2 3/4" with brass insert + Molex | | |
| 8 | 9301028 | Tee threaded 3/4" (F-F-F) BSO TP316 150LBS | | |
| 9 | 9301031 | Elbow threaded 3/4" (F-M) TP316 150LBS | | |
| 10 | 900016245 | Hose Clamp 26-38mm | | |
| 11 | 900017299 | Hose Pillar 3/4" x 25,4mm AIS 316L | | |
| 12 | 900017292 | Hose Pump 1 (Out) - Hanning | | |
| 13 | 900017295 | Auto Clean Pump | | |
| 14 | 9311011 | Hose Pillar 1/2" (M) SS | | |
| 15 | 900017291 | Hose Pump 1 (In) - Hanning | | |
| 16 | 156712 | Hose clamp 50-65 mm w = 12,2 galvanized | | |
| 17 | 9311028 | Reduction Nipple 3/4" x 1/2" (M-F) | | |


## 10.10 Cleaning system - Hoses

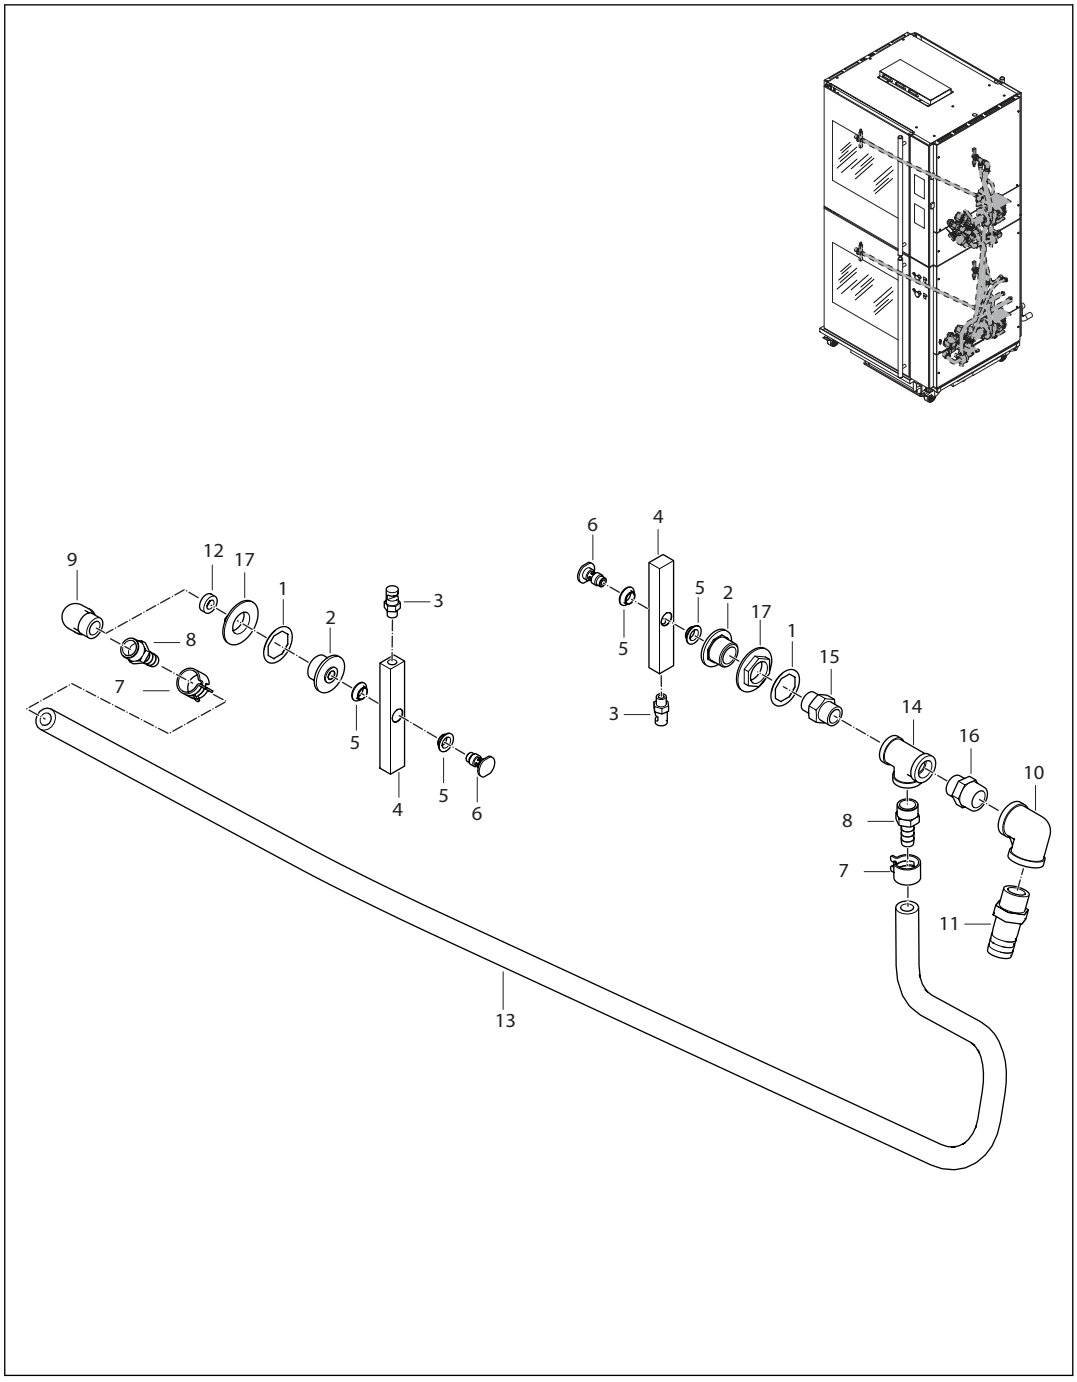


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 9312019 | Seal sprinkler | | |
| 2 | 500011445 | Sprinkler Inlet 2,0 | | |
| 3 | 9301007 | Spoon Nozzle B1/9 FL20 | | |
| 4 | 500011447 | Sprinkler Arm 2,0 | | |
| 5 | 500011503 | Flange Bearing XFM-1214-055 | | 2 |


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 6 | 500011446 | Sprinkler Axle 2,0 | | 2 |
| 7 | 9311038 | Hose Clamp Spring Ø23 | | |
| 8 | 9311011 | Hose Pillar 1/2" (M) SS | | |
| 9 | 3721050 | Elbow Threaded 1/2" (F-M) BSP | | |
| 10 | 9301030 | Elbow threaded 3/4" (F-F) TP316 | | |
| 11 | 900017299 | Hose Pillar 3/4" x 25,4mm AIS 316L | | |
| 12 | 9312146 | Seal Silicone Ø19xØ10 | | |
| 13 | 500015846 | Hose Sprinkler Left TDR 8 AC | | |
| 14 | 3721046 | Tee Threaded 1/2" (F-F-F) | | |
| 15 | 3721047 | Hexagon Nipple Threaded 1/2" (M-M) | | |
| 16 | 500015869 | Reduction Nipple 3/4" - 1/2" (M-M) AISI 316 | | |
| 17 | 9311021 | Hexagon Nut 3/4" BSP | | |

## 10.11 Cleaning system - Filtration

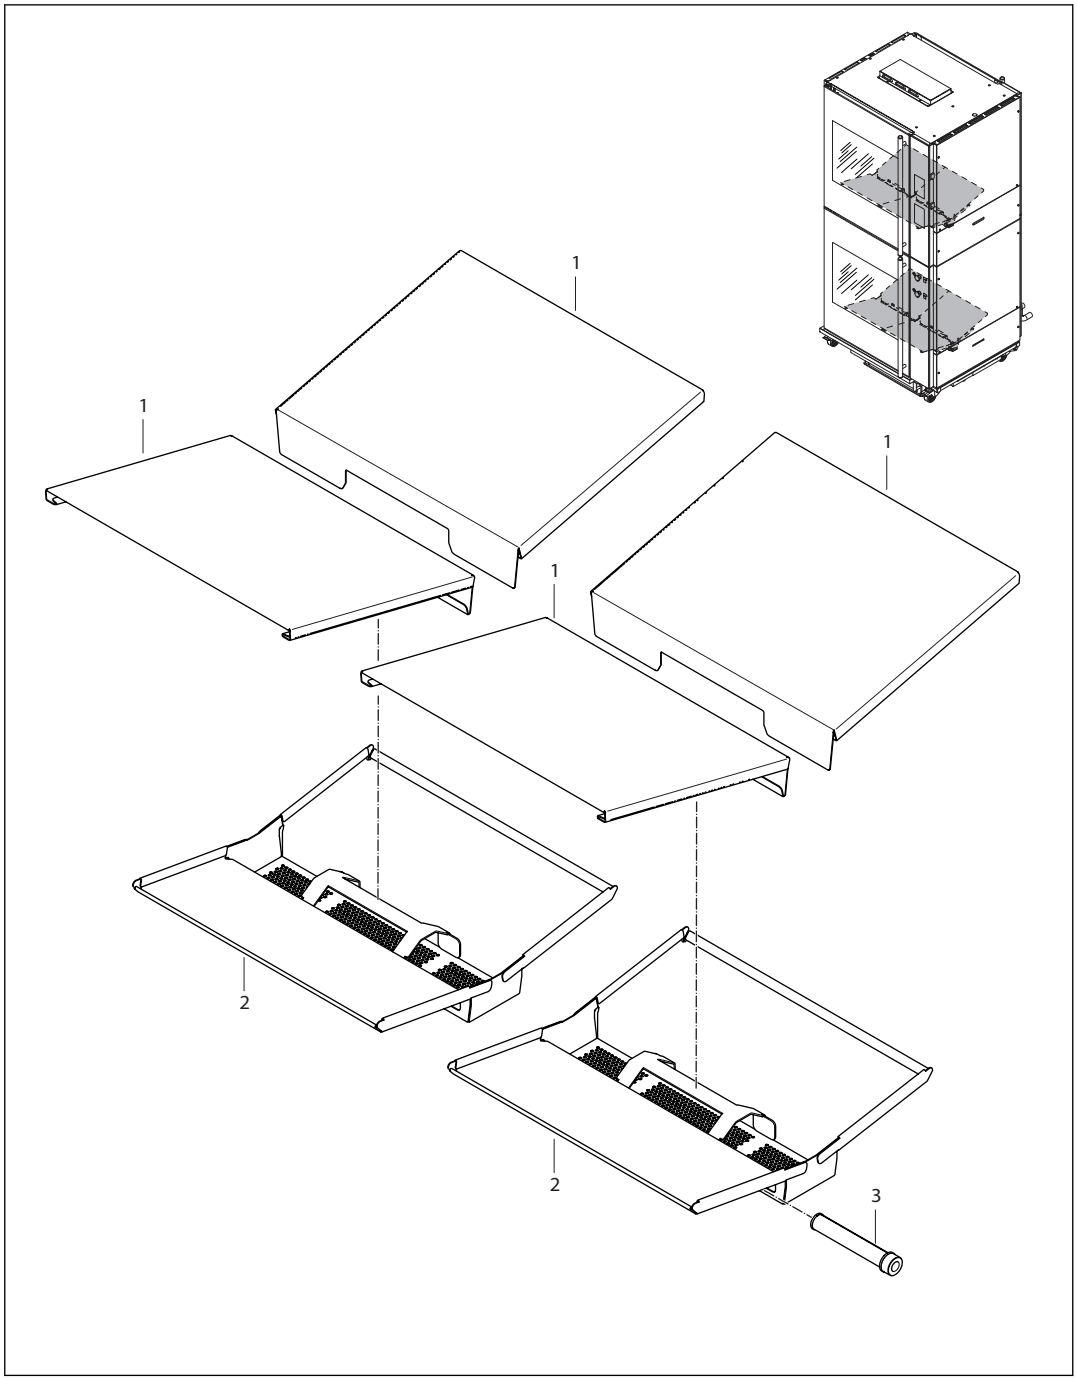


| Position number | Part number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 - 2 | 9310208s | Cover Bottom TDR (2x) | | |
| | | Filter Basket TDR | | |
| 3 | 900016831 | Filter Auto Clean | | |


## 10.12 Cleaning system - Drainage - Upper unit

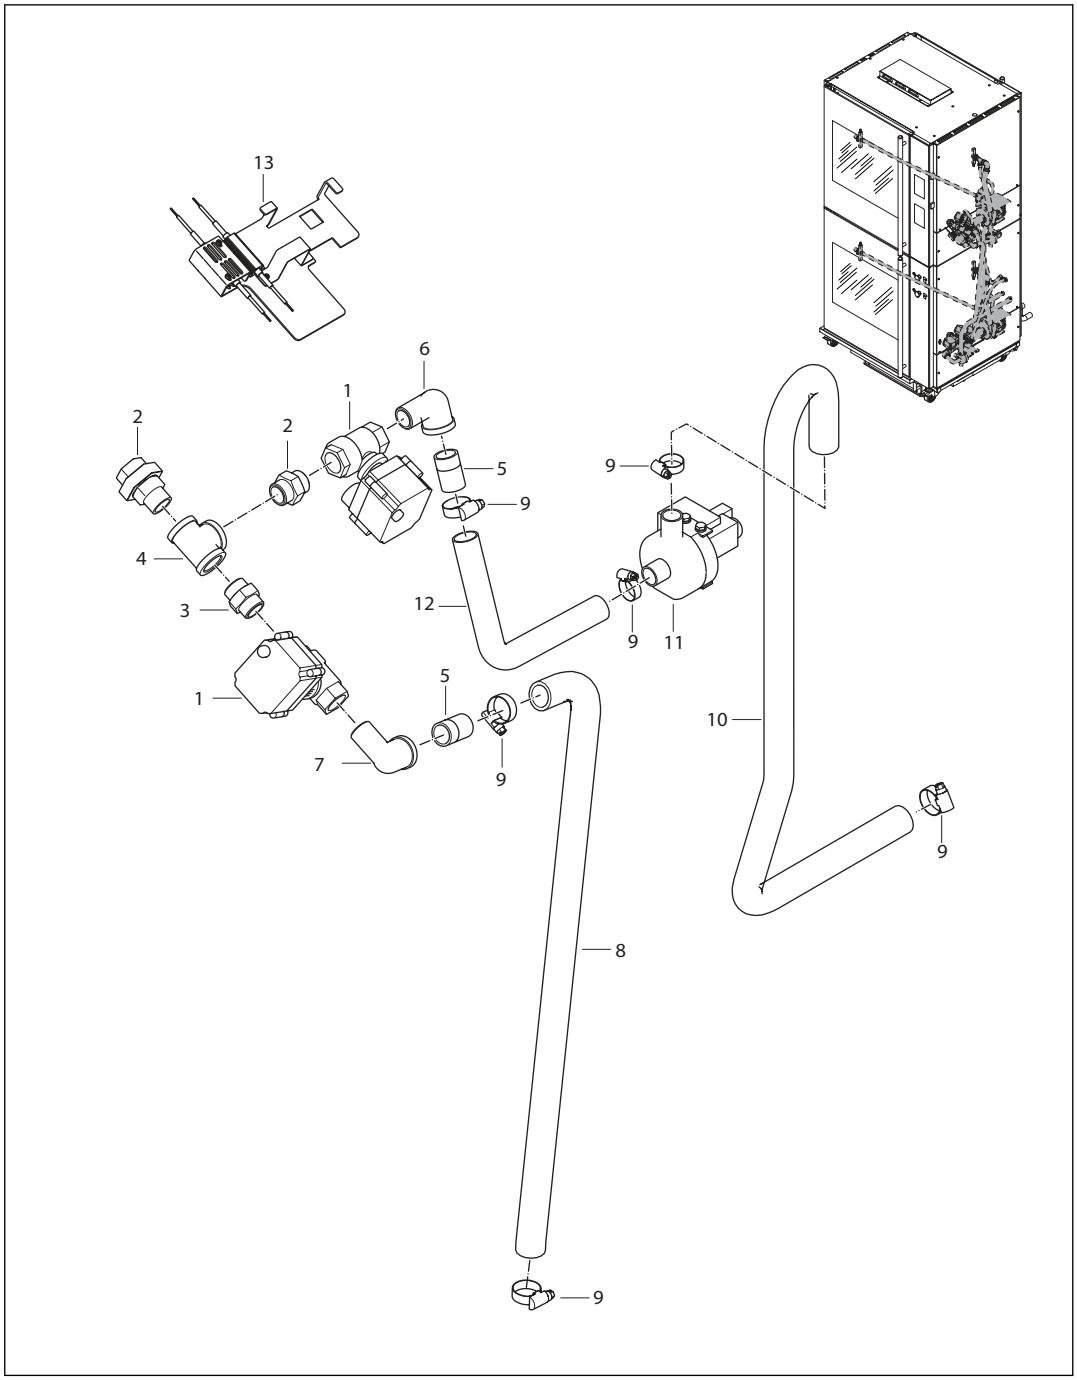


| Key | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 9311013s | Valve -2/2 3/4" with brass insert + Molex | | 1 |
| 2 | 3721029 | Hexagon Nipple Threaded 3/4" (M-M) | | |
| 3 | 9301028 | Tee threaded 3/4" (F-F-F) BSO TP316 150LBS | | |

| Key | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 4 | 9301027 | Union conicle-flatsealing 3/4" (M-F) SS | | |
| 5 | 9301006 | Nipple welding 3/4" | | |
| 6 | 9301031 | Elbow threaded 3/4" (F-M) TP316 150LBS | | |
| 7 | 9311069 | Hose elbow 90° | | |
| 8 | 500011398 | Hose Grease Drain (Top) | | |
| 9 | 900016245 | Hose Clamp 26-38mm | | |
| 10 | 500011403 | Hose Drain Pump Out (Top) | | |
| 11 | 9312083s | Drain Pump | | 1 |
| 12 | 9171141 | Grommet 88,4 mm | | |
| 13 | 9311065 | Heating resistance 39 Ohm 25W | | 1 |


## 10.13 Cleaning system - Drainage - Lower unit

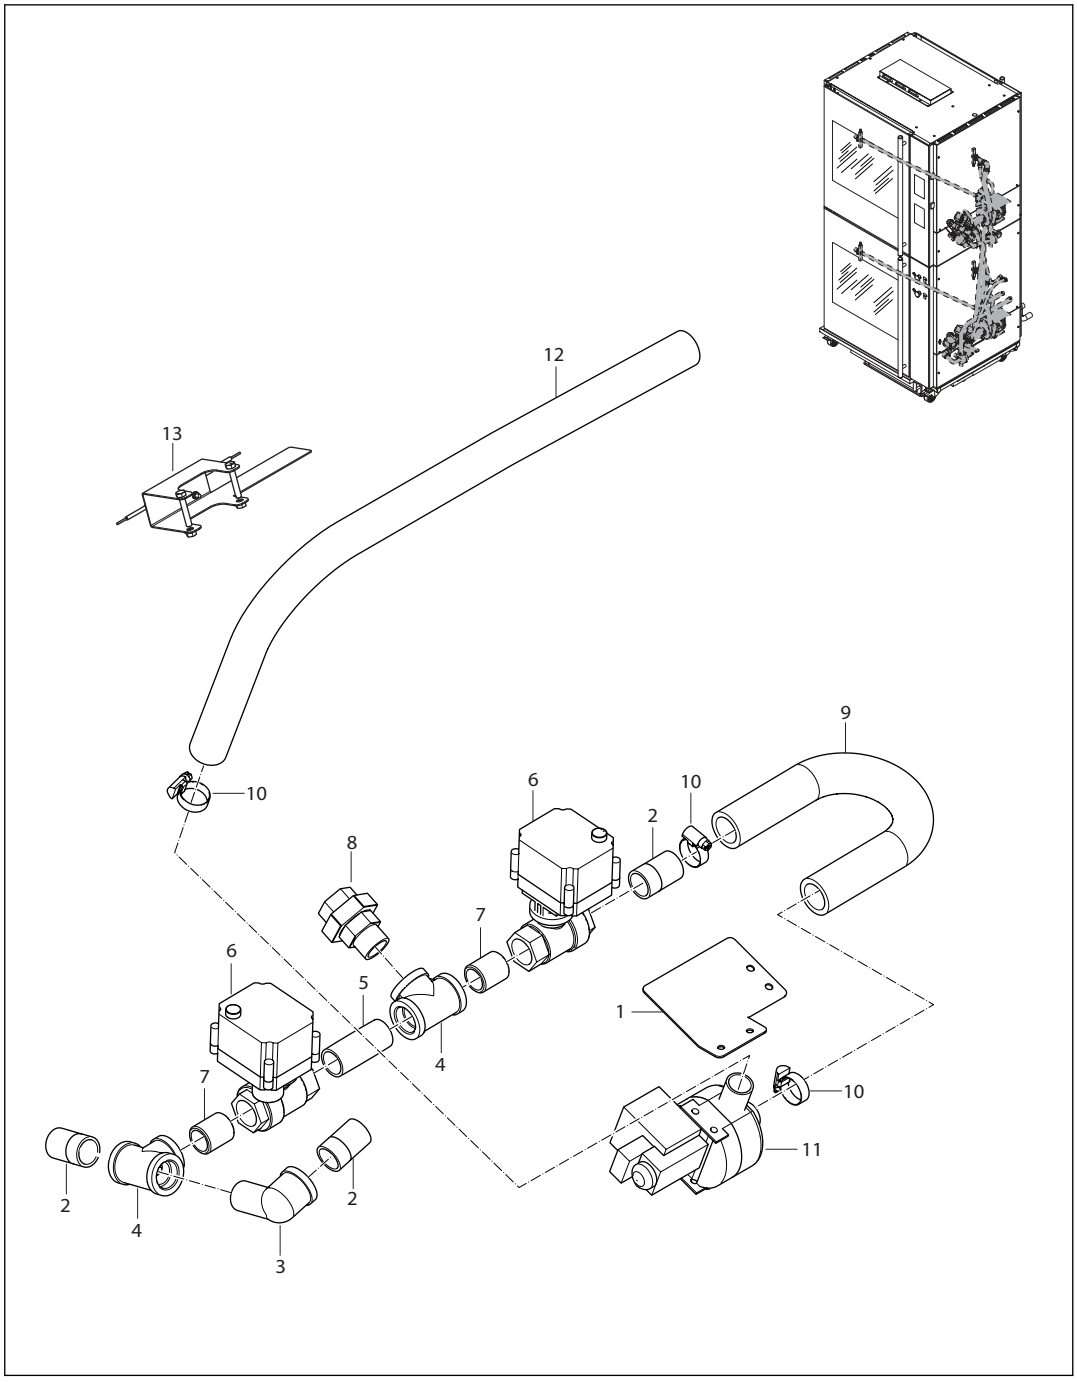


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 500016354 | Drain pump mounting bracket | | |
| 2 | 9301006 | Nipple welding 3/4" | | |
| 3 | 9301031 | Elbow threaded 3/4" (F-M) TP316 150LBS | | |
| 4 | 9301028 | Tee threaded 3/4" (F-F-F) BSO TP316 150LBS | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 5 | 3721029 | Hexagon Nipple Threaded 3/4" (M-M) | | |
| 6 | 9311013s | Valve -2/2 3/4" with brass insert + Molex | | 1 |
| 7 | 9301056 | Nipple treaded 3/4" (M-M) 30mm TP316 150LBS | | |
| 8 | 9301027 | Union conicle-flatsealing 3/4" (M-F) SS | | |
| 9 | 500016309 | Hose Elbow 90° Drain AC Stacked | | |
| 10 | 900016245 | Hose Clamp 26-38mm | | |
| 11 | 9312083s | Drain Pump | | |
| 12 | 500012502 | Hose Drain Internal (Bottom) | | |
| 13 | 900016669 | Heating Grease Drain (Bottom) | | |


## 10.14 Sheet metal - Outside

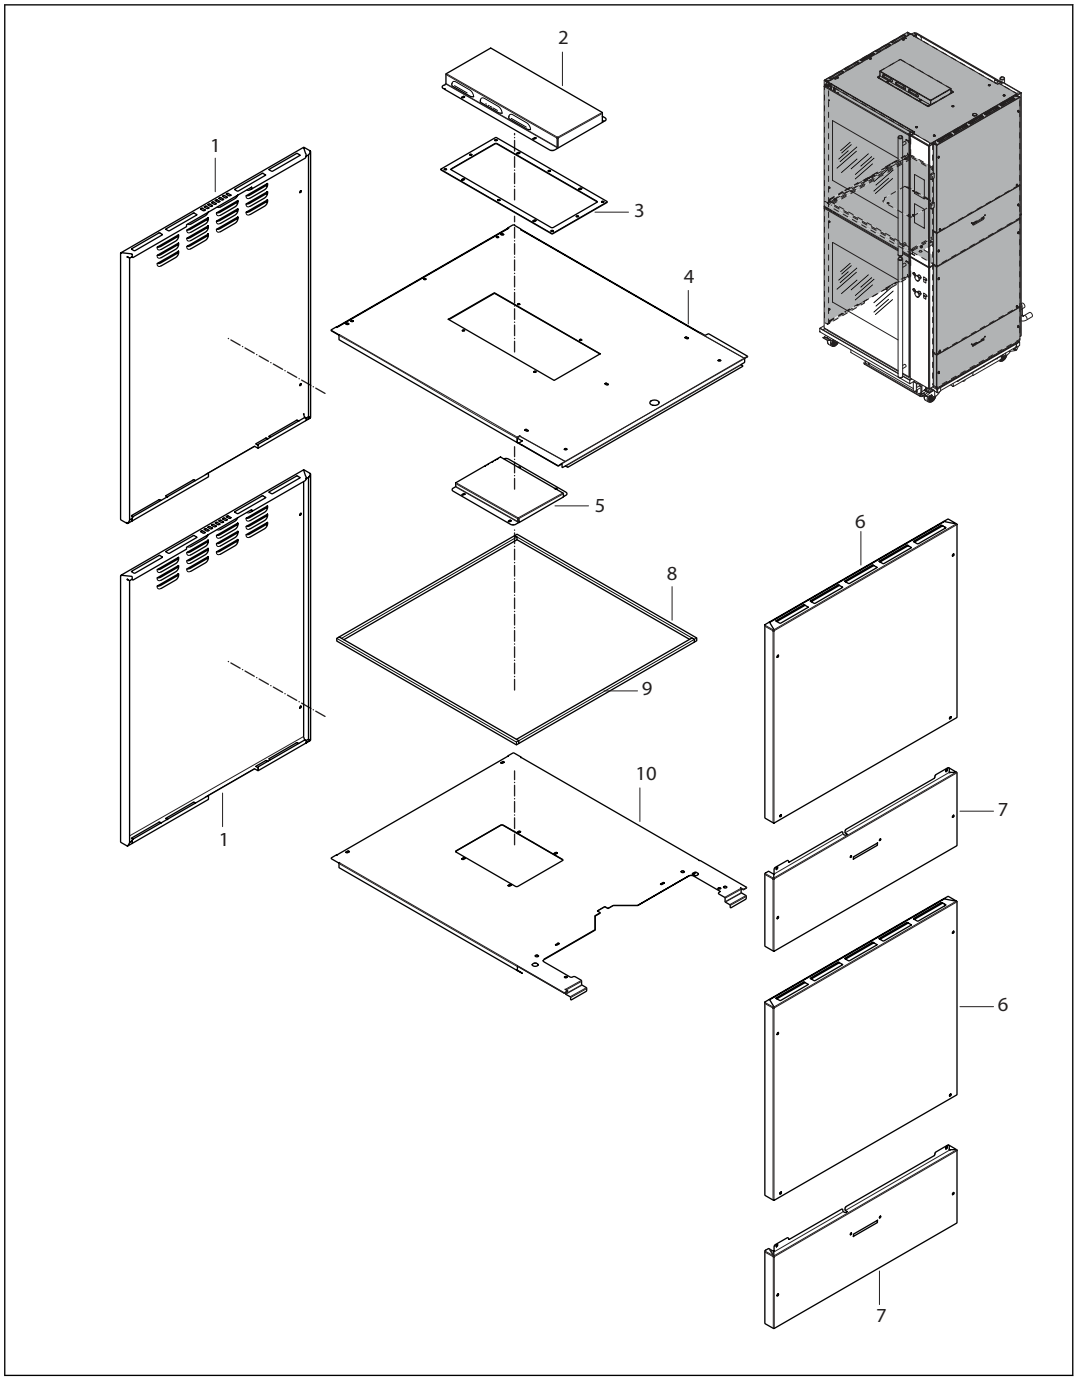


| Key | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 500015677 | Side Panel TDR AC Left | | |
| 2 | 9294160 | Top panel (louvers) TDR | | |
| 3 | 9292082 | Seal Cover Fans TDR | | |
| 4 | 500015641 | Top Plate TDR AC (top unit) | | |
| 5 | 9314459 | Cover fan TDR 8+8 | | |

| Key | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 6 | 500016435 | Side panel TDR AC Top Right | | |
| 7 | 500016439 | Side panel TDR AC Top Right bottom | | |
| 8 | 500017524 | EPDM Tape 1 (Top) | | |
| 9 | 500017525 | EPDM Tape 2 (Top) | | |
| 10 | 500015740 | Top Plate TDR AC (bottom unit) | | |


## 10.15 Insulation

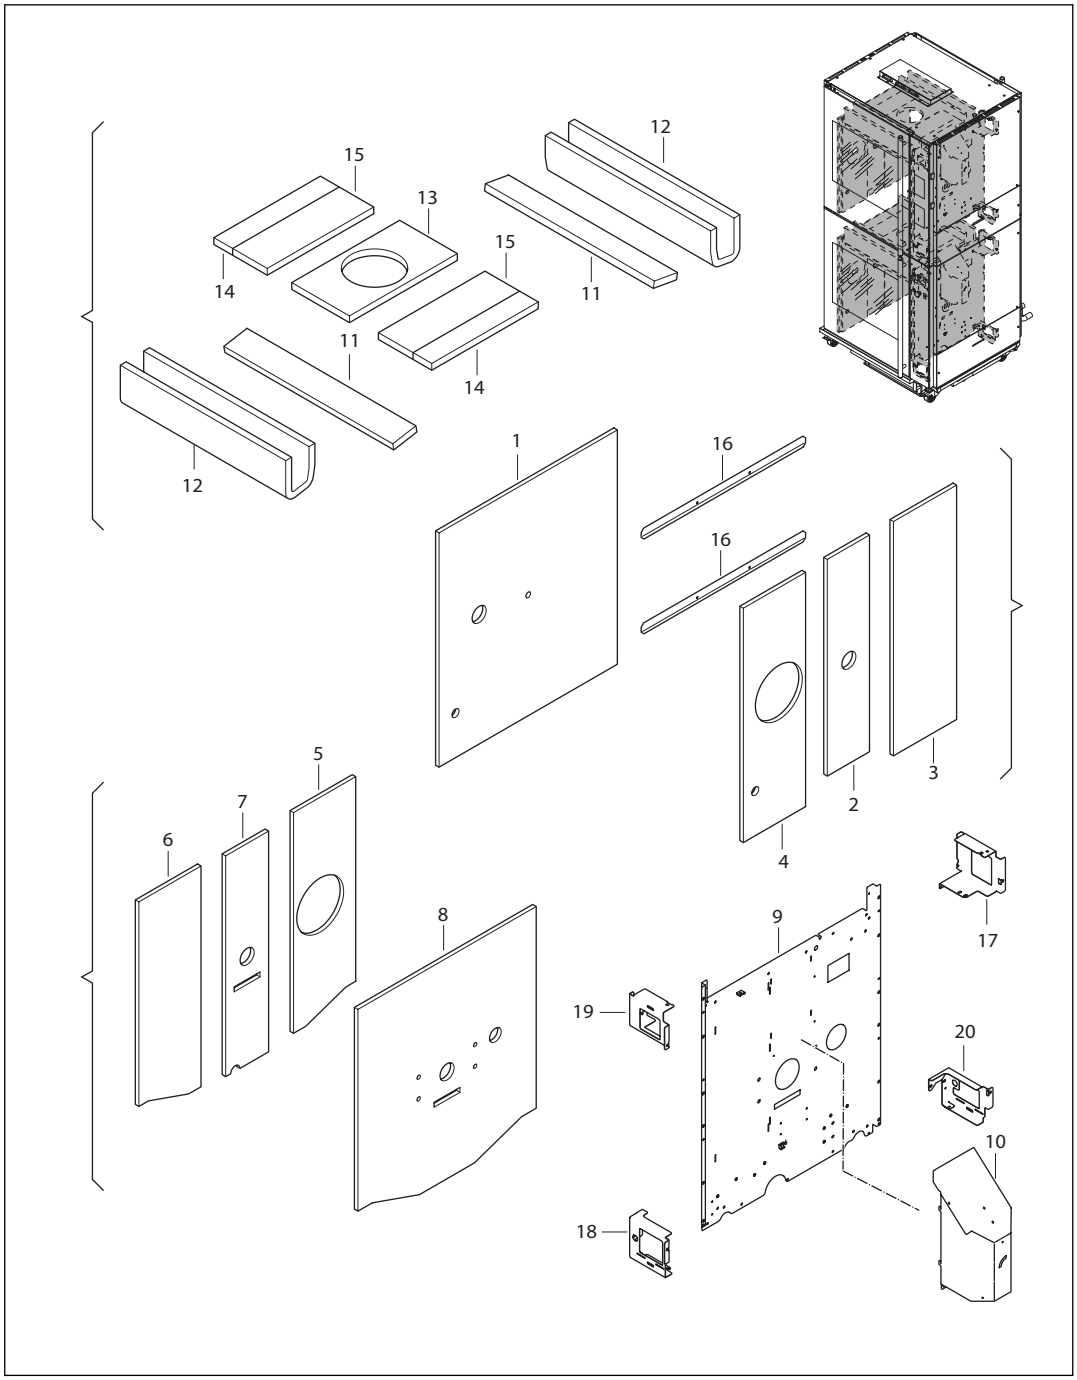


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1-4 | 900017309 | Insulation XL Left | | |
| | | Insulation middle left | | |
| | | Insulation Left 1 | | |
| | | Insulation Left 2 | | |
| 5-8 | 900015277 | Insulation right 1 | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| | | Insulation right 2 TDR | | |
| | | Insulation middle right | | |
| | | Insulation XL right | | |
| 9 | 500010560 | Machine Room | | |
| 10 | 500010548 | Cover Motor 2.0 | | |
| 11-15 | 900017310 | Insulation Top Middle small 2 TDR 8 AC | | |
| | | Insulation Top Middle small TDR 8 AC | | |
| | | Insulation top sisme | | |
| | | Insulation top small TDR 8 AC | | |
| | | Insulation top TDR 8 AC | | |
| 16 | 9314188 | Strip insulation | | |
| 17 | 500010561 | Support Rear Up | | |
| 18 | 500010563 | Support Front Low | | |
| 19 | 500010564 | Support Front Up | | |
| 20 | 500010562 | Support Rear Low | | |

## 10.16 Under frame

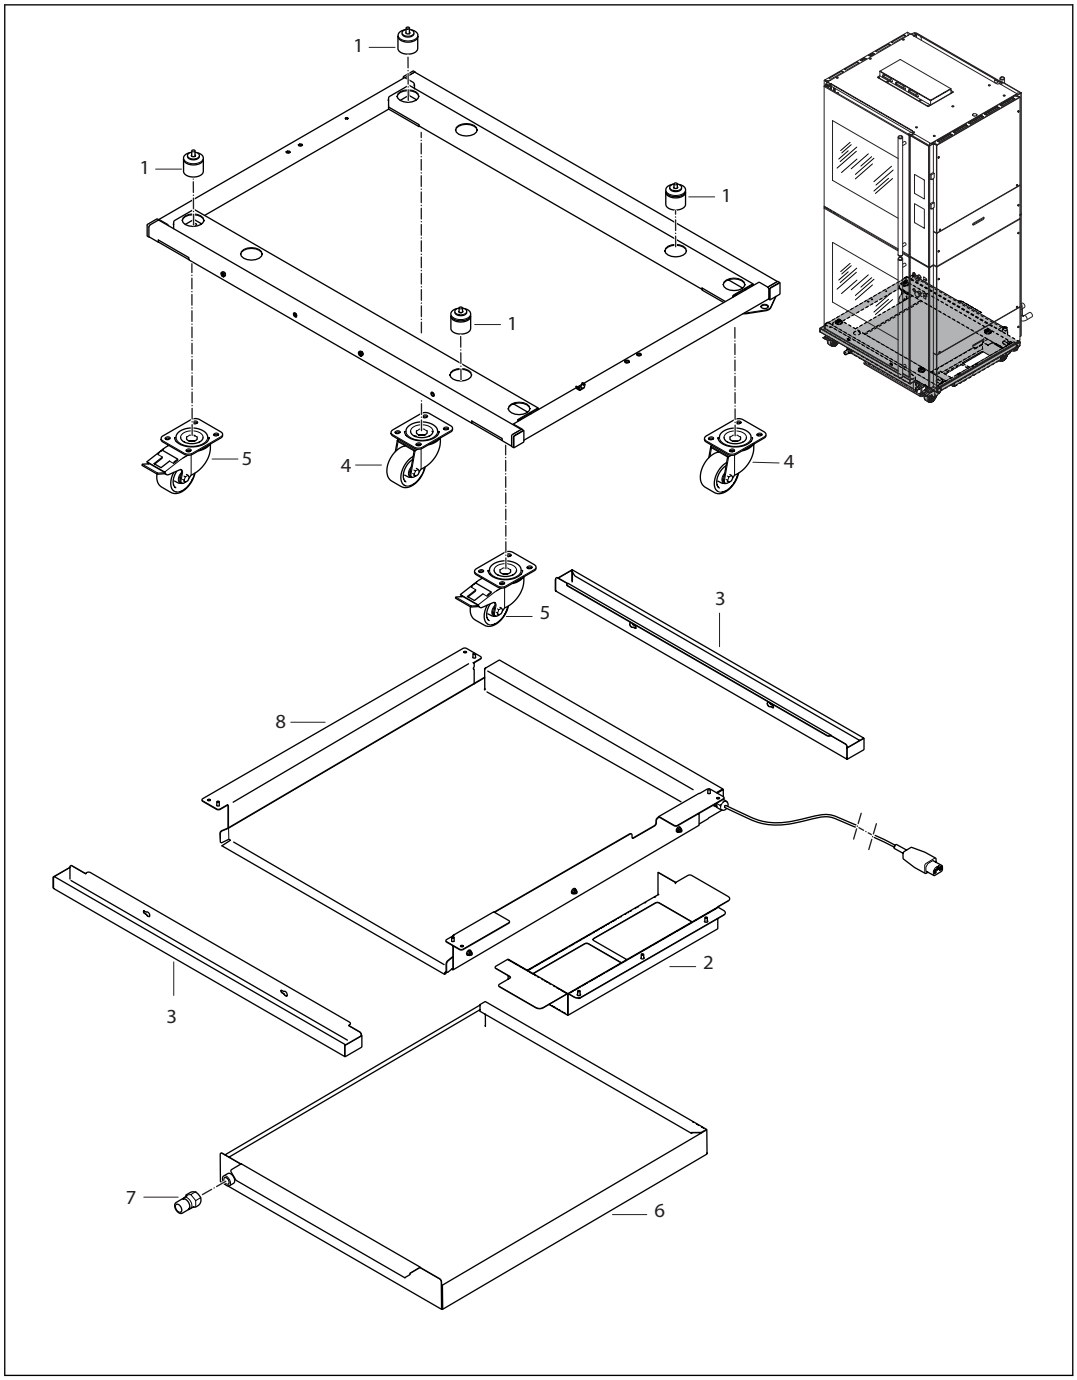


| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 1 | 9312214 | Vibration damper | | |
| 2 | 900020073 | Assembly Cover Plate UF TDR 8+8 US | | |
| 3 | 900016314 | TDR 8 AC UF Drip Tray | | |
| 4 | 9172065 | Swivel castor | | |
| 5 | 9172066 | Swivel castor with brake | | |

| Position number | Part Number | Description | Quantity in machine | Priority |
|---|---|---|---|---|
| 6-7 | 900017313 | Grease tray TDR 8 + 8 AC + Quick connect coupling | | |
| 8 | 900017314 | Heated Grease Tray TDR-8+8 AC | | |


## 10.17 Accessories

### 10.17.1 Rotisserie accessories

| Part number | Description | Quantity in machine | Priority |
|---|---|---|---|
| 9172136 | 4 Chicken rack | | |
| 9172134 | Meat basket | | |
| 9172153 | Meat fork | | |
| 9112480 | V-spit | | |
| 9312090 | Butterfly, 3 chicken rack | | |


# 11 Appendix

## 11.1 Hydraulic diagram

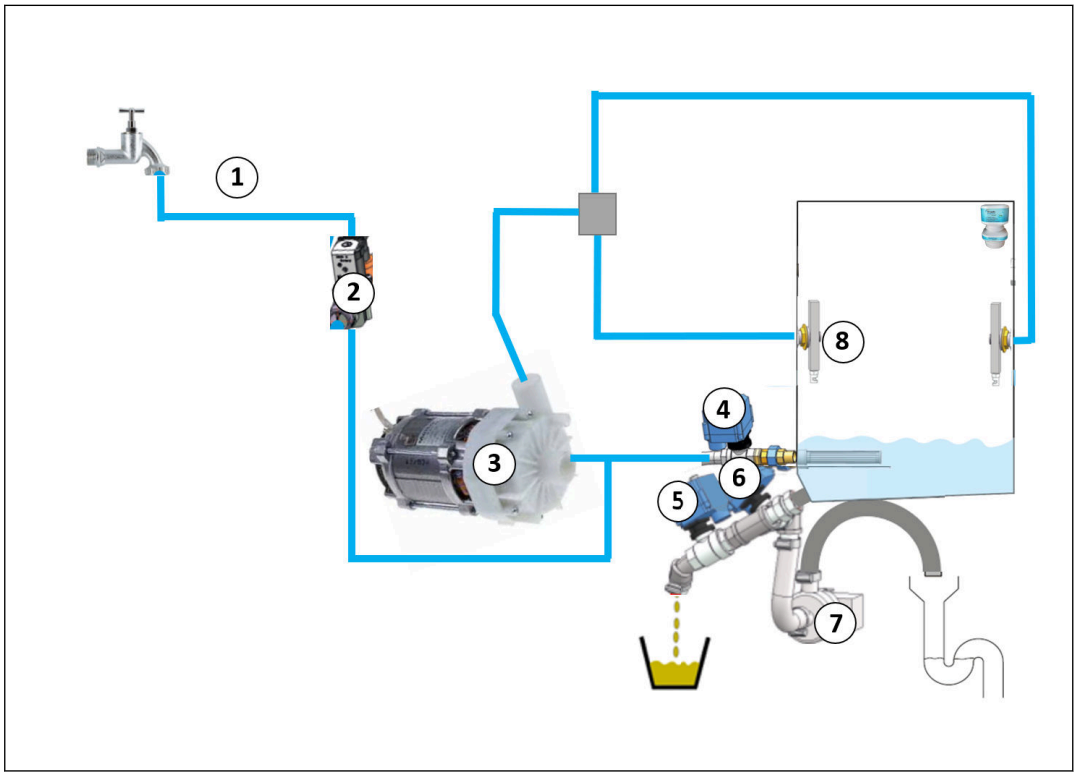



| | | | |
|---|---|---|---|
| 1 | Water supply | 5 | Grease drain valve |
| 2 | Water valve | 6 | Water drain valve |
| 3 | Pump | 7 | Drain pump |
| 4 | Filter valve | 8 | Spray arm (2x) |


## 11.2 Overview of the printed circuit board

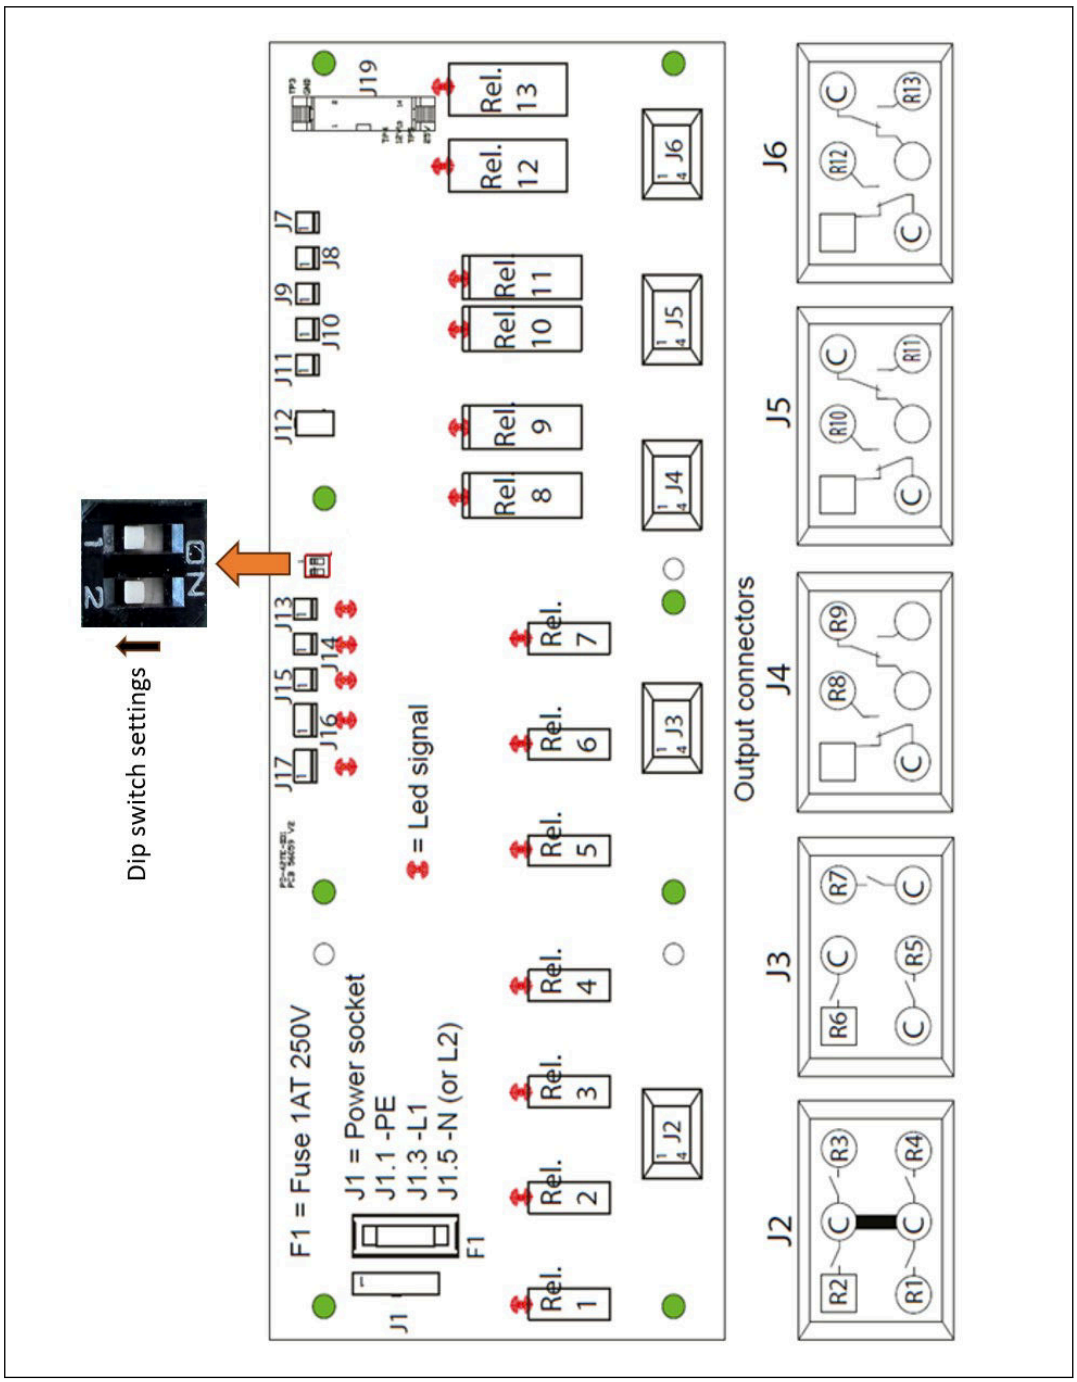

## 11.3 Circuit diagram

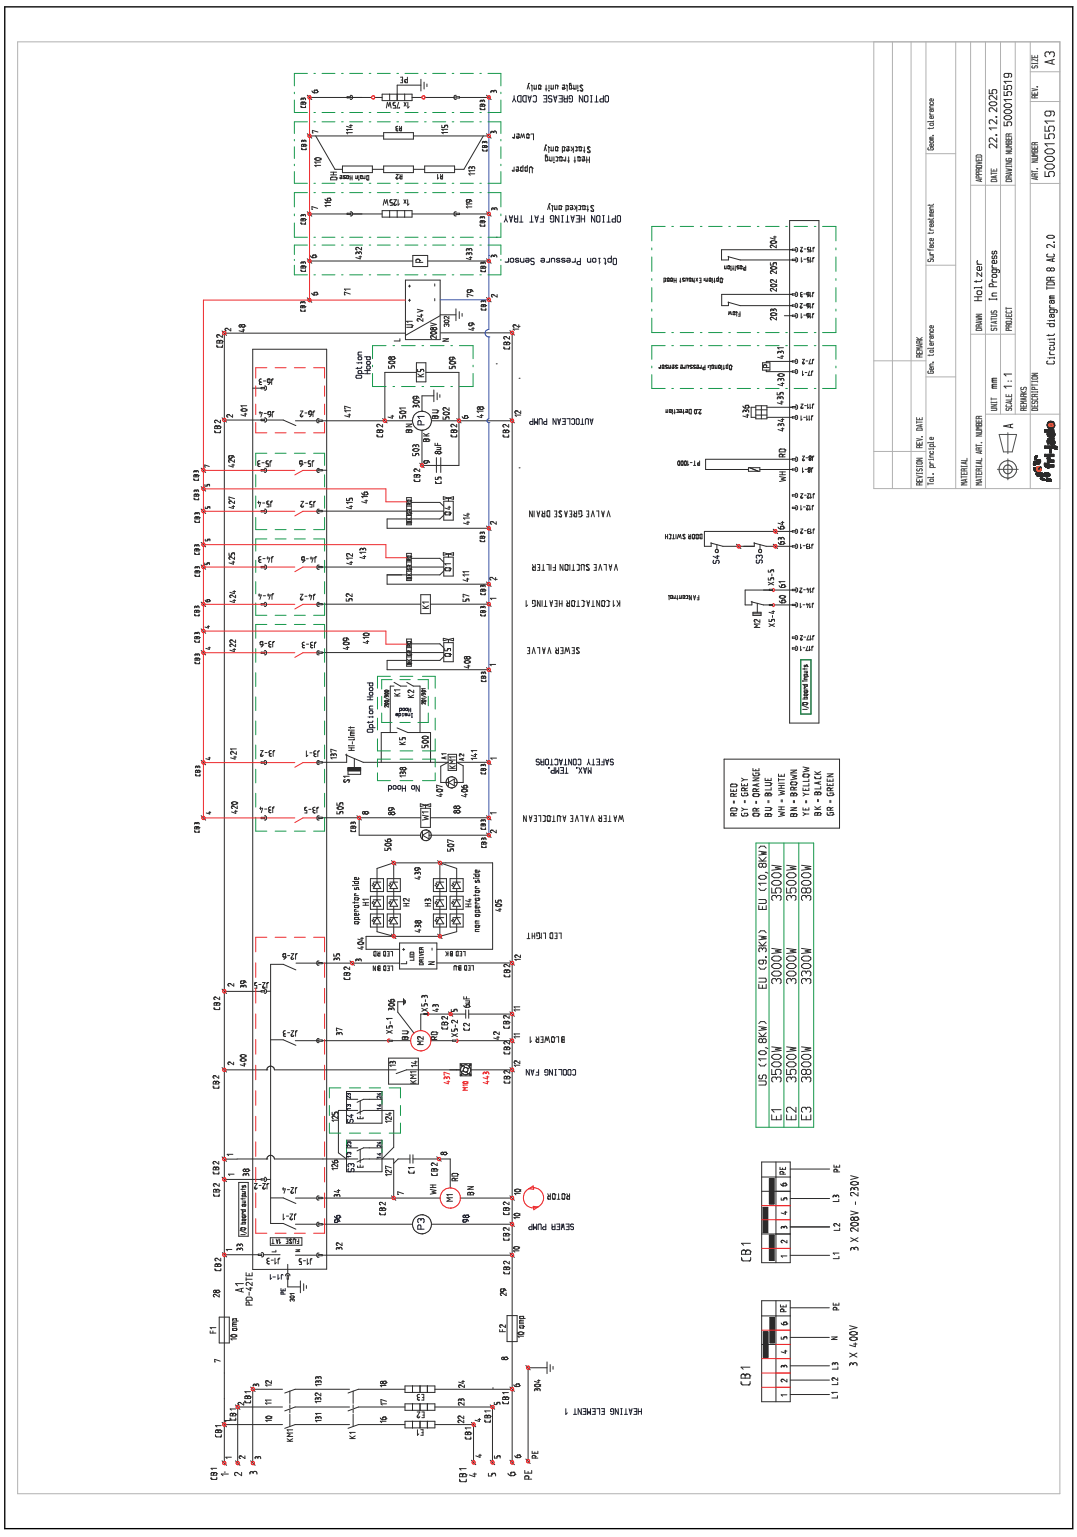

## 11.4 Wiring diagram

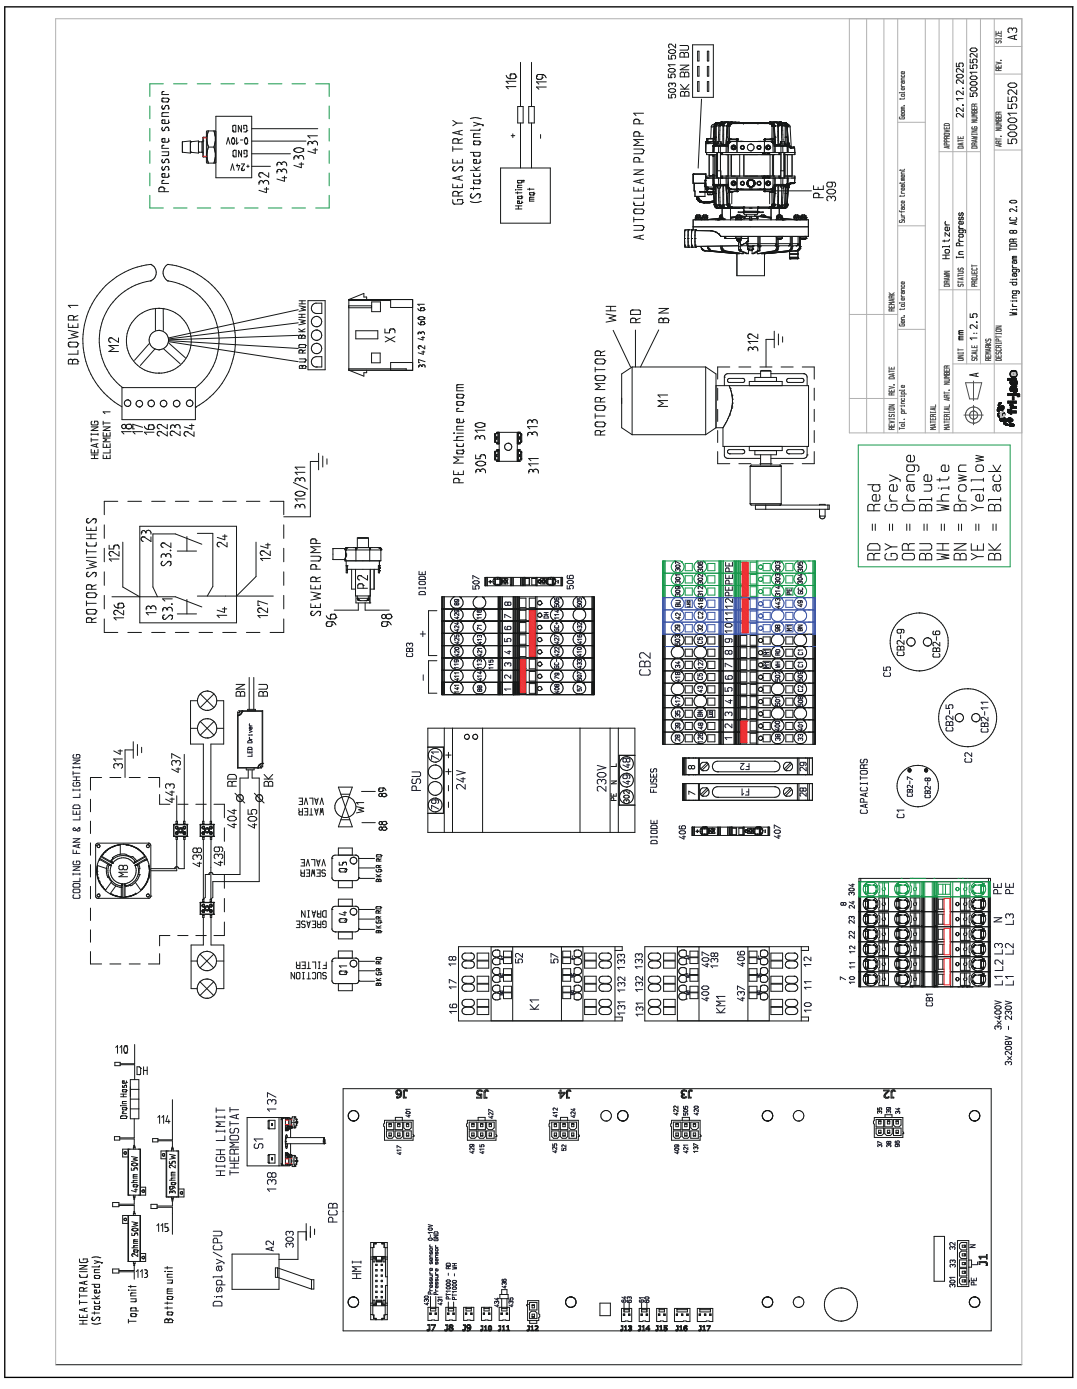


fri-jado