


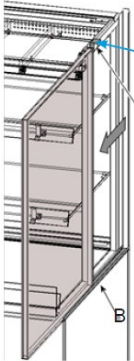

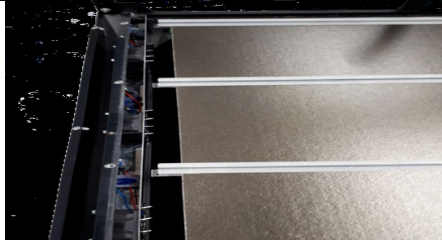

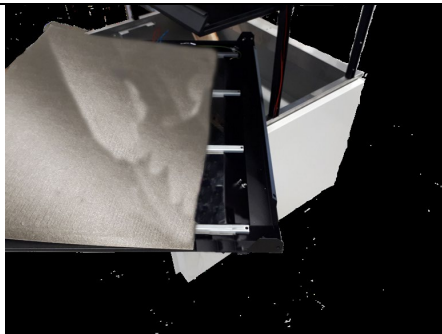
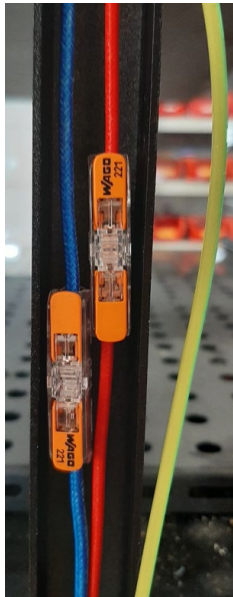


Doc. nr. 9124715	Rev. 0	Registration form. Heating element replacement	
----------------------------	------------------	--	---



	1. Remove Shelf Glass pane (refer Service manual)
	2. Remove air box (refer Service manual).
	3. Remove side glass (refer Service manual)
	4. Remove column cover (middle left column cover, seen from back of unit).
	5. Loosen Element holders, depending on the version the holders are twisted at the back side, or fastened with screws.

Doc. nr. 9124715	Rev. 0	Registration form. Heating element replacement	
----------------------------	------------------	--	---

	
	<p>6. Take off the top element holders.</p> <p>Heating Element is now free to take out.</p> <p>Make a note of the placement of the wiring.</p>
	<p>7. Take out element. If possible, follow the wires going down in the column. If not, cut the wire in the column, leaving enough length to make a connection to the wires from the new element.</p> <p><u>NEVER make a connection underneath the heating element</u></p> <p>Using a wago connector like the one on this picture Connect the wires in the column</p>
<p>Take care of connecting: Red to Red, Blue to Blue, and Yellow to Yellow.</p>	