

Service kit 9191202s

Applied in

Multiserie

ACR



## Contents:

1x 9191202 compressor (with 15uF capacitor and 115V cord mounted)


1x 9301086 Capacitor 20uF

1x 2005666 Bootlace ferrule




## For use in the Multiserie:

The compressor can be used in the way it is shipped (with the 15uF capacitor and 115V cord mounted).

## For use in the ACR, see below procedure!

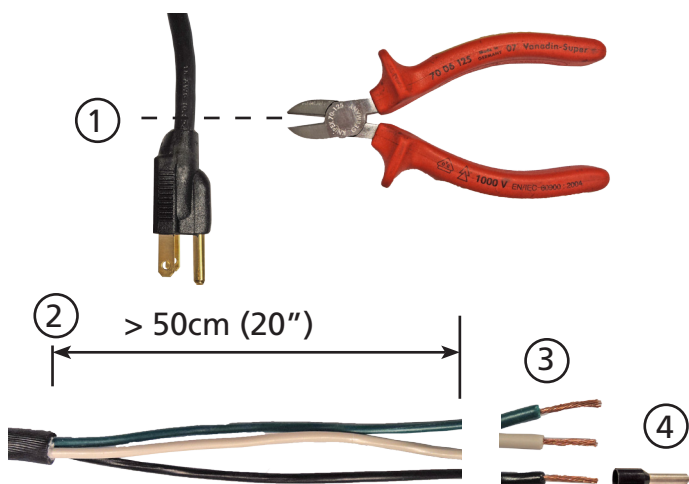

1. The plug needs to be cut from the cable.
2. The cord needs to be dismantled over 50 cm (20") minimum.
3. Then strip the wire ends.
4. Use a bootlace ferrule on the black wire for use on the contactor
5. Connect the wires according the diagram.
6. Disconnect the 15uF capacitor
7. Mount and connect the 20uF capacitor

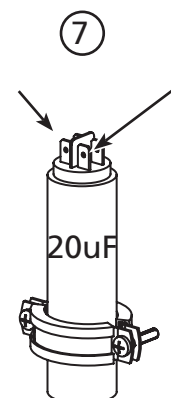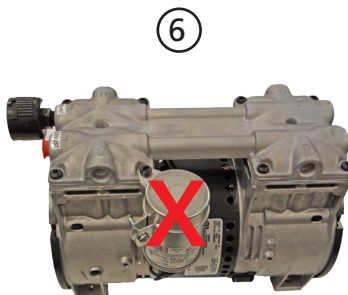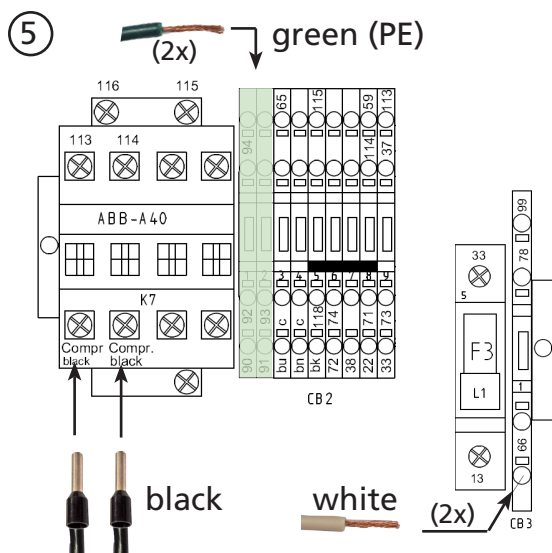

- NOTICE -

This manual is prepared for the use of trained Service Technicians and should not be used by those not properly qualified. If you have attended a training for this product, you may be qualified to perform all the procedures in this manual.

This manual is not intended to be all encompassing. If you have not attended a training for this product, you should read, in its entirety, the repair procedure you wish to perform to determine if you have the necessary tools, instruments and skills required to perform the procedure. Procedures for which you do not have the necessary tools, instruments and skills should be performed by a trained technician.

Reproduction or other use of this Manual, without the express written consent of Fri-Jado, is prohibited.