

## Mounting instruction lower skirts.

1) Open the drawer



2) Remove the screw on the left and right hand side, and remove the cover plate.



3) Remove the screws left and right on the back side, and remove the cover plate.




4) Left and right side: (front) remove the screw, and slide the cover plate backwards.



5) Determine where the power cord has to come out of the machine (left, right, back or front) and remove the knock-out of the corresponding lower skirt.




6) Mount 2 lower skirts on the left and right hand side with 2 screws.

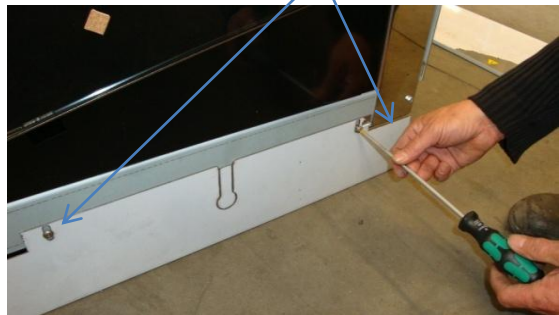

7) Mount both cover plates on the left and right hand side with a screw.



8) Note: cover plate fits in slots.

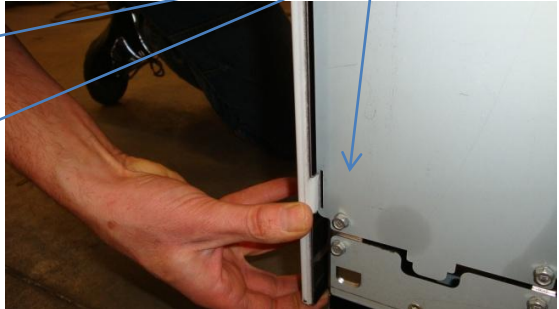

9) Fasten the screw.




11) Fasten the screws.



13) Mount the cover plate on the front side and fasten the screws.



15) Mount the front lower skirt with 2 screws.

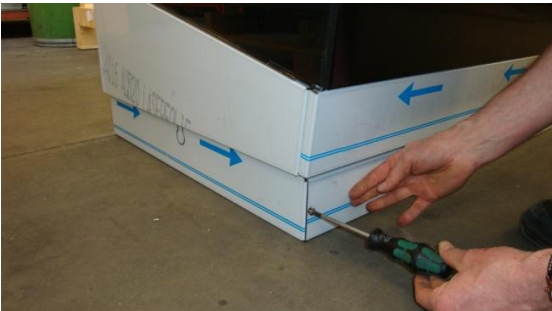

10) Mount back cover plate on the back side inside the slots. Note:



12) Mount the lower skirt on the back side and fasten the screws.



14) Remark:

**Put the brakes onto the front swivel castors!**

Place the unit on the right place before mounting the front lower skirt.

When the front lower skirt is mounted, you can not move the unit, because the front swivel castors will turn against the front metal skirts!