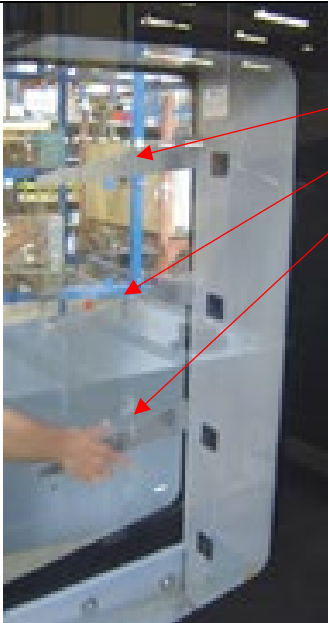
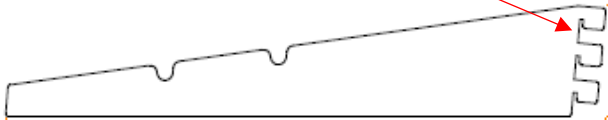
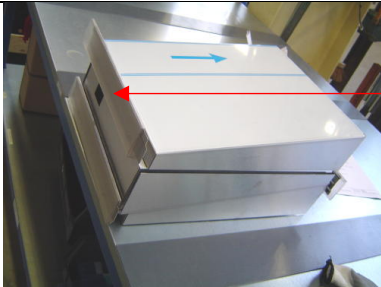
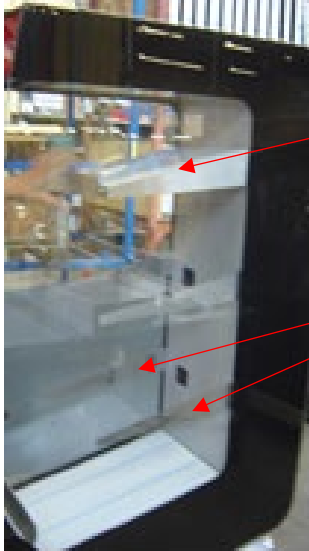





Doc. nr. <b>9124487</b>	Rev. <b>0</b>	Registration form. <b>Shelf mounting MD 35</b>	
----------------------------	------------------	---	---

	First follow unpack instructions.
When unpacked, start placing support brackets for the shelves.	Quantity of support brackets; “two times shelf quantity”. ( one for the left side, one for the right side )
	<p>Support brackets.</p> <p>Make sure the hook is securely attached.</p> 
	<p>Unpack the shelf(s).</p> <p>Pay attention to the back side of the shelf.</p> <p><u>Familiarize yourself with the air inlet opening.</u></p>

Doc. nr. <b>9124487</b>	Rev. <b>0</b>	Registration form. <b>Shelf mounting MD 35</b>	
----------------------------	------------------	---	---

	<p>Place shelf(s) in place, making sure the airflow opening of the shelf is aligned with the air outlet in the back of the unit.</p> <p>Support bracket left and right</p>
	<p>After placing the shelf(s) in place, make sure the back side of the shelf(s) is placed straight to the back of the unit without a gap.</p>
	<p>Also make sure each shelf is pressed down to fit in place.</p> <p>At the front of the shelf a tab should fit in a gap of the suspension bracket.</p> 
	<p>Now your shelf(s) are place in the correct position</p>