


Doc. nr. <b>9124712</b>	Rev. <b>0</b>	Registration form. <b>Placement of Legs on MDD</b>	
----------------------------	------------------	---	---

**Replace only one Leg at a time.**

**Never loosen two Legs/Wheels simultaneously.**

**Before starting this procedure, turn off the MDD and unplug the power connector from the wall outlet.**




Tools:



Philips screw driver, Wrench 8, Socket wrench 8

#### **Step 1**

Remove plinth set if applicable.

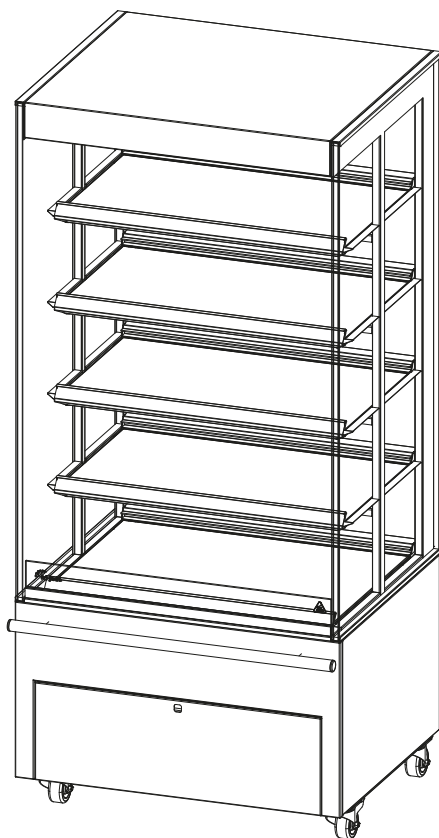


Doc. nr. <b>9124712</b>	Rev. <b>0</b>	Registration form. <b>Placement of Legs on MDD</b>	
----------------------------	------------------	---	---

### Step 3.

Lift MDD.

When a forklift is used, be careful not to damage the air grill underneath.

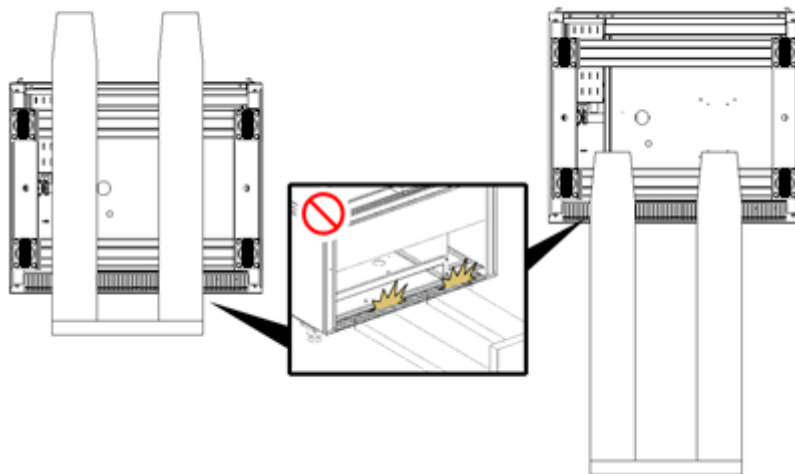

### Step 4.

When using a pallet truck;

First place sliding doors in lowest position

When lifting make sure not to exceed an angle of 10 degrees.


Before unscrewing the bolts, place a safety block underneath the unit.

**Replace only one Leg at a time!**


If applicable:

Before lifting, place sliding doors in lowest position

Do not lift MDD too High  
It may fall over!

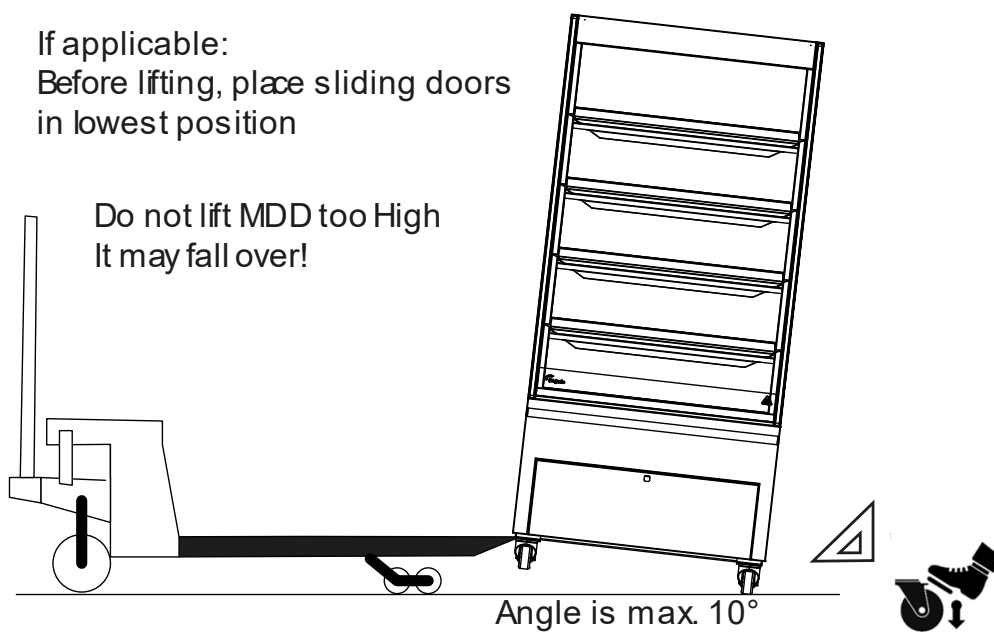


Doc. nr. <b>9124712</b>	Rev. <b>0</b>	Registration form. <b>Placement of Legs on MDD</b>	
----------------------------	------------------	---	---

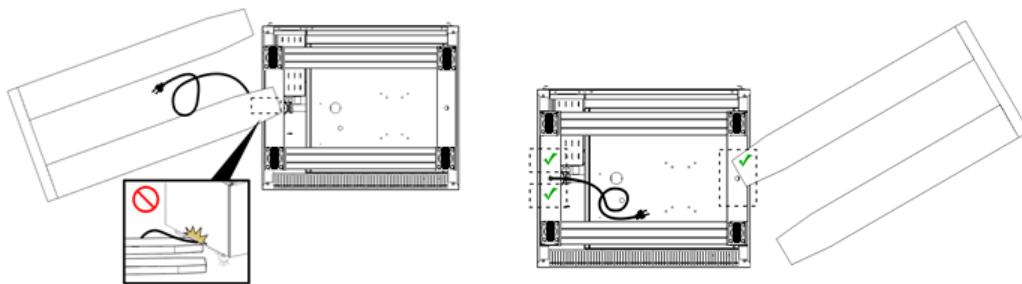

Be careful not to damage the power cable.


#### Step 4.

Remove four bolts to dismount the first wheel.

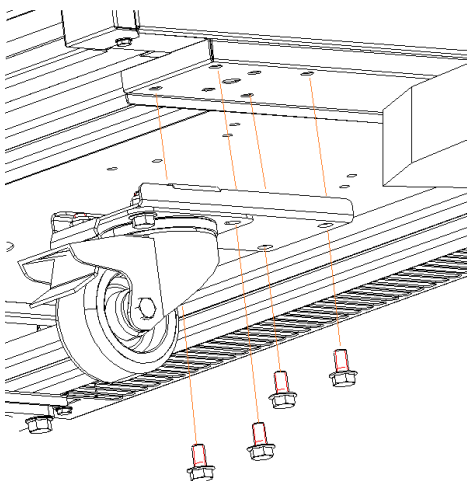

#### Step 5.

Mount first leg, on the place of the just removed wheel.  
Using 4 bolts. Mount first leg

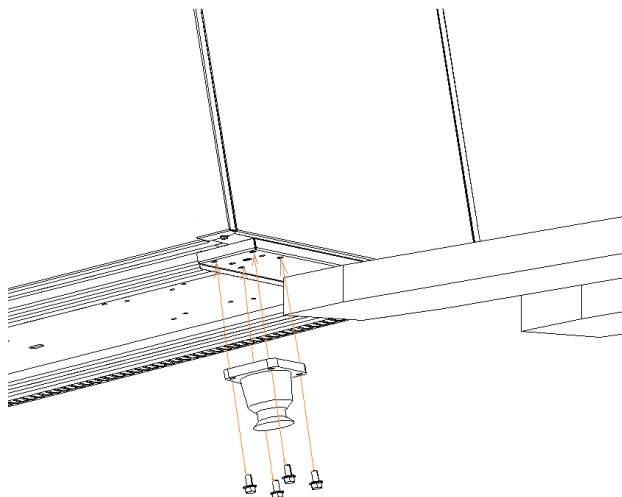

Doc. nr. <b>9124712</b>	Rev. <b>0</b>	Registration form. <b>Placement of Legs on MDD</b>	
----------------------------	------------------	---	---


**Step 6.**

Repeat step with second wheel and leg.

**Step 7.**

Carefully lower the MDD, and lift up at the other side.

Repeat step 4 and 5 for this side of the unit.

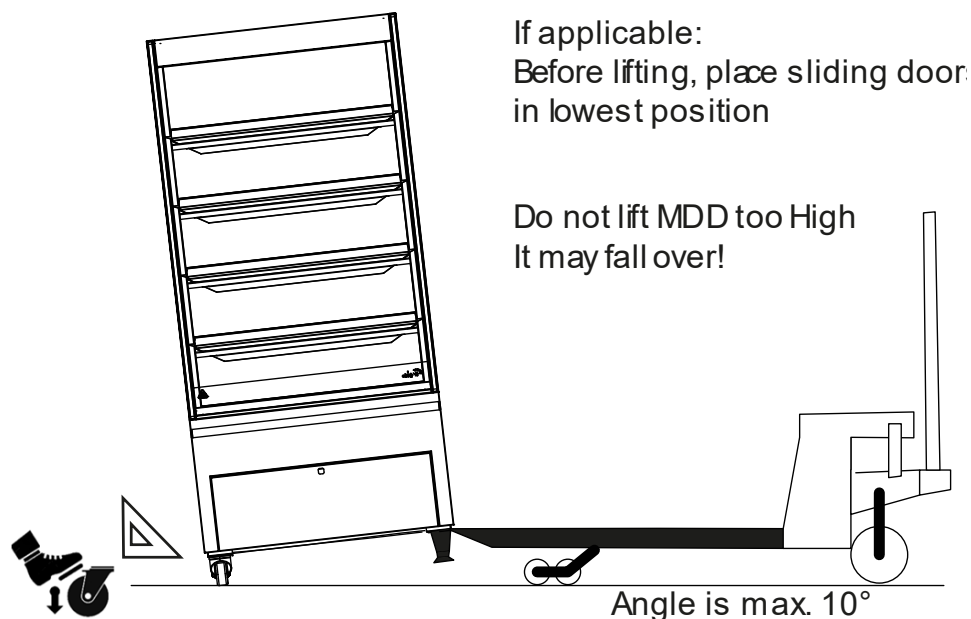

**Step 8.**

Carefully lower the MDD on his legs.

Dispose of the removed wheels, according to local regulations or keep for later usage.

Connect power plug again to the power wall outlet and turn unit on

