

SERVICE MANUAL

MULTI DECK SPACE SAVER MDS 86-2

Version

Pass through 2 level



MDS 86-2



MDS 86-2 with TDR 5 P

- NOTICE -

This manual is prepared for the use of trained Service Technicians and should not be used by those not properly qualified. If you have attended a training for this product, you may be qualified to perform all the procedures in this manual.

This manual is not intended to be all encompassing. If you have not attended training for this product, you should read, in its entirety, the repair procedure you wish to perform to determine if you have the necessary tools, instruments and skills required to perform the procedure. Procedures for which you do not have the necessary tools, instruments and skills should be performed by a trained technician.

Reproduction or other use of this Manual, without the express written consent of Fri-Jado, is prohibited.



EMPTY PAGE

Versions		
Version	Issue date dd/mm/yy	Remarks
07/2014	01/07/2014	First release.
04/2017	01/04/2017	Replacement of EKC to ERC thermostat. Update electric diagrams. Various small updates.

INDEX

Index	4
General technical data.....	5
Removal and replacement of parts	6
cover plate top backside	6
Cover plate bottom backside	6
Cover plate top	7
Magnets of top swingdoor	7
Magnets of bottom swingdoor.....	7
Display / illumination.....	8
Lamp holder on shelf.....	8
Lamp holder in top ceiling.....	8
Tumble switch on/off.....	9
Danfoss thermostat	9
Sensor of Danfoss thermostat.....	9
Contactor/electronic ballast/interference filter	10
Side glass	10
Swing door	11
Blower	11
Top plate of the shelf	12
Changing Danfoss EKC to ERC thermostat.....	13
Electrical tests and service procedures.....	14
Heating element test.....	14
PTC 1K Sensor test	14
Contactor and blower test	14
Adjusting Danfoss ERC 211 thermostat.....	15
Adjusting Danfoss ERC 211 thermostat (continued)	16
Error codes ERC 211	16
Danfoss ERC 211 settings.....	17
Adjusting Danfoss EKC 102A thermostat till serial number 100080607.....	18
Adjusting Danfoss EKC 102A thermostat (continued).....	19
Control locations MDS 86-2.....	20
Troubleshooting	21
Trouble shooting Multi Deck Space Saver MDS 86-2.....	21
Exploded views & Part lists	24
Multi Deck 86-2 backside	24
Multi Deck 86-2 frontside.....	26
Electrical diagrams	28
Circuit Diagram Multi Deck Space Saver 86-2	28
Circuit Diagram Multi Deck Space Saver 86-2 til lserial number 100080607.....	29

GENERAL TECHNICAL DATA

This manual covers the Multi Deck 86-2. This is a 2 level Hot Merchandiser cabinet. The cabinets comes in 1 size: 86 centimeter wide and 1144 mm high.

The combination with a stacked rotisserie comes in 3 versions:

- MDS 86-2 stacked with a TDR 5 P 2000 mm high. 2 separate connection cables.
- MDS 86-2 stacked with a TDR 5 M 2000 mm high. 2 separate connection cables.
- MDS 86-2 stacked with a TG 110 M 1862 mm high. 2 separate connection cables.

All of the information, illustrations and specifications contained in this manual are based on the latest product information available at the time of printing.

TECHNICAL DATA

Type	MDS 86 - 2	TDR 5 P / M	MDS 86-2 + TDR 5	TG 110 M	MDS 86-2 + TG 110
Power (W)	3200	6600	3200 + 6600	5200	3200 + 5200
Fuses needed with power connection, 1N~ 230 V, 50/60 Hz (1 phase with zero)	1x 16 A	—	1x 16 A	—	1x 16 A
Fuses needed with power connection, 3N~ 400/230 V, 50/60 Hz (3 phases with zero)	—	3x 16 A	3x 16 A	3x 16 A	3x 16 A
Fuses needed with power connection, 3~ 230 V, 50/60 Hz (3 phases without zero)	—	3x 20 A	3x 20 A	3x 16 A	3x 16 A
Standard plug from factory single pole	Two-pole earthed plug 16 A	—	Two-pole earthed plug 16 A	—	Two-pole earthed plug 16 A
Standard plug from factory 5- pole Acc IEC309 and CEE-form	—	16 A 3P+N+E	16 A 3P+N+E	16 A 3P+N+E	16 A 3P+N+E
Net weight (kg)	155	130	285	75	230
Gross weight (kg)	182	160		88	
Height (mm)	1144	910	2000	750	1862
Width (mm)	860	835	860	825	860
Depth (mm)	911	710	911	500	911


Tools

- Standard set of tools.
- Metric wrenches, sockets and hex socket key wrenches.
- Multi-meter and AC current clamp meter.
- Insulation value tester (Megger)
- Temperature tester.
- Field service grounding kit.

REMOVAL AND REPLACEMENT OF PARTS

WARNING: Disconnect the electrical power to the machine at the main circuit box. Place a tag on the circuit box indicating the circuit is being serviced.

COVER PLATE TOP BACKSIDE

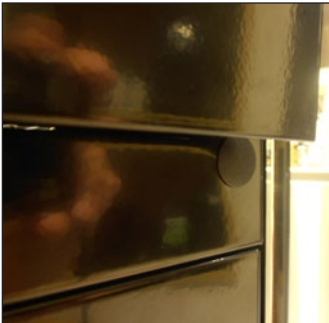

1. Remove the 2 plastic plugs on the backside that cover the screws.
2. Remove the 2 screws behind the plastic plugs.
3. Open the top swingdoor and reach inside to remove the 2 knurled screws on the top on the inside.
4. Lift the cover plate out.
5. Reverse the procedure to install.

Note: The plastic plugs can not be re-used, so you have to replace them (part nr. 9281039).



COVER PLATE BOTTOM BACKSIDE



1. Remove the plastic plugs on the back side that cover the screws.
2. Remove the screws on the top side of this panel.
3. Loosen the screws on the bottom side that secure the panel and remove the panel.
4. Reverse the procedure to install.

Note: The plastic plugs can not be re-used, so you have to replace them (part nr. 9281039).




COVER PLATE TOP



1. Remove the rubber rail profile on the top side.
2. Remove the cover plate top backside according prior procedure.
3. Remove the 2 screws on the top of the backside under the fat drip strip that secures the top plate and remove the top plate.
4. Reverse the procedure to install.

MAGNETS OF TOP SWINGDOOR

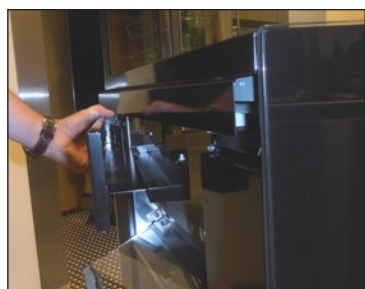

1. Remove the cover plate top backside according prior procedure.
2. Squeeze the flexible lip of the magnet and press the magnet out of the holder.
3. Reverse the procedure to install.


MAGNETS OF BOTTOM SWINGDOOR



1. Open the bottom swingdoor and remove the 3 screws (see arrow) under the cover profile of the swingdoor.
2. Remove the 2 plastic plugs of the cover plate on the top backside.
3. Loosen the 2 screws through the big holes and remove the profile.
4. Squeeze the flexible lip of the magnet and press the magnet out of the holder.
5. Reverse the procedure to install.


Note: The plastic plugs can not be re-used, so you have to replace them (part nr. 9281039).

DISPLAY / ILLUMINATION

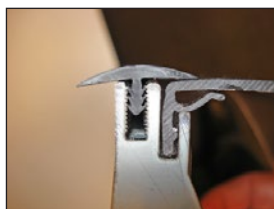

1. Remove the plastic rail profile on the top side.
2. Pull, with both hands, on the bottom side of the plastic cover to remove the cover out of the "click system". Remove the total length out of the click system.
3. Lift the top side out of the Aluminium rail and remove the display.
4. Replace lamp.
5. Reverse the procedure to install.

LAMP HOLDER ON SHELF

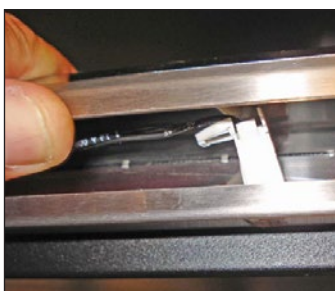

1. Remove the transparent price rail. Lift this up on the edge and remove this from the holder. Now slide the rail out to the side.
2. Remove the screws on top of the lamp holder.
3. Bend the lamp holder profile open. This is a special construction that enables you to open and close this profile.
4. Loosen the blocking clips on the sides of the lamp holder en lift the holder out.
5. Remove the wiring from the holder.
6. Reverse the procedure to install.



Note: If the lamp holder profile breaks, just screw it back on again.

LAMP HOLDER IN TOP CEILING




1. Remove the top cover according prior procedure.
2. Loosen the blocking clips on the sides of the lamp holder en lift the holder out.
3. Remove the wiring from the holder.
4. Reverse the procedure to install.

TUMBLE SWITCH ON/OFF

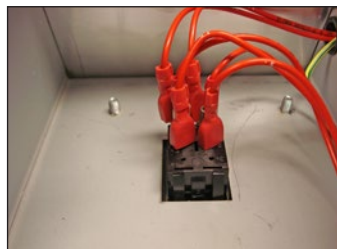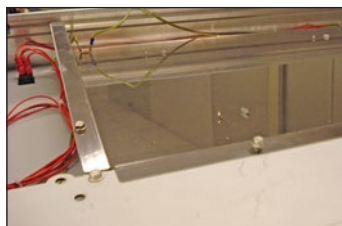

1. Remove the top cover according prior procedure.
2. Remove the wiring from the switch and remove the switch downwards by squeezing the clamps on both sides.
3. Reverse the procedure to install.



DANFOSS THERMOSTAT

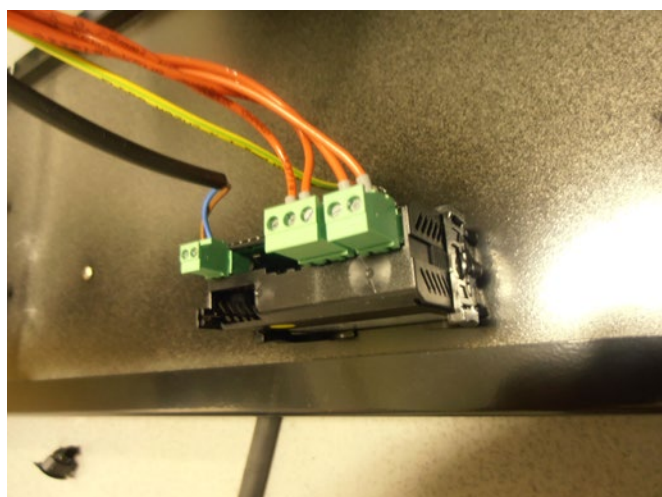

1. Remove the bottom plate on the backside according prior procedure.
2. Remove the wiring from the thermostat.
3. Loosen the blocking clips on the side of the thermostat and remove the thermostat.
4. Reverse the procedure to install.

Note: When changing the thermostat verify all parameters after installation. Start with parameter 07 by setting it to heating HE.

SENSOR OF DANFOSS THERMOSTAT


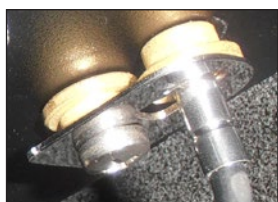
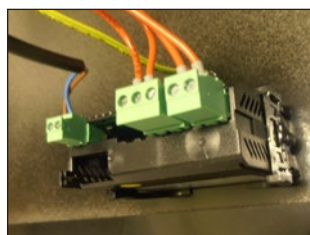


1. Remove the bottom plate on the backside according prior procedure.
2. Remove the wiring from the sensor on the Danfoss thermostat.
3. Remove the 2 screws that secure the bottom front panel and remove this panel.
4. Remove the screw that secures the holder of the sensor and remove the holder and brass spacers.
5. Remove the sensor out of the holder.
6. Reverse the procedure to install.

Note 1: The sensor is clamped on the holder with the top recess.

Note 2: Replace the 2 brass distance spacers between the holder and the bottom side of the shelf.

CONTACTOR/ELECTRONIC BALLAST/INTERFERENCE FILTER

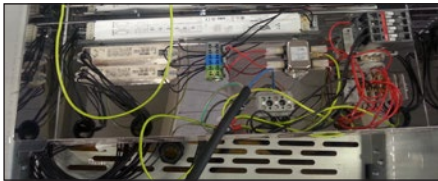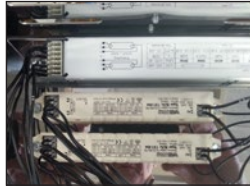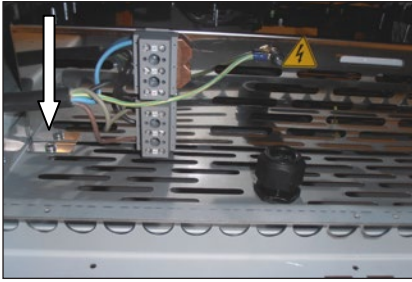



1. Remove the bottom front panel according prior procedure.
2. Remove the 2 screws that secure the electric connection box and lift out this box.
3. Remove the contactor from the rail and remove the wiring.
- 3a. Remove the screws of the ballast and remove the wiring.
- 3b. Remove the screws of the filter and remove the wiring.
4. Reverse the procedure to install.

SIDE GLASS




1. Remove the bottom backpanel, the bottom front panel and the top cover plate according prior procedures.
2. Remove the 3 bolts that secure the vertical rear panel and remove the panel.
3. Remove the bolts that secure the 4 brackets on the glass on the front (see arrows), back and top side and remove the glass.
4. Reverse the procedure to install.

Note: Replace the bumper on the new glass, if present.

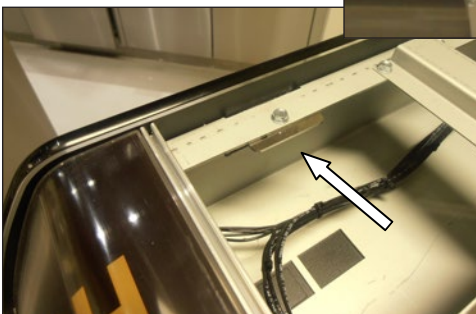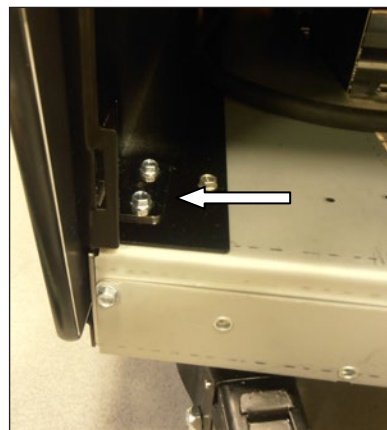

SWING DOOR

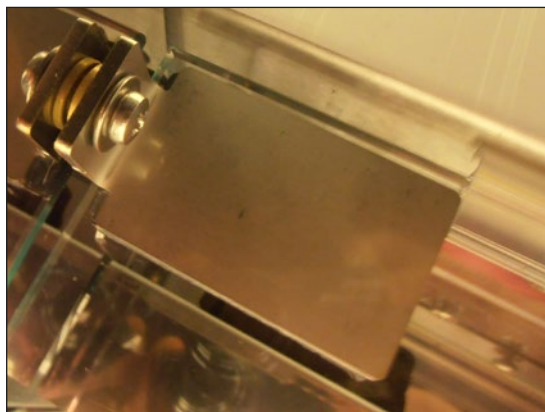


1. Open the swing door and remove the screws that secure the door hinges and remove the door.

Note 1: The doors are delivered as a total assembly with glass, closing profile, hinges and handle.



Note 2: The hinge is fixed with a screw M5x16 and a washer M5.

BLOWER

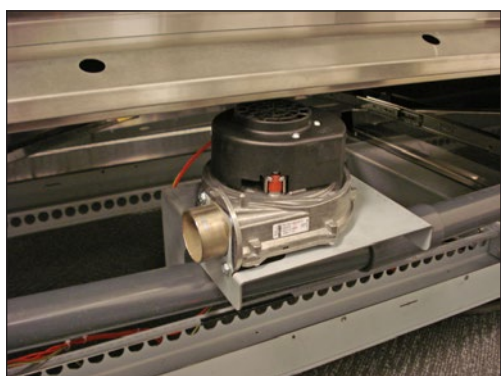

1. Remove the cover plate top on the backside, the cover plate bottom on the backside and the vertical rear panels on the backside according prior procedures.
2. Remove the bolts that secure the bottom clamp plate on the backside and remove the plates.
3. Remove the bolts that secure the base plate of the blower and remove this plate including the blower. Take care that the connections of the air tubes on the blower are loose.
4. Slide the upper tubes in the horizontal tee-joint as far as possible to the outside.
5. Pull the upper tee-joint towards yourself to loosen the joints and remove the tee-joint and the 2 horizontal tubes.
6. Lift the base plate with the blower outside the unit and remove the wiring of the blower.
7. Remove the bolts that secure the blower on the base plate and remove the blower.
8. Reverse the procedure to install.

TOP PLATE OF THE SHELF

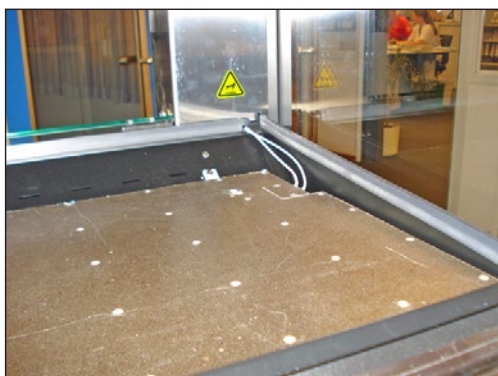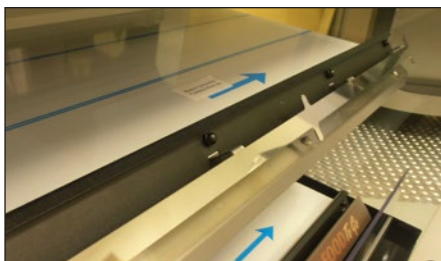


1. **(Bottom shelf only)** Remove the cover plate on the bottom backside according prior procedure.
2. Remove the 3 screws under the base profile.
3. Remove the 2 plastic plugs of the cover plate on the top backside.
4. Loosen the 2 screws through the big holes and remove the profile by lifting it up.
5. Remove the transparent price rail according prior procedure.
6. Remove the 4 plastic caps on the nuts on the front side of the shelf and remove the bolts and nuts.
7. Remove the 2 screws on the back side that secure the top plate of the shelf and remove the plate by lifting it up from the back and remove the plate to the front side.

Note: When replacing the plate make sure the rubber profiles are in place.

CHANGING DANFOSS EKC TO ERC THERMOSTAT

Instructions for exchanging Danfoss EKC to ERC thermostat

The wiring connection numbers 1-4-2-5-13-14 on the Danfoss EKC thermostat are different than the wiring connections 3L-2-4N-1-9-10 on the ERC thermostat. keep this in mind when you change the EKC for the ERC thermostat. See also the drawing below.

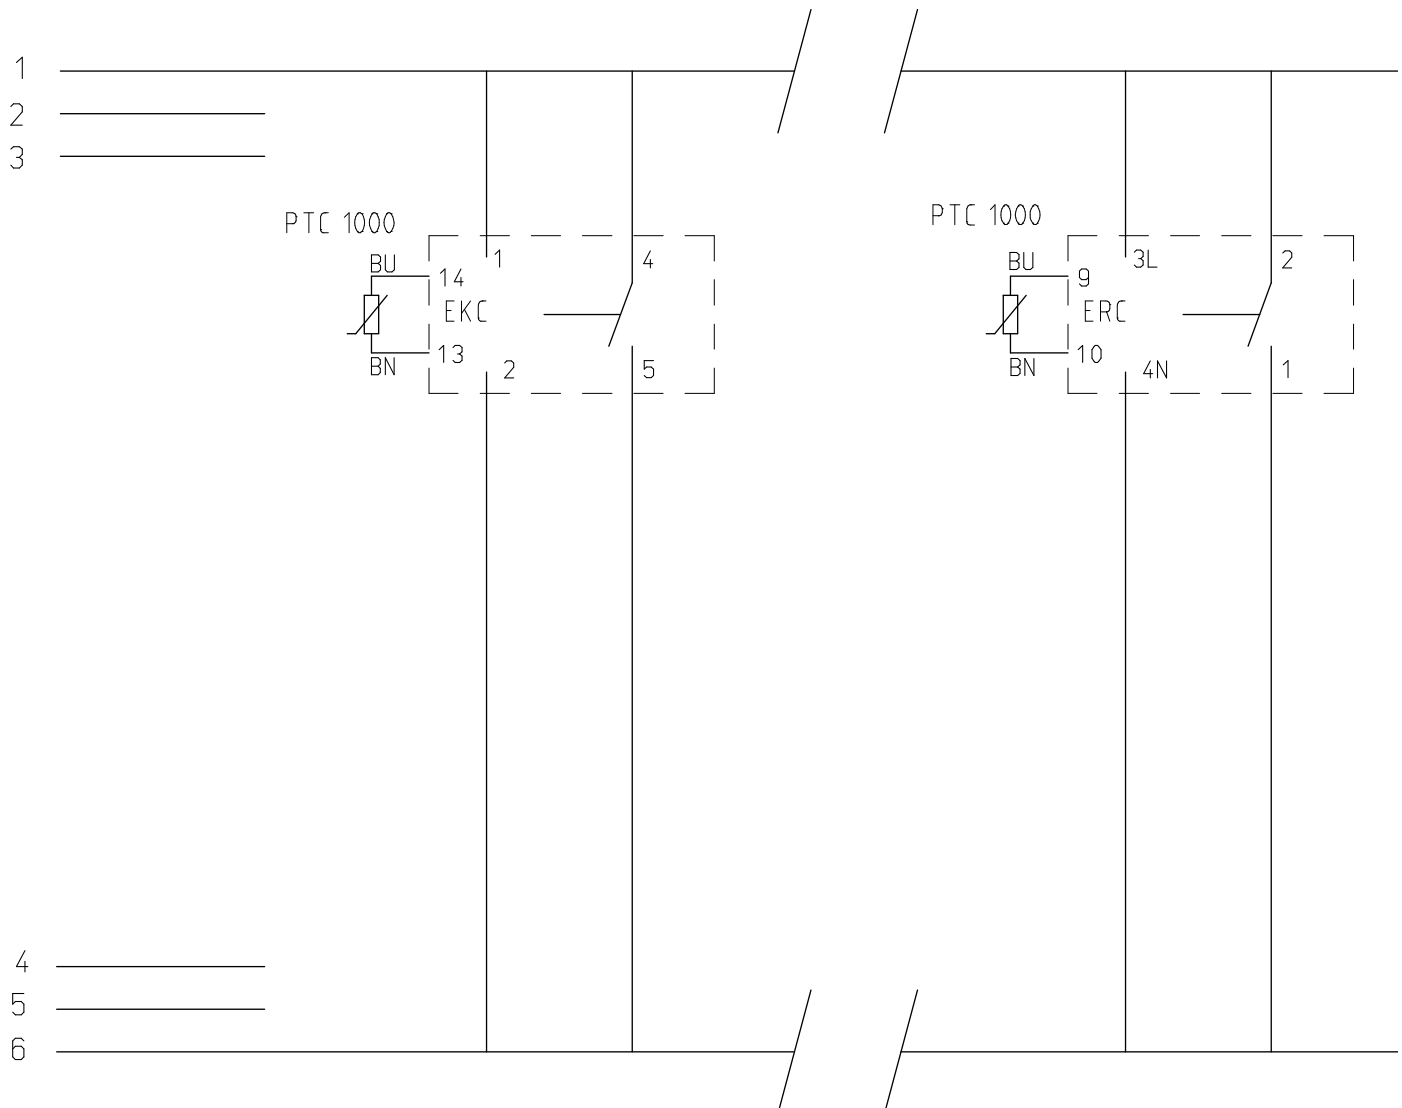

For adjusting instructions and parameter settings see electrical tests on pages 15 to 17.

ELECTRICAL TESTS AND SERVICE PROCEDURES

WARNING: Disconnect the electrical power to the machine at the main circuit box. Place a tag on the circuit box indicating the circuit is being serviced.

HEATING ELEMENT TEST

Note: When testing the resistance of the element remove the wiring from the connecting block.

Type	Wattage/Voltage	Resistance Ω -0% + 10%	Current A
MDS 86-2	600 / 230	88.2	2.6

PTC 1K SENSOR TEST

Temperature		Resistance
°F	°C	± 10 Ohms
60	16	930
70	21	970
80	27	1016
90	32	1056
100	38	1107
125	52	1227
150	65	1347
200	94	1636
250	121	1935

1. Remove the right side panel according prior procedure.
2. Remove the wiring from the sensor.
3. Connect a temperature sensor to the probe for comparison.
4. Test the probe with an Ohmmeter.

CONTACTOR AND BLOWER TEST

Note: When testing the resistance remove the wiring.

Type	Description	Voltage	Resistance
MD 3-4-5	Contactor	230 V	Resistance of coil (A1 - A2) ~ 525 Ω
MD 3-4-5	Blower See picture below	230 V	Between L-N ~3.5 M Ω





ADJUSTING DANFOSS ERC 211 THERMOSTAT

Adjusting Danfoss ERC211 thermostat




Changing temperature setpoint

Example screens


1. Press  to access setpoint mode	
2. Change value with  or 	
3. Press  to confirm	
When no key is pressed after last confirmation, the system goes back to normal operation after 10 seconds	

Programming menu


Example screens

1. Press  for 3 seconds to access the menu	
2. Scroll through parameter groups with  and 	
3. Select parameter group with 	
4. Scroll through parameter names with  and 	
5. Press  to read out the value	
6. Change value with  and 	
7. Press  to confirm	
8. Press  to select the next parameter and follow instruction 3 to 7	
Use  to go back in the parameter groups and once more to leave the programming menu	

ADJUSTING DANFOSS ERC 211 THERMOSTAT (CONTINUED)

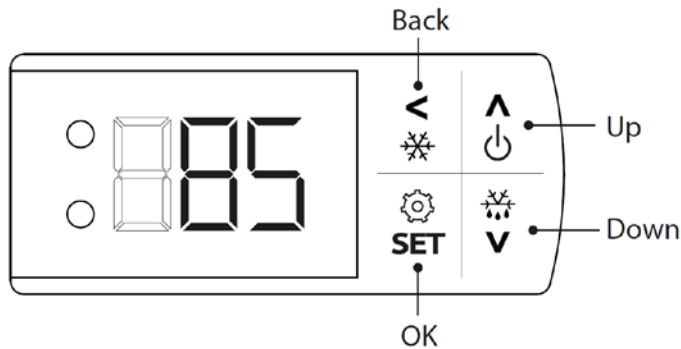

ERROR CODES ERC 211

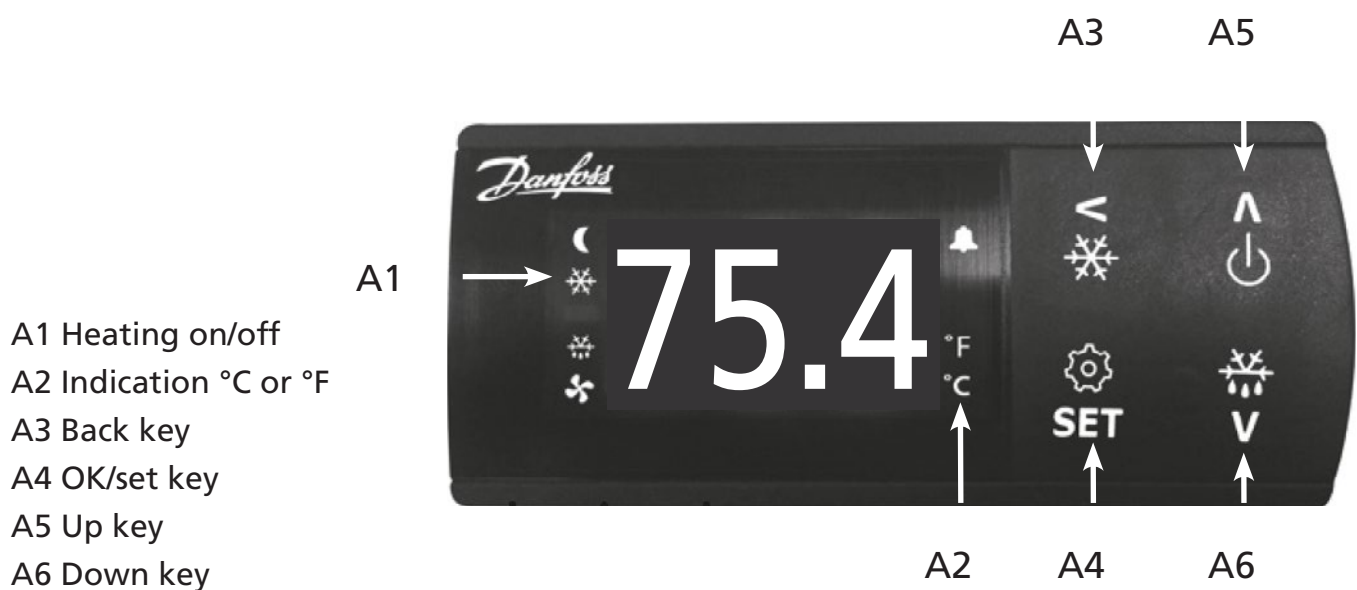

If the elements are switched on, the indicator lamp A1 will go on.

Error codes on display:

E29: PT sensor broken or wiring problem sensor.

A01: High temperature alarm.

A02: Low temperature alarm.

A99: High voltage alarm.

AA1: Low voltage alarm.

oFF: Main switch alarm. Check parameter r12.

Wrong temperature displayed: Wrong type of sensor selected. Check o06.

When reporting error codes the unit is switched in stand-by mode and cannot be used until the problem is resolved.


DANFOSS ERC 211 SETTINGS

Note! Change r05 first and r03 after!

r00	Temperature set point	<u>85</u>	°C
r01	Differential	<u>1</u>	K
r02	Min set point limitation	<u>0</u>	°C
r03	Max set point limitation	<u>99</u>	°C
r04	Display offset	0	°C
r05	Display unit (°C/°F)	°C	
r09	Calibration of Sair	<u>-11.5</u>	°C
r12	Main switch	1	
r13	Night set back	0	
r40	Thermostat reference displacement	0	
r96	Pull-down duration	0	
r97	Pull-down limit temperature	0	
A03	Delay for temperature alarm (normal conditions)	30	min
A12	Delay for temperature alarm (pull down/start-up/defrost)	60	min
A13	High temperature alarm limit	100	°C
A14	Low temperature alarm limit	-30	°C
A27	DI1 delay	30	min
A37	Condenser high alarm limit	80	°C
A54	Condenser high block limit	85	°C
A72	Voltage protection enable	no	
A73	Minimum cut-in voltage	0	V
A74	Minimum cut-out voltage	0	V
A75	Maximum voltage	270	V
d01	Defrost method (no=no defrost, nAt=natural)	<u>no</u>	
d02	Defrost stop temperature	6	°C
d03	Defrost Interval	8	hr.
d04	Max. defrost time	30	min
d05	Defrost delay at power up	0	min
d06	Drip delay	0	min

d10	Defrost stop sensor (non=time, Air=Sair)	non	
d18	Compressor accumulated	0	hr.
d30	Defrost delay after pull-down	0	min
c01	Compressor minimum ON time	0	min
c02	Compressor minimum OFF-time	<u>0</u>	min
c04	Compressor OFF delay	0	sec
c70	Zero crossing selection	yES	
o01	Delay of outputs	<u>0</u>	sec
o02	DI1 configuration	oFF	
o03	Serial address	0	
o05	Password	no	
o06	Sensor type selection (n5=NTC5 K, n10=NTC10 K, Ptc=PTC, Pt1=Pt1000)	<u>Ptc</u>	
o07	Cooling/heating (rE=refrigeration / Ht=heat)	<u>Ht</u>	
o15	Display resolution (°C)	0.1	
o23	Relay counter	0	
o61	Predefined applications	AP0	
o67	Save settings as factory	no	
o91	Display at defrost	d	
P73	DI1 input polarity	no	
P76	Keyboard lock enable	no	
u01	Air temperature (Sair)	-	°C
u02	Read the present regulation refer- ence	-	
u10	DI1 input	-	
u13	Status of night operation	-	
u58	Compressor relay status	-	-
u80	Firmware version readout	-	

ADJUSTING DANFOSS EKC 102A THERMOSTAT TILL SERIAL NUMBER 100080607

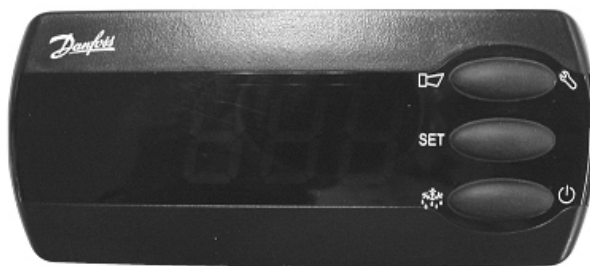

Note: In order to adjust the thermostat, first remove the thermostat according prior procedure.

Changing set point

1. Press the middle button until the temperature value is shown.
2. Change value with upper or lower button.
3. Press the middle button to confirm.

Setting internal parameters

1. Press the upper button for 3 seconds. In display the first parameter appears (ro1).
2. Press the middle button to read out value.
3. Change value with upper or lower button.
4. Press the middle button to confirm.
5. Press the lower button for the next parameter. Follow instructions 2 to 4.

When no key is pressed after last confirmation, system goes back to normal operation mode after 20 seconds.

Replacing of thermostat

When you install a new thermostat, then always change parameter r05 first to 0 (°C) and change parameter o07 to HE. Otherwise some other parameters cannot be changed to the desired value. Otherwise some other parameters cannot be changed to the desired value. You can run through the parameters with the up or down keys, once you are inside the parameter settings.

Options

1. Return to factory settings. Turn the power off. Press and hold the upper and lower button and switch the power on at the same time.
2. Actual temperature of sensor 1 (Thermostat). Press up key shortly 2 times.

Error codes on display

E1: Fault in controller.

E29: Cabinet sensor broken or wiring problem sensor.

ADJUSTING DANFOSS EKC 102A THERMOSTAT (CONTINUED)

Parameters Danfoss EKC 102A thermostat

			MDS 86-2
	Setpoint	°C	85
r01	Differential	°C	1
r02	Higher setpoint limit	°C	99
r03	Lower setpoint limit	°C	0
r04	Off-set temperature indication	°C	0
r05	Temperature unit (°C / °F)	°C	°C
r09	Correction of signal from air output	°C	-5
r12	Start / stop of temperature control		1
c01	Minimum "ON" time compressor	min	0
c02	Minimum "OFF" time compressor	min	0
c30	Reversed function of relay contact		OFF
d01	Defrost method (0 = none)		0
d02	Defrost end temperature	°C	6
d03	Defrost interval	hour	8
d04	Maximum defrost time	min	45
d05	"ON" delay after defrost	min	0
d10	Defrost sensor (0=time, 1=air)		0
d13	Defrost at start up		no
o01	Output delay after start up	sec	0
o05	Access code all settings		0
o06	Sensor type		ptc
o07	Warm (HE) / cold (rE)		HE
o15	Step value display (yes = 0.5°C / no = 1°C)		no
o67	Store current parameter as factory default		OFF
u58	Status relay 1		-

Note: r09 is a compensation when using a long sensor cable. That means that the sensor registrates/works actually 5° higher then the setpoint. So temp. regulation is in fact on 85 + 5.


CONTROL LOCATIONS MDS 86-2



on/off switch

On the front side.

operation panel TDR P

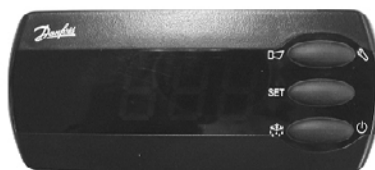

thermostat EKC 211 or EKC 102A (till serial nr. 100080607)

TROUBLESHOOTING

TROUBLE SHOOTING MULTI DECK SPACE SAVER MDS 86-2

Symptom	Possible causes
No power to cabinet controls.	1. Main breaker open. 2. Wiring loose.
Main fuse or breaker blows.	1. Wiring incorrectly. 2. Heating element shorted. 3. Blower shorted. 4. Wiring shorted.
Illumination does not work.	1. Lamp malfunction. 2. Tumble switch malfunction. 3. Electronic ballast malfunction. 4. Wiring loose. 5. Wiring in faston broken.
No heating.	1. Heating element malfunction. 2. Relay K1 malfunction. 3. Wiring loose. 4. Thermostat malfunction. 5. Sensor malfunction. 6. Sensor wiring loose.
Unit does not reach desired temperature.	1. Heating element(s) malfunction. 2. Strong air current along the unit. 3. Burned contact on contactor K1. 4. Air leak in PVC air flow system. 5. Sensor malfunction. 6. Blower malfunction.
No indication on electronic thermostat.	1. Electronic thermostat malfunction. 2. Wiring loose.
Blower motor does not run.	1. Wiring loose. 2. Motor inoperative.

This is an analytic description for servicing and repairing all major parts of the Multi Deck 60, 100 and 120 - 3 and 5 level. It consists of 4 basic steps to recognize and solve the problems:


1. Symptoms.
2. Possible causes.
3. Solving of the problem: checking/action.
4. Replacing of parts and testing:
 - a. Replacing is described in this service manual.
 - b. For testing see control locations on page 16 of this manual.

Description of part	Symptoms	Possible causes	Solving: checking / action
Contactor	Contactor does not come in.	Wiring. Coil malfunction. Contact burned.	Check the wiring. Check resistance of coil. This should be $\pm 525\Omega$. Check the contacts.
Heating element	The cabinet is not reaching the adjusted temperature	Wiring. Element malfunction.	Check the wiring. Check the power on the element. Check current with AC current tester. See table on page 14.
Tumble switch	Light and heating does not switch on	Wiring. Contact burned.	Check the wiring. Check the voltage on "in"- and "output".
Electronic ballast	Light does not switch on	Wiring. Ballast malfunction.	Check the wiring. Replace ballast.
lamp(s)	Light does not switch on	Wiring. Lamp(s) broken.	Check the wiring. Replace lamp(s).
Electronic thermostat	Display does not light up The cabinet is not reaching the adjusted temperature or does not heat up at all	Wiring. Loose sensor. Thermostat malfunction. Thermostat settings.	Check the wiring. Check sensor. Replace thermostat. Check parameters.
PTC 1000 sensor	The cabinet is not reaching the adjusted temperature or does not heat up at all The cabinet becomes too hot	Broken sensor. Loose sensor. Broken sensor. Sensor shorted.	Replace sensor. Check wiring. Replace sensor. Check wiring.
Blower heating system	Blower doesn't run Main fuse burned	Wiring. Cooling. Short circuit in coil to earth.	Check wiring. Check voltage on blower. Check cooling of motor. Check if unit is close to another heat source. Check insulation value of coil with a Megger on max. 500V Minimum value is $0.5M\Omega$

EMPTY PAGE


EXPLODED VIEWS & PART LISTS

MULTI DECK 86-2 BACKSIDE

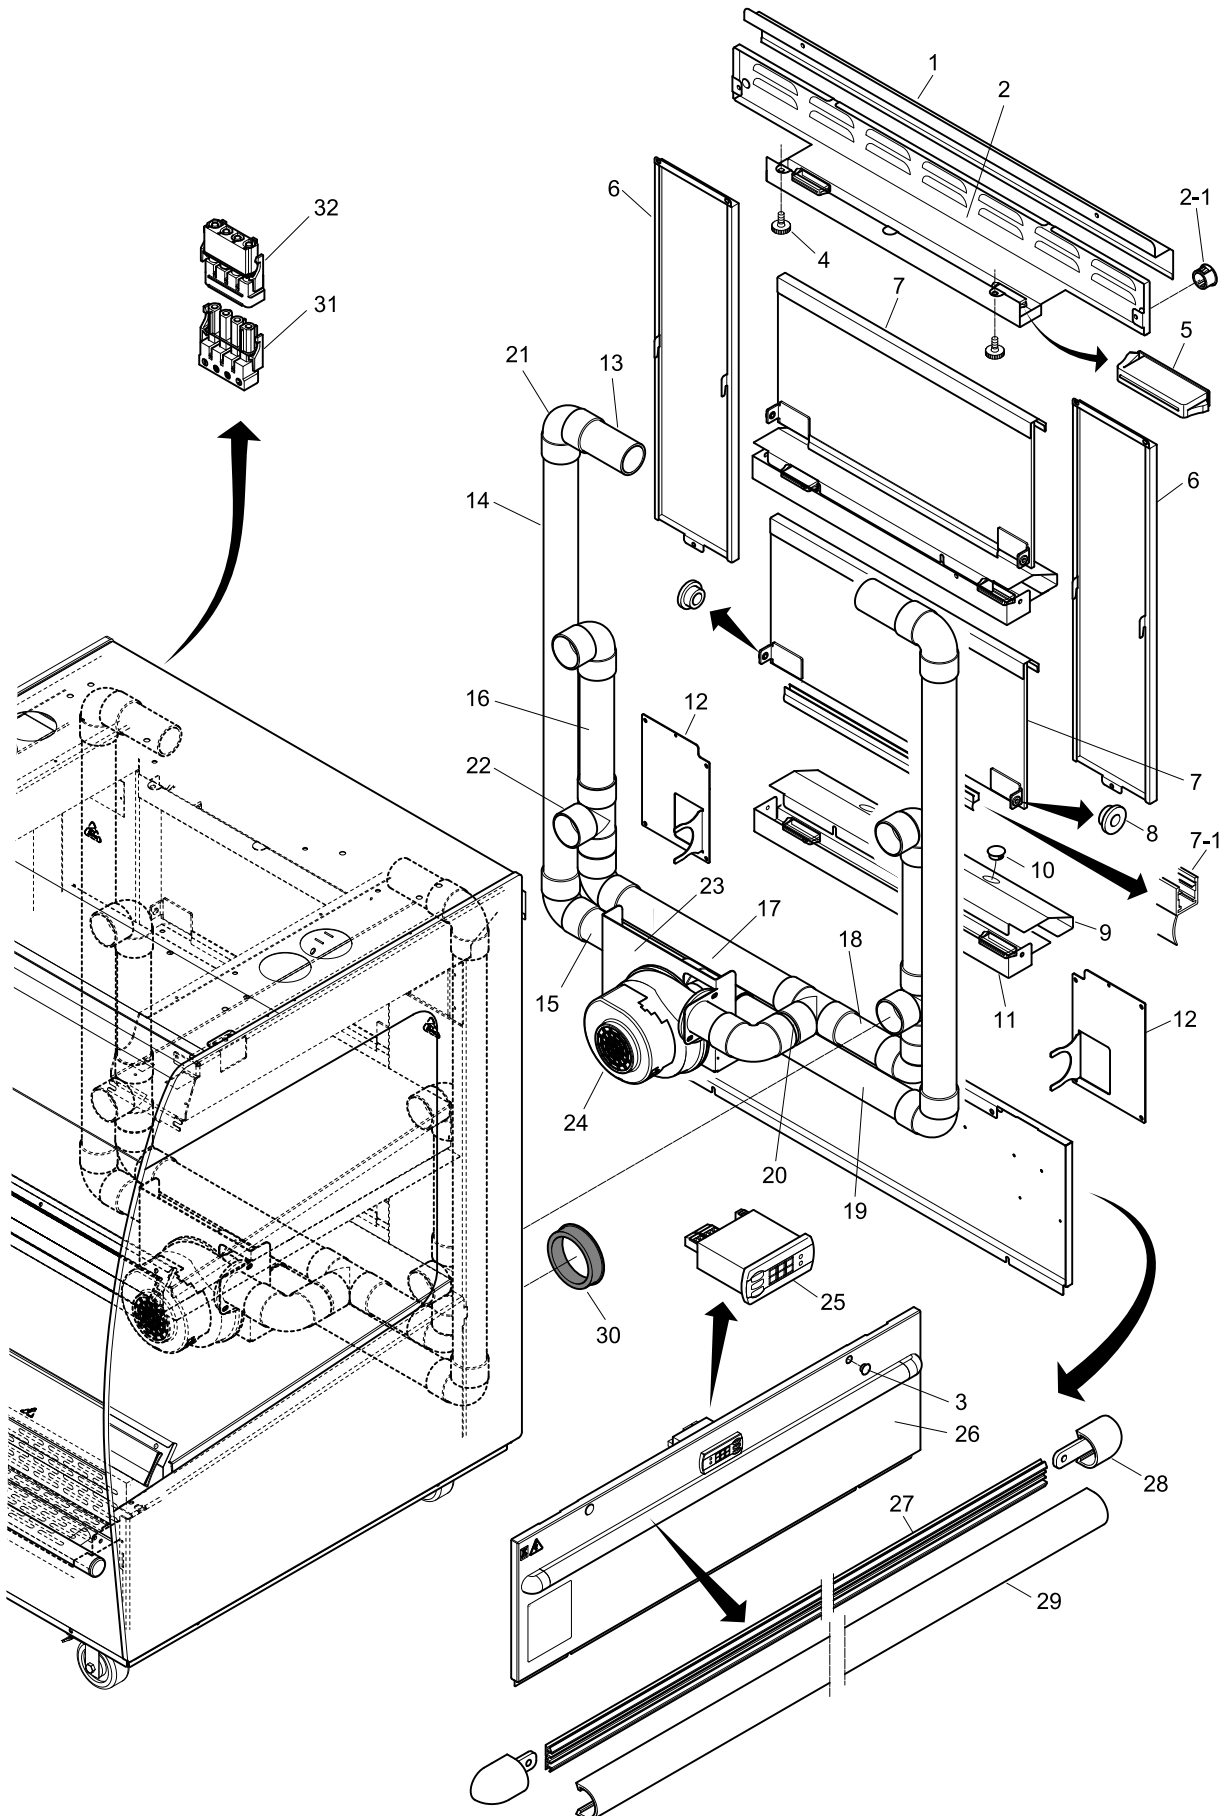

Item	Part number	Qty	Description
1	9226374	1	Fat drip strip
2	92273245	1	Cover plate back top 86
2-1	9281039	2	Sealing plug ø14,3 mm black
3	9281039	2	Sealing plug ø14,3 mm black
4	4280560	2	Screw knurled
5	3701025	4	Magnetic lock type 200
6	9226220	2	Panel column 2
7	9220322	2	Ass. flap door 86
7-1	9221056	0.4 mtr	Profile sealing, with side lip 180
8	0602072	4	Collar bearing 6/10 x 6 brass
9	9227319	2	Cover plate flap door 86
10	9172419	4	Plug blind, ø25.1mm hole ø20,6 mm
11	9227320	2	Support flap door 86
12	9226237	2	Bracket back panel bottom
13	9223250	2	Suction tube L= 113 mm
14	9223292	2	Suction tube 2L L= 790 mm
15	9223238	1	Tube suction bottom left
16	9223293	2	Tube inlet 2 level L= 250 mm
17	9223236	1	Tube exhaust bottom L= 398 mm
18	9223308	1	Tube suction L= 140 mm
19	9223297	1	Tube suction bottom right
20	9223241	1	Tube connection L= 60 mm
21	9281032	9	Elbow 90° 50 mm (F-F)
22	9281033	4	PVC tee 50 mm (F-F-F)
23	9220511	1	Ass support fan
24	9281034	1	Radial fan 230 V 50/60 Hz RG128/1300-3612
25	92211095	1	Thermostat ERC 211
26	9227325	1	Cover plate back bottom 86
27	9223094	1	Bumper basic profile 86
28	9221066	2	End cap black
29	9223095	1	Bumper cover profile 86 L= 748 mm
30	9281021	1	Tule feedthrough
31	9221036	3	Plug 4-pole NAS 41 W
32	9221037	3	Socket 4-pole NAS 42 WH


MULTI DECK 86-2 FRONTSIDE

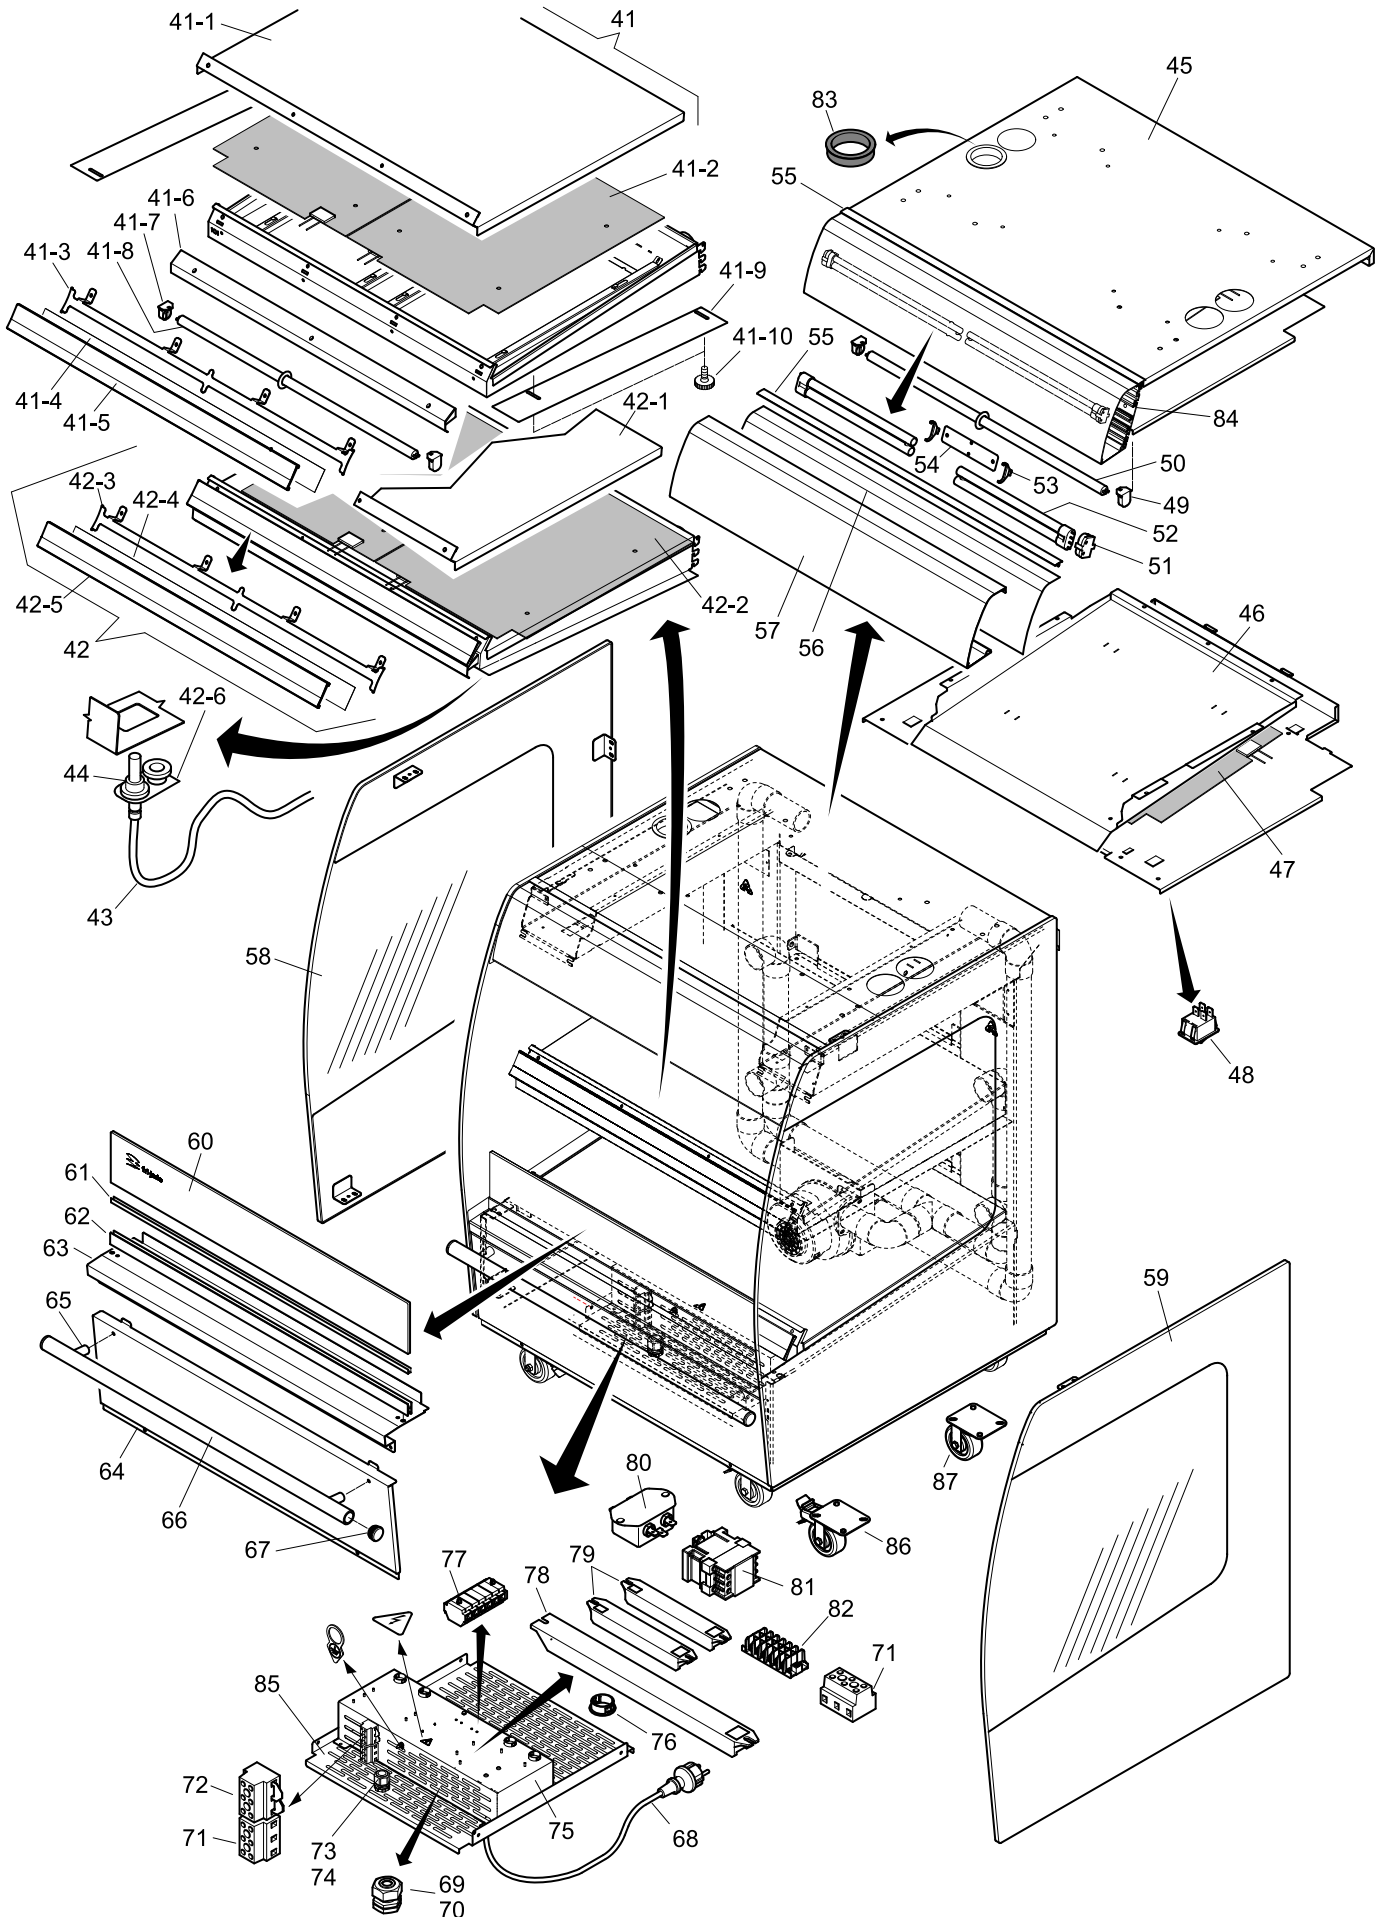


Item	Part number	Qty	Description	Item	Part number	Qty	Description
41	9220317	1	Ass. shelf 86	66	9223274	1	Bumper tube 86
41-1	9227402	1	Top shelf 86	67	2103209	2	Round ribbed insert ø30mm black
41-2	9222402	2	Heating element 600 W 230 V	68	9091383	1	Power cord length 3 m black
41-3	9227355	1	Support pricerail 86	69	9261022	1	Cable gland M25
41-4	9222522	1	Fotoprint Hot 86	70	9261023	1	Nut for cable gland
41-5	9223268	1	Pricerail 86	71	9044564	2	Terminal block G10/3 1-2-3, polyamide
41-6	9227321	1	Armature 86	72	9044572	1	Terminal block G10/3 4-5-6, polyamide
41-7	9221025	2	Lamp base G5 piercing	73	9222076	1	Strain relief M20
41-8	9271000	1	Tube light 5 14W 830 foodsave	74	9222077	1	Nut for cable gland
41-9	9226238	2	Strip air blocking	75	9227360	1	Box electricity
41-10	4280560	4	Screw knurled	76	9070840	4	Grommet SB-1093-15 black polyamide
42	9220311	1	Ass. shelf bottom 86	77	8072071	1	Terminal block Wago 3x (2x4) GY/BU/GN.YE
42-1	9227402	1	Top shelf 86	78	9221014	1	Ballast ELVSA 2x36 W
42-2	9222402	2	Heating element 600 W 230 V	79	9221029	2	Ballast 14/21 W 230V 50/60Hz
42-3	9227355	1	Support pricerail 86	80	9221013	1	Suppression filter
42-4	9222522	1	Fotoprint Hot 86	81	3500069	1	Contacteur ABB A-09-40-00 230V
42-5	9223268	1	Pricerail 86	82	9151010	1	Terminal block 6-pole OK501-6 PVC
42-6	9224718	1	Holder sensor, thermostat	83	9281021	1	Tule feedthrough
43	9221011	1	Sensor PTC 1000	84	9223281	1	Base profile top light 86
44	0602072	2	Collar bearing 6/10 x 6 brass	85	9227316	1	Support plate drawer 86
45	9227350	1	Cover plate top 86	86	9172065	2	Swivel castor LPHD 80KM RO
46	9227351	1	Cover plate element 86	87	9172066	2	Swivel castor with brake, LHCD 80KM RO SP TS
47	9222402	1	Heating element 600 W 230 V				
48	9181008	1	Switch black 1-0 250 volt 22 x 30				
49	9221025	2	Lamp base G5 piercing				
50	9271000	1	Tube light 5 14W 830 foodsave				
51	9221030	2	Lamp holder 2G11				
52	9221065	2	Lamp PLL 4-pins 24W				
53	9222210	2	Support lamp PLL				
54	9224721	1	Mounting plate lamp support PLL				
55	9223284	1	T-profile 86				
56	9222521	1	Slide top light				
57	9223277	1	Cover profile armature				
58	92200655	1	Ass. glued side glass left				
59	92200645	1	Ass. glued side glass, right				
60	9222516	1	Childguard 86				
61	9221012	0,8 mtr	Plastic profile				
62	9223261	1	Childguard holder 86				
63	9227354	1	Cover plate drawer top 86				
64	9227317	1	Front 86				
65	9293010	2	Spacer, handle				

ELECTRICAL DIAGRAMS

CIRCUIT DIAGRAM MULTI DECK SPACE SAVER 86-2

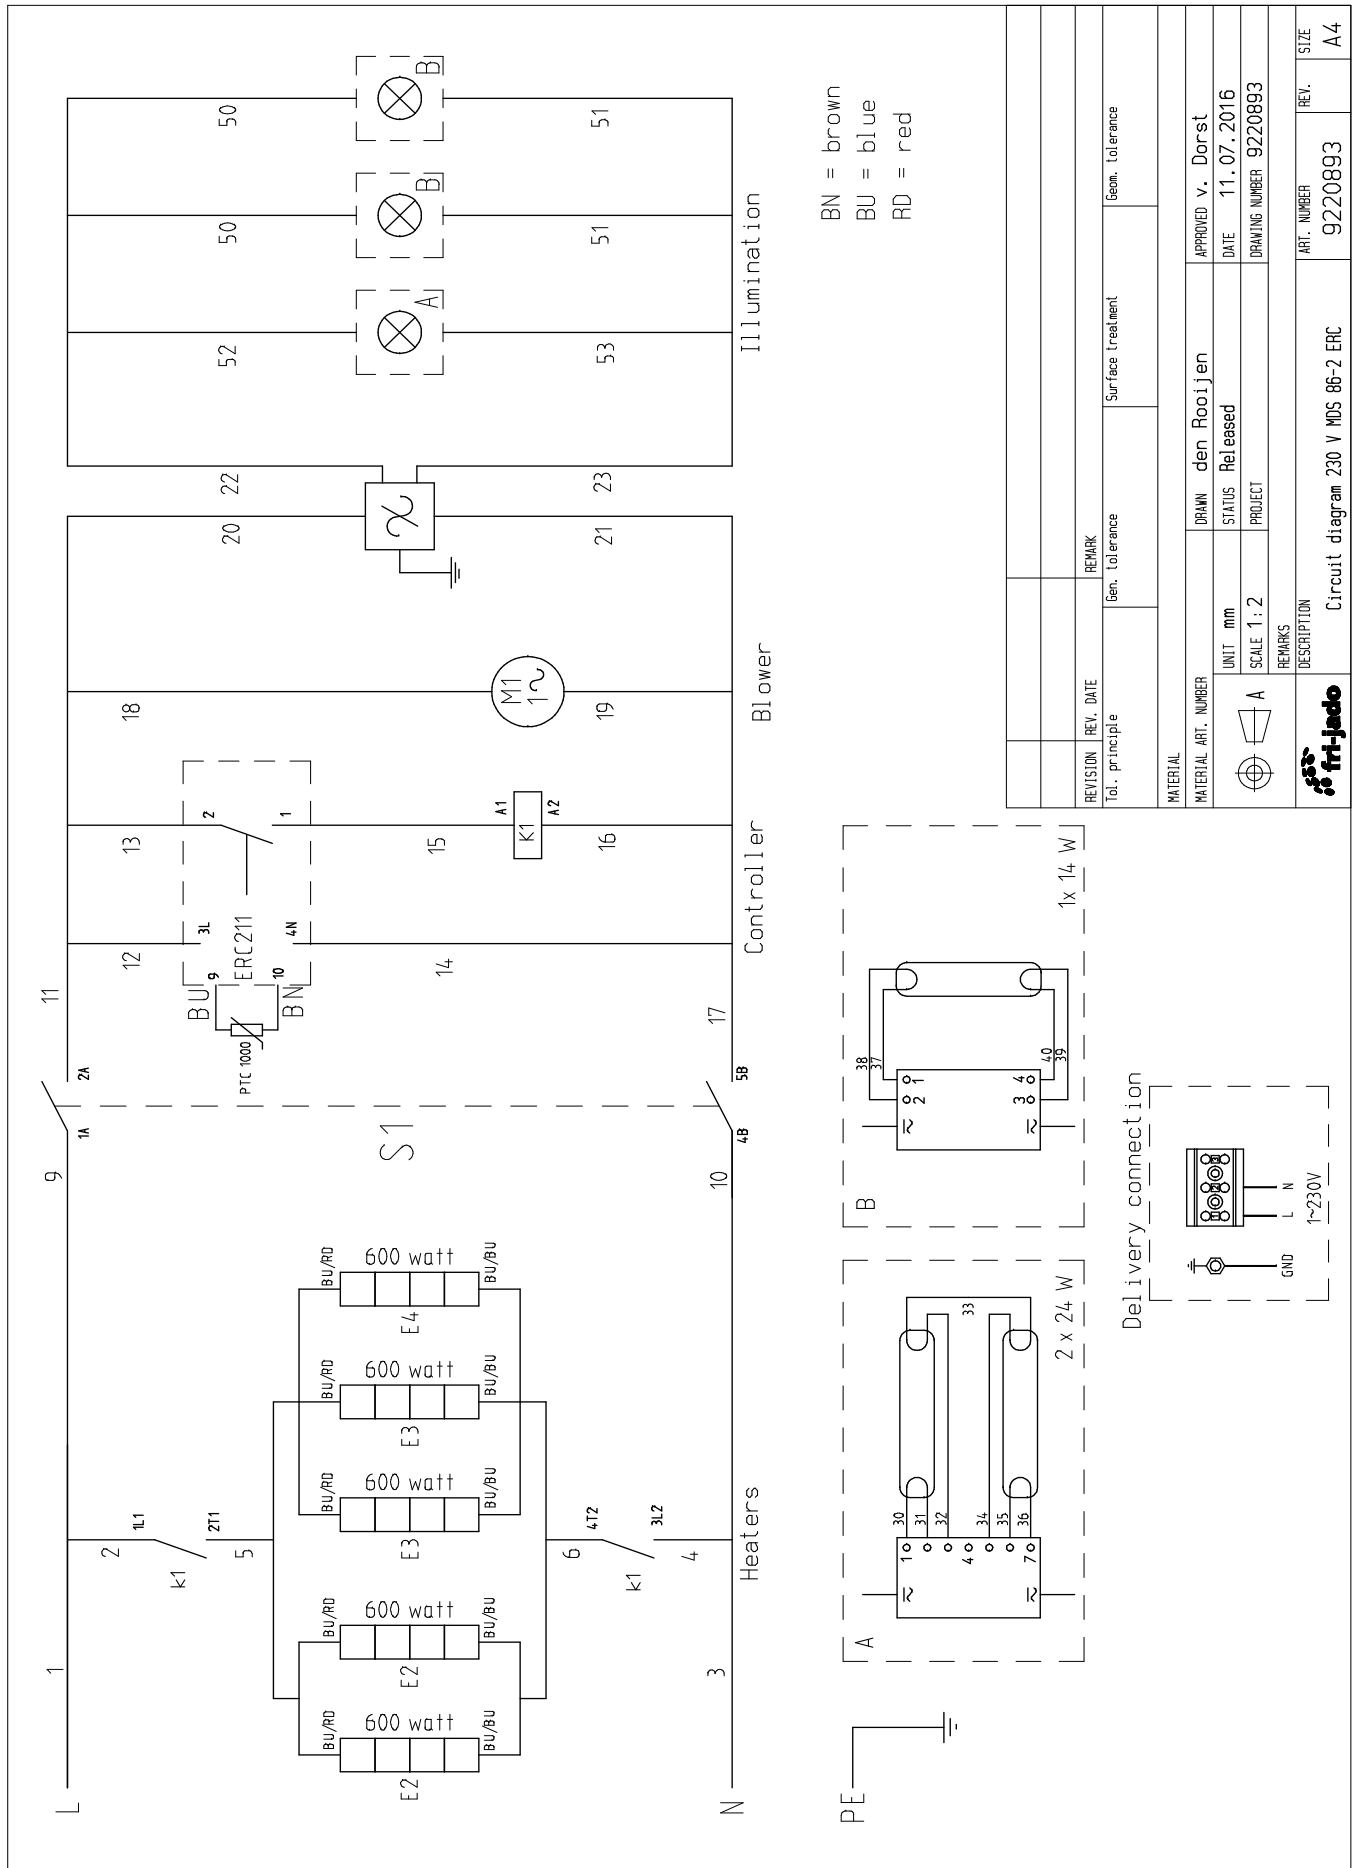

Page 29

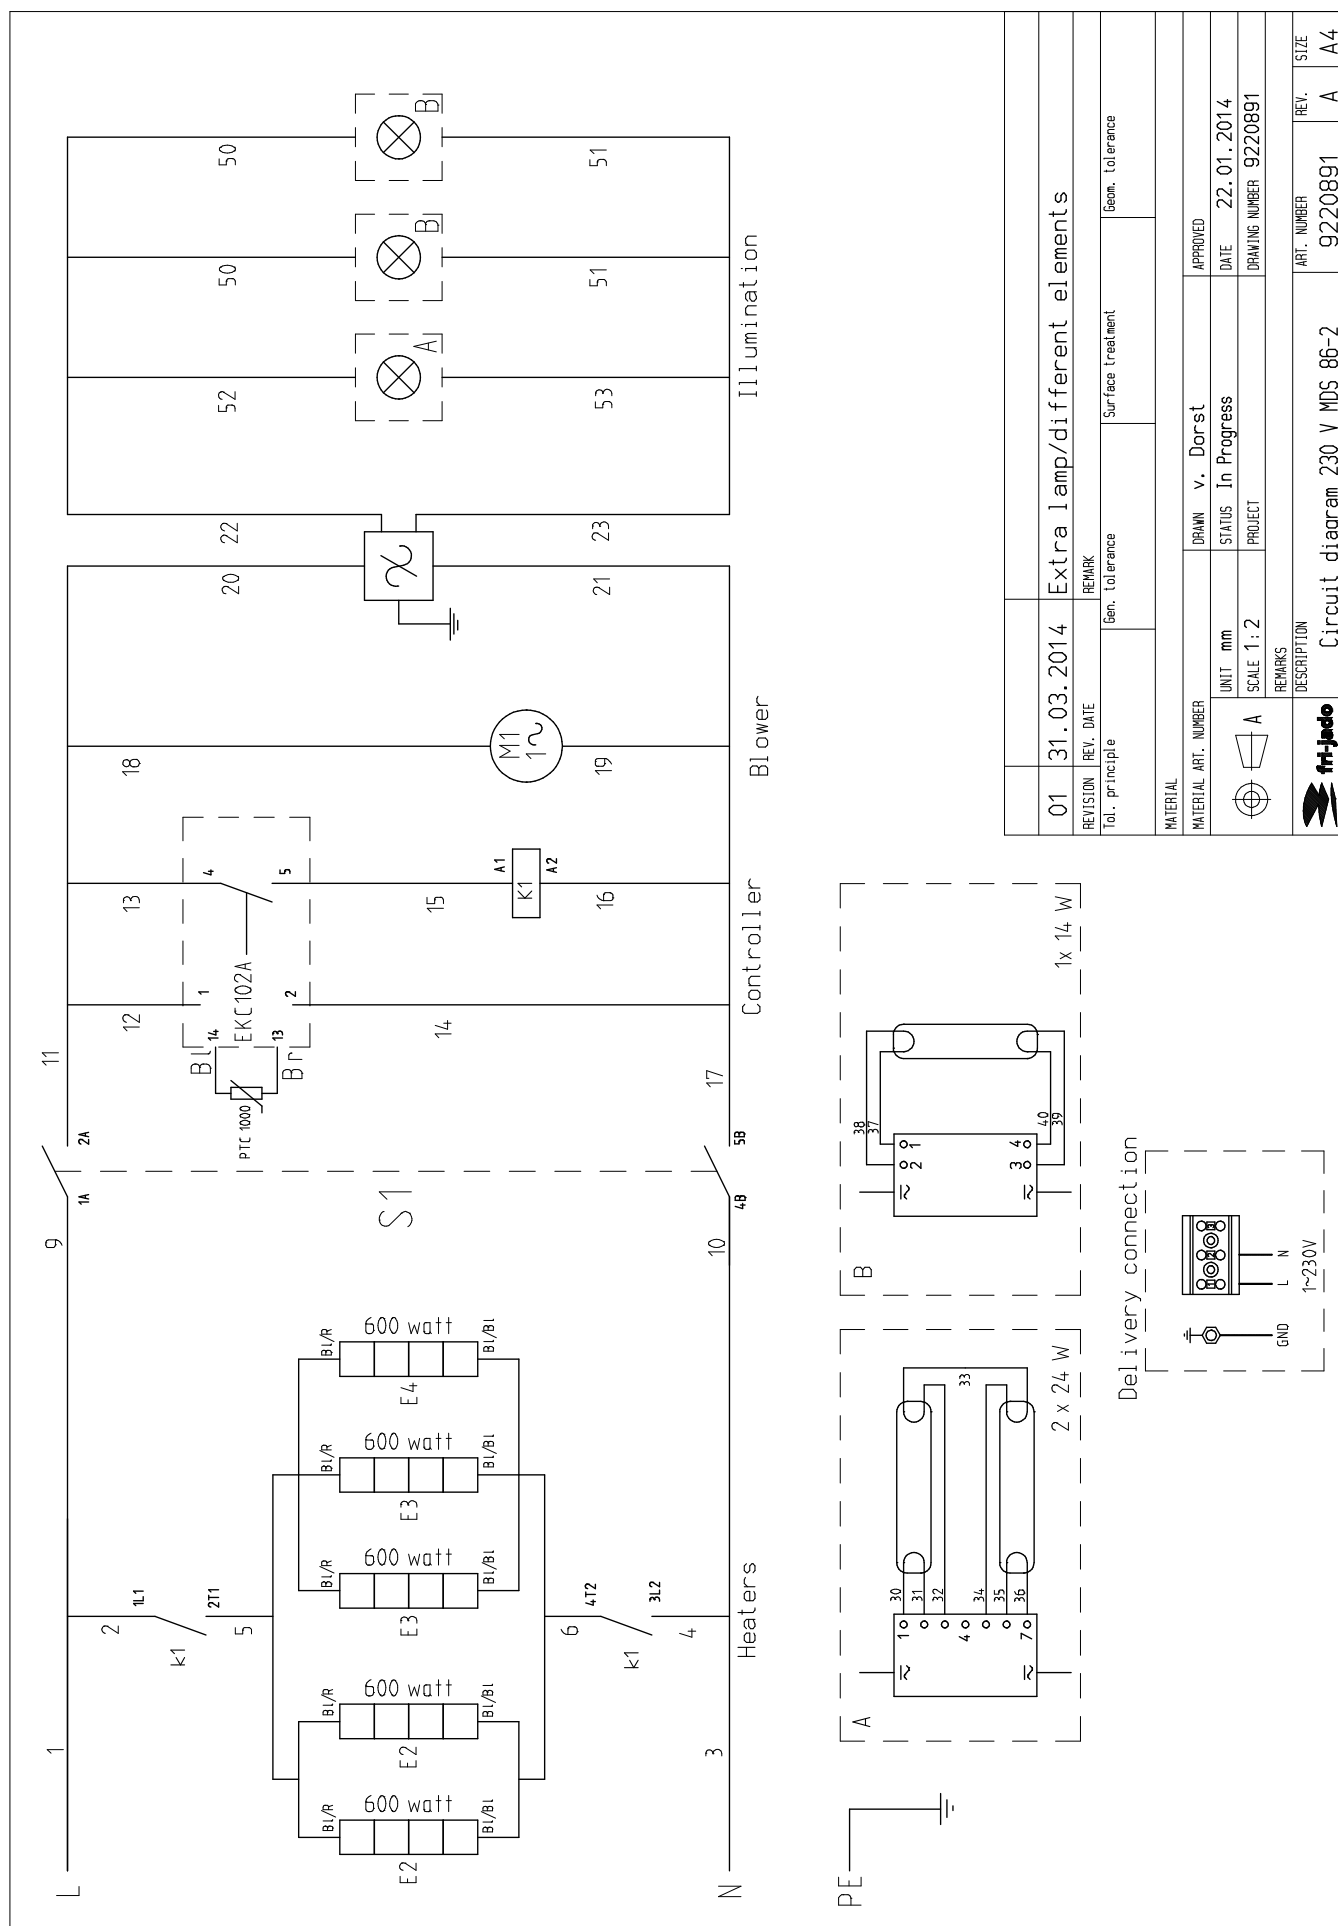

EMPTY PAGE

EMPTY PAGE

